


Part 2


STANDING YOUR WALLS

The following steps show how to stand and secure your walls for a 10' x 10' shed.


These instructions are by default with the door on the 10' gable wall.

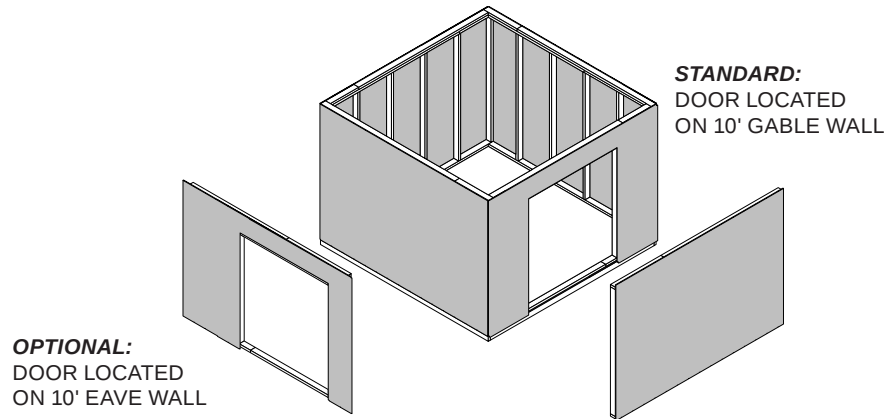

For a 10' x 14' shed, start on page 50.

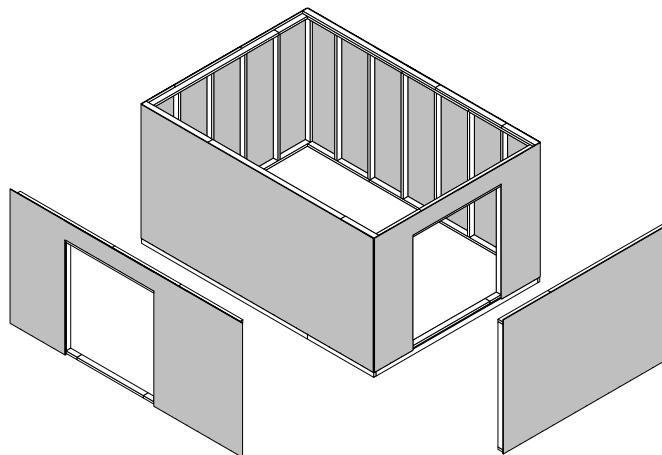

For a 10' x 18' shed, start on page 56.

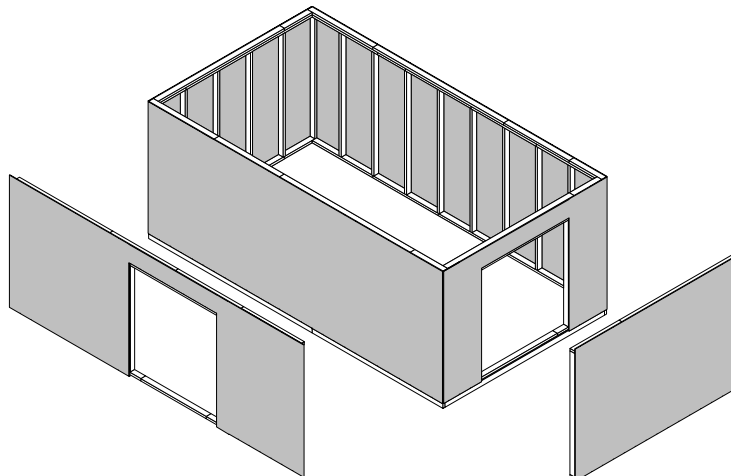


10' GABLE WALL INSTALLATION

PARTS REQUIRED:

x1 OO


69" (175,3 cm) Door Stiffener

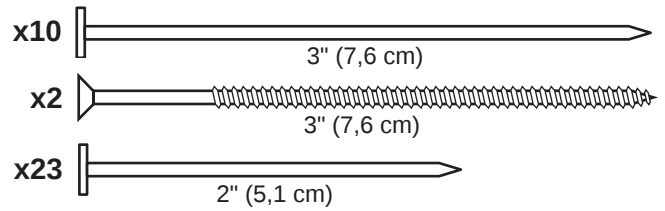

✓ BEGIN


- Center 10' wall on the 120" (304,8 cm) floor dimension.
1-1/2" (3,8 cm) overlap is to the top.

Use OO as a temporary brace.
Secure with (2) 3" screws.

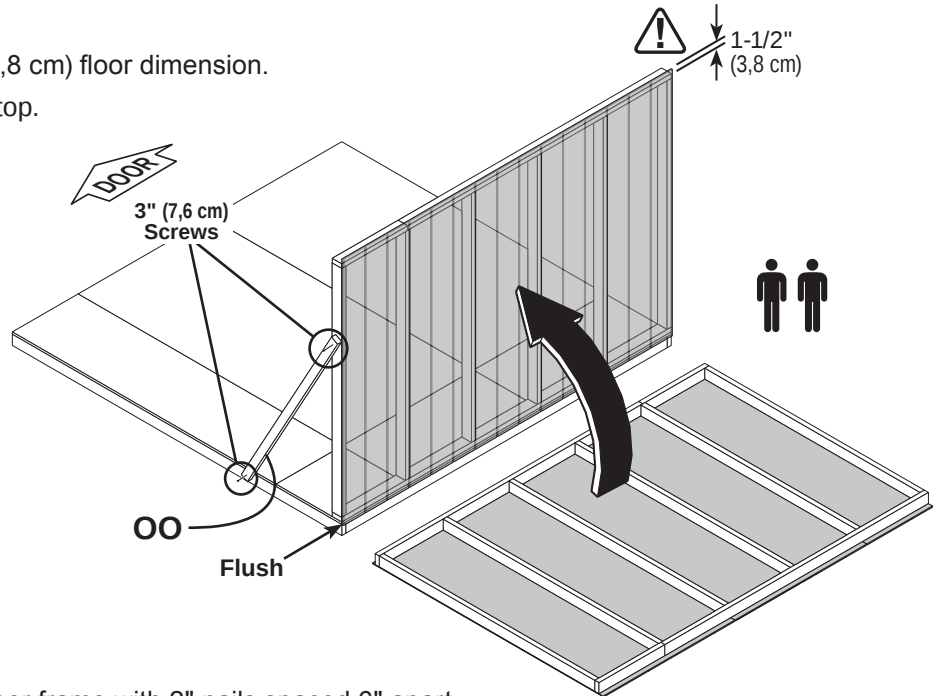

- Secure lower edge of panel to floor frame with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. A**).


Secure wall bottom plates to floor with 3" nails (**Fig. A**).

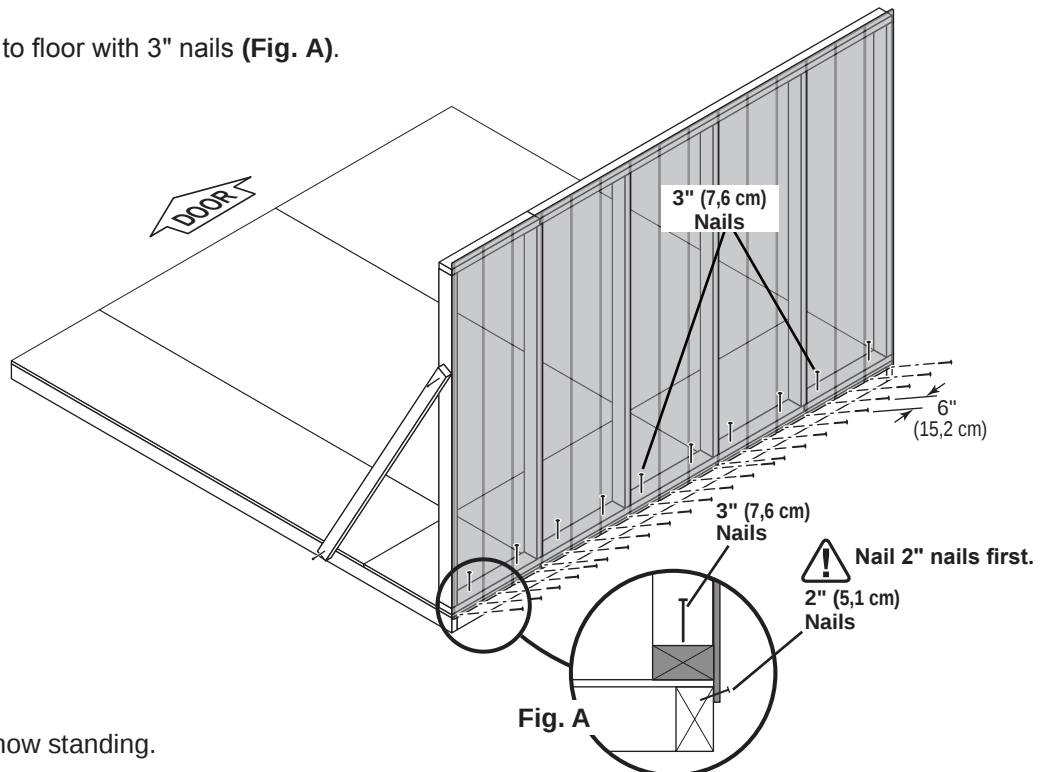

Your 1st 10' gable wall is now standing.

10' EAVE WALL INSTALLATION

PARTS REQUIRED

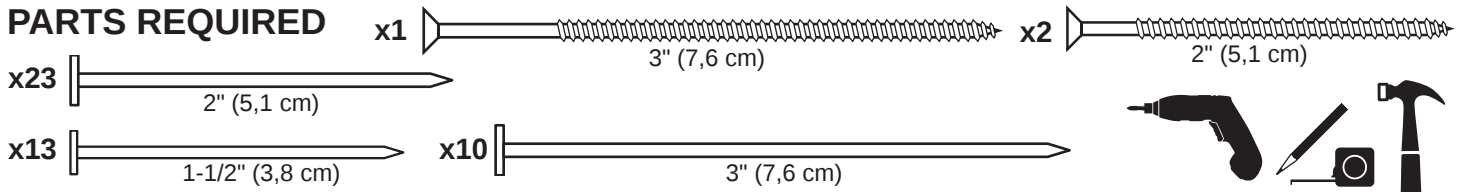



BEGIN

- 1 Place 10' eave wall centered on floor.
1-1/2" (3,8 cm) overlap is to the top.

Secure wall with (1) 2" screw into 10' wall bottom plate (**Fig. A**) and top plate (**Fig. B**).

Secure wall to bottom plate first.


ENSURE PANEL CORNERS ARE FLUSH.

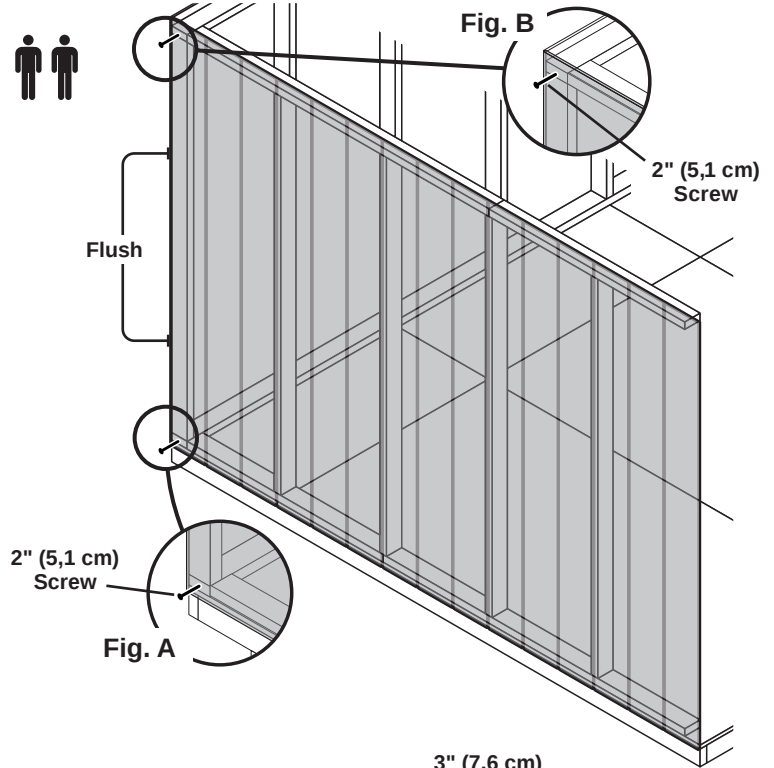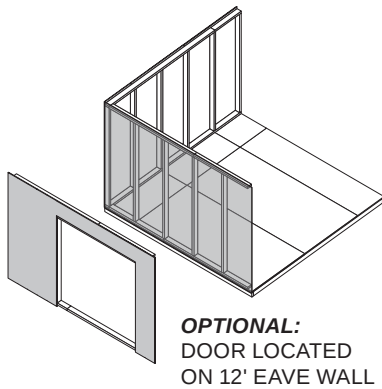

- 2 Nail lower edge of panels to floor with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. C**).

Nail panel to 10' wall stud with 1-1/2" nails spaced 6" apart.

- 3 Secure wall top plate with (1) 3" screw angled at the corner at an angle as shown (**Fig. D**).

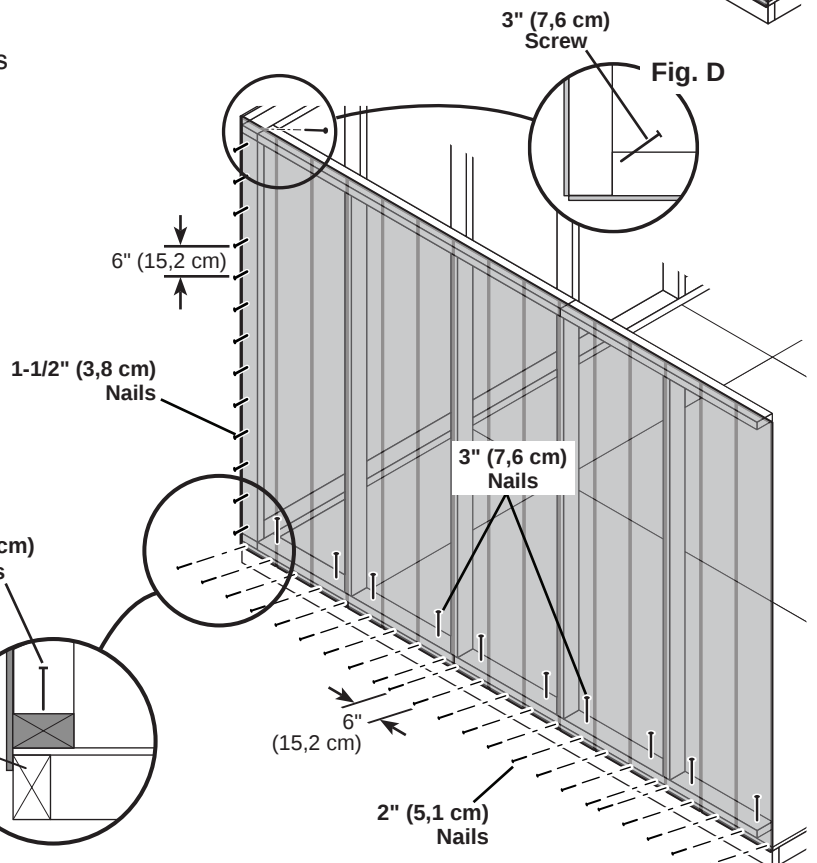

Nail 2" nails first.

2" (5,1 cm) Nails

3" (7,6 cm) Nails


Fig. C



Your 1st 10' eave wall is now installed.

10' EAVE WALL INSTALLATION

PARTS REQUIRED:

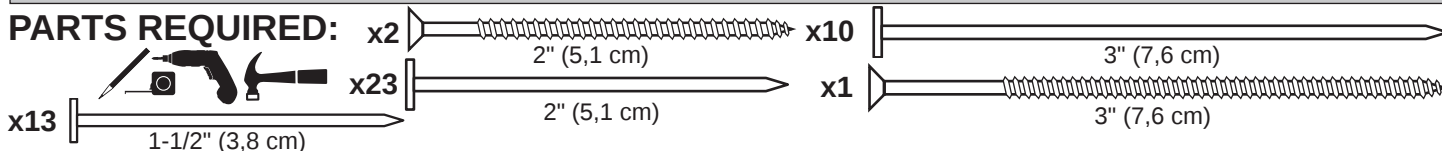

✓ BEGIN

- 1 Remove temporary brace **OO** from installed 10' gable wall.
Place 2nd 10' eave wall centered on floor
1-1/2" (3,8 cm) overlap is to the top.

⚠ ENSURE PANEL CORNERS ARE FLUSH.


- 2 Secure wall with (1) 2" screw through gable wall panel into 10' wall bottom and top plates (**Fig. B, Fig. A**).
Secure wall to bottom plate first.

- 3 Nail lower edge of wall panels to floor frame with 2" nails spaced 6" apart.
Angle nails into floor frame (**Fig. C**).

Secure wall bottom plates to floor with 3" nails (**Fig. C**).

- 4 Nail 10' eave wall panel to 10' gable wall stud with 1-1/2" nails spaced 6" apart.

- 5 Secure wall top plate with (1) 3" screw at the corner at an angle as shown (**Fig. D**).

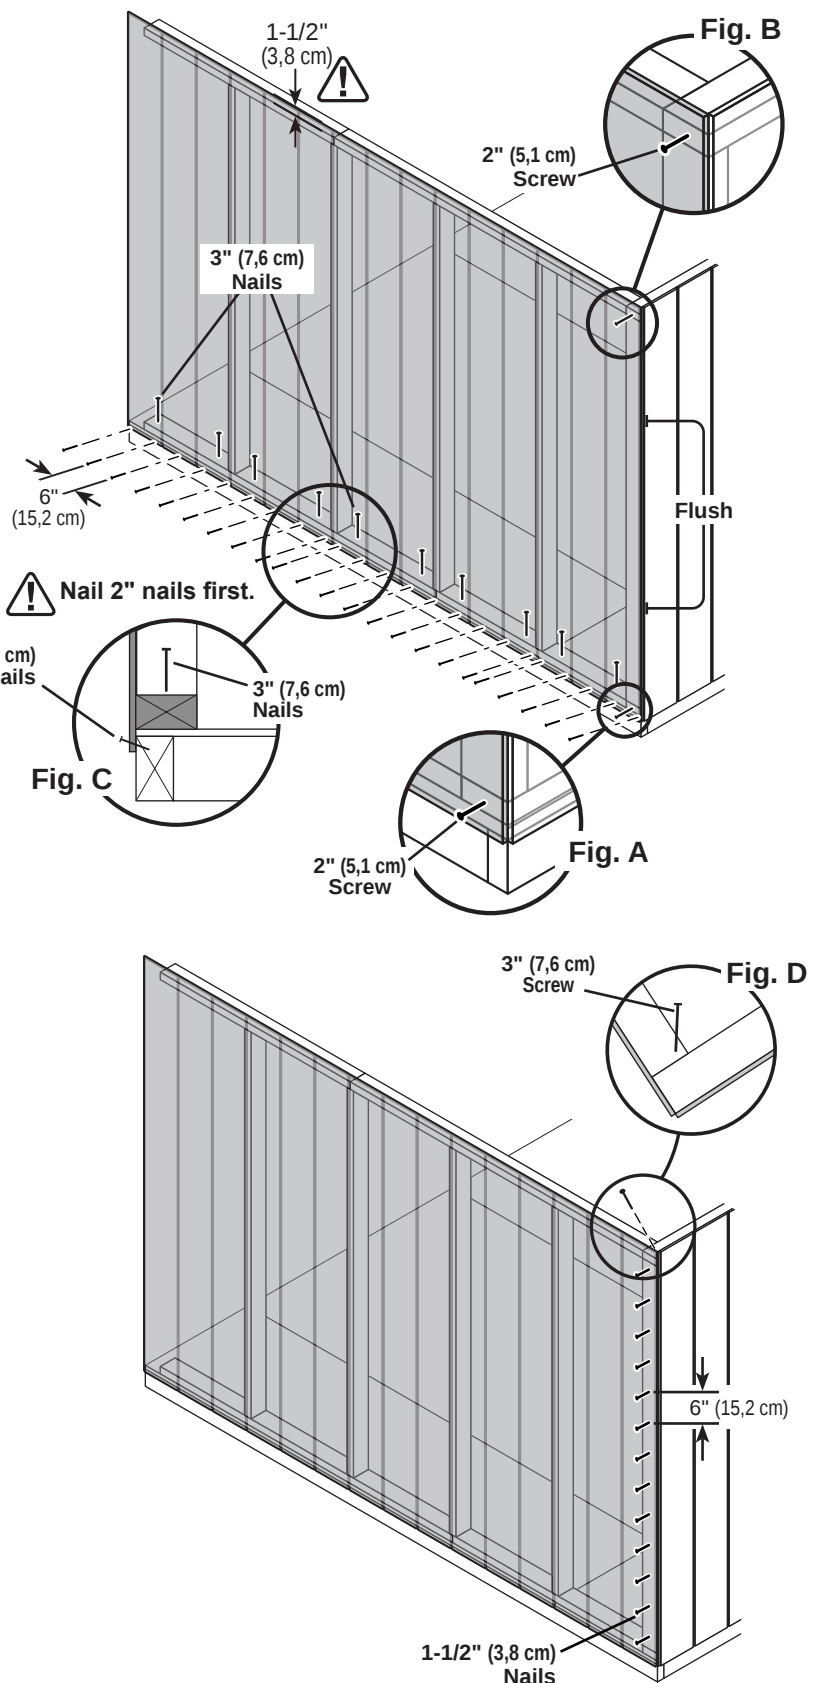


FINISH

Your 2nd 10' eave wall is now installed.

10' GABLE WALL INSTALLATION

PARTS REQUIRED

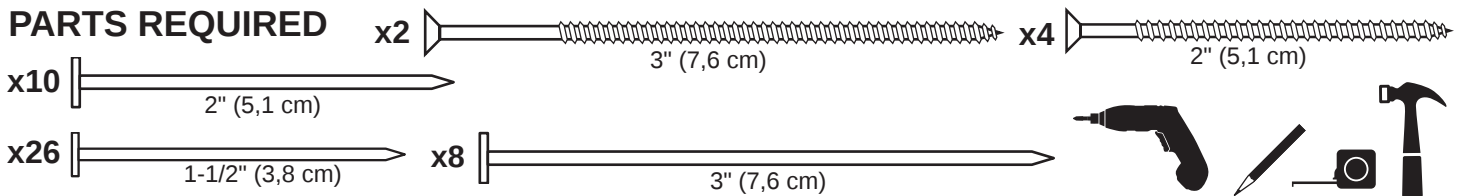



BEGIN

- 1 Place 10' gable wall on floor centered between installed walls.

Secure wall with 2" screws into top and bottom plates (Fig. A, Fig. B).

Secure wall to bottom plate first.


⚠ ENSURE PANEL CORNERS ARE FLUSH. ⚠

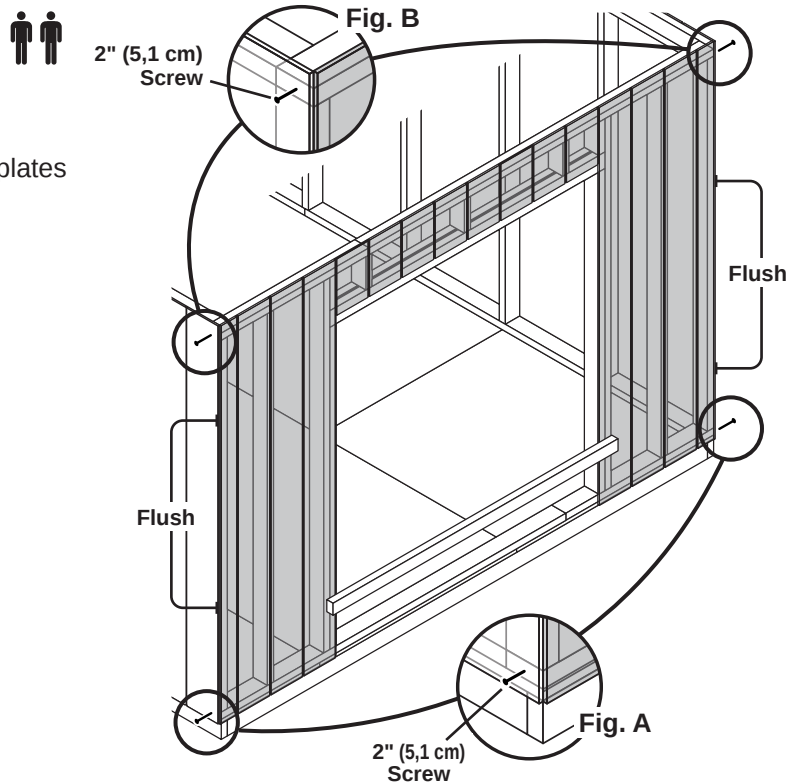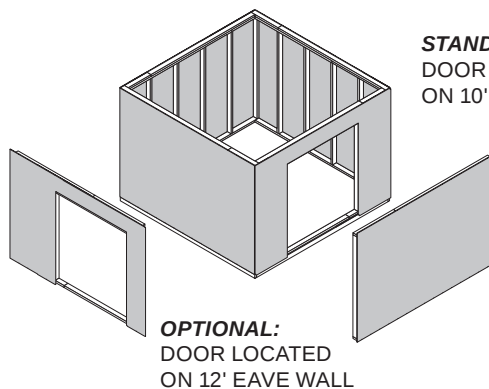

- 2 Nail lower edge of panels to floor with 2" nails spaced 6" apart. Angle nails into floor frame (Fig. C).

Nail panels to eave wall studs with 1-1/2" nails spaced 6" apart.

- 3 Secure wall top plates with 3" screws at each corner at an angle (Fig. D).

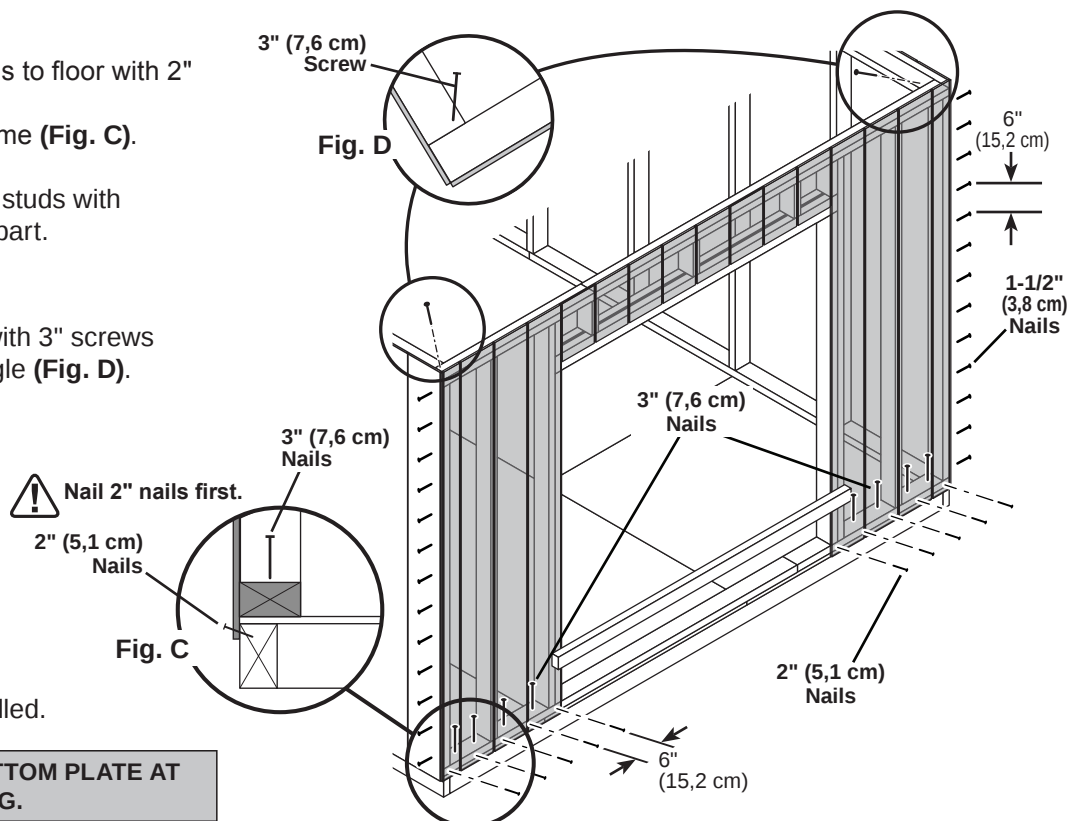


Your walls are now installed.

CUT OUT AND REMOVE BOTTOM PLATE AT DOOR OPENING.

10' x 10' WALL DOUBLERS INSTALLATION



PARTS REQUIRED:

- x2 **RL** 2 x 4 x 24" (5,1 x 10,2 x 61 cm) x2 **JBD** 2 x 4 x 20-3/8" (5,1 x 10,2 x 51,8 cm)
- x2 **TJ** 2 x 4 x 92-5/8" (5,1 x 10,2 x 235 cm)
- x2 **TP** 2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

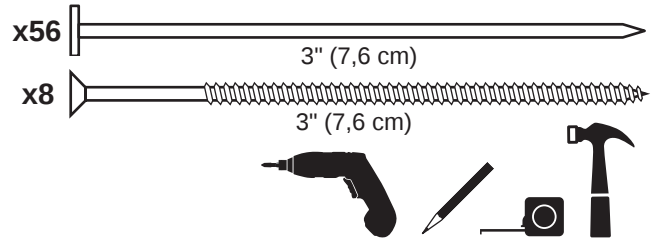

BEGIN

- 1 Orient parts on top of wall frames. Measure and mark from end of boards.
- 2 Secure from top with (2) 3" nails spaced every 24" (Fig. A).
- 3 Secure from bottom with (4) 3" screws at each corner (Fig. B).

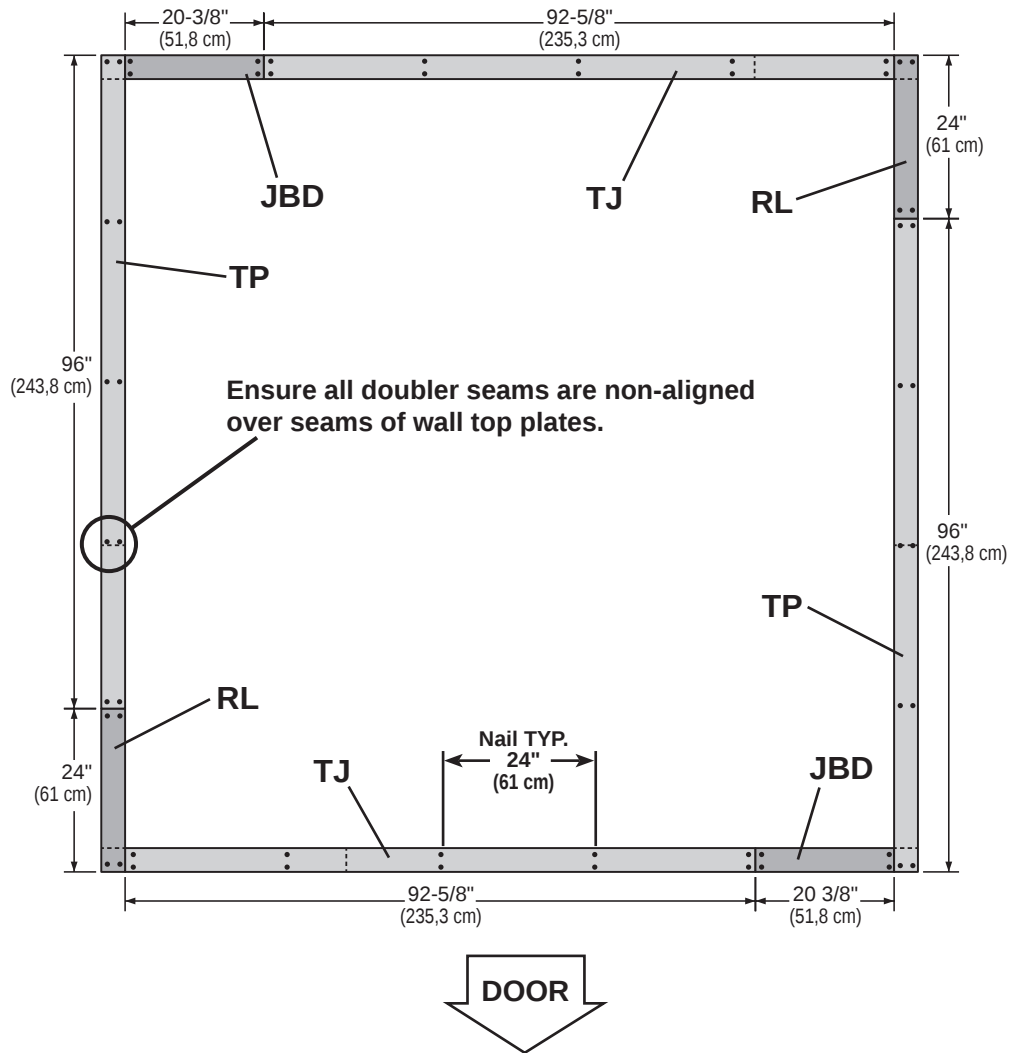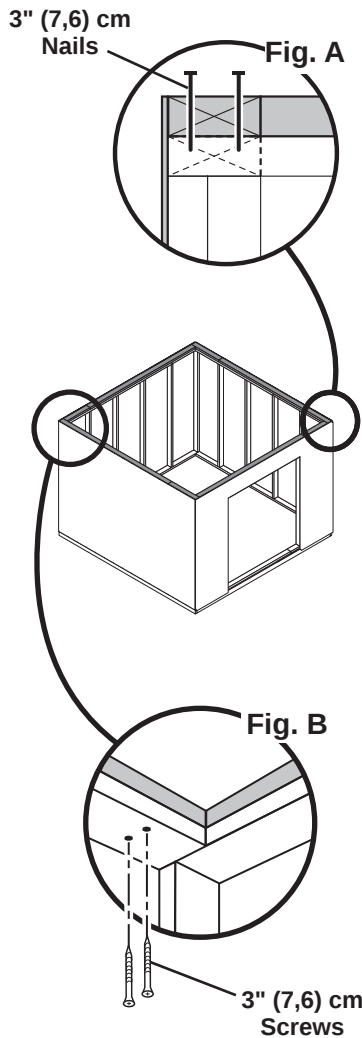

Your wall doublers are now installed.

CONTINUE TO PAGE 61 TO CONTINUE
BUILDING YOUR SHED.

14' GABLE WALL INSTALLATION

PARTS REQUIRED:

x1 **OO**

69" (175,3 cm) Door Stiffener



- x10 3" (7,6 cm)
- x2 3" (7,6 cm)
- x23 2" (5,1 cm)


✓ BEGIN

1

Center 10' wall on the 120" (304,8 cm) floor dimension.

1-1/2" (3,8 cm) overlap is to the top.


Use **OO** as a temporary brace. Secure with (2) 3" screws.

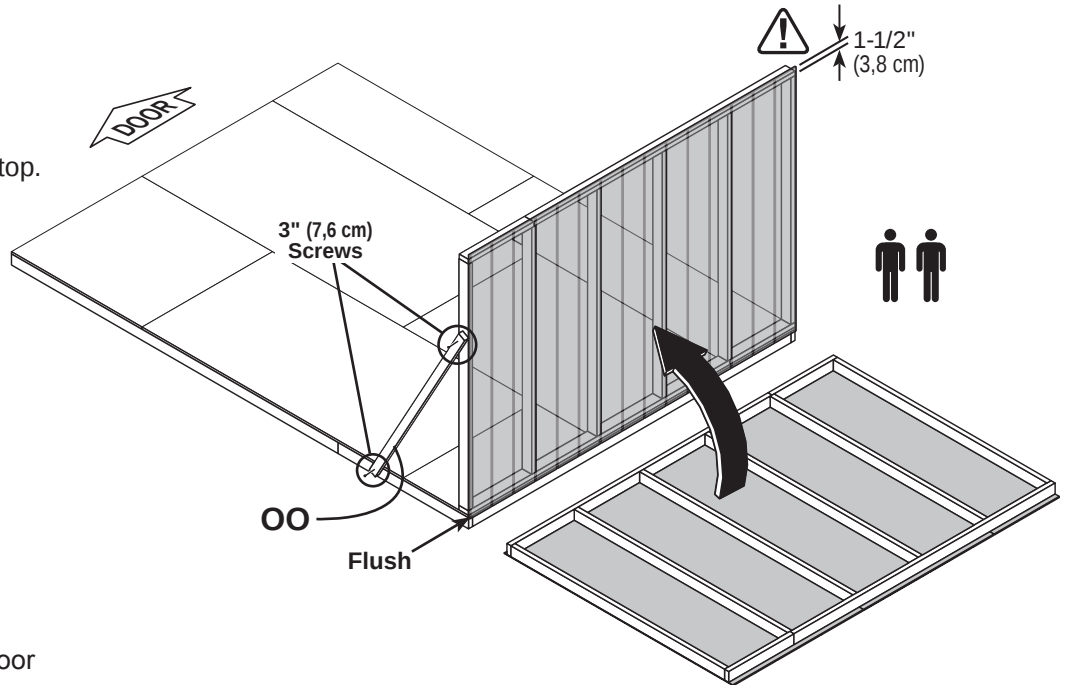

2

Secure lower edge of panel to floor frame with 2" nails spaced 6" apart. Angle nails into floor frame (**Fig. A**).

Secure wall bottom plates to floor with 3" nails (**Fig. A**).

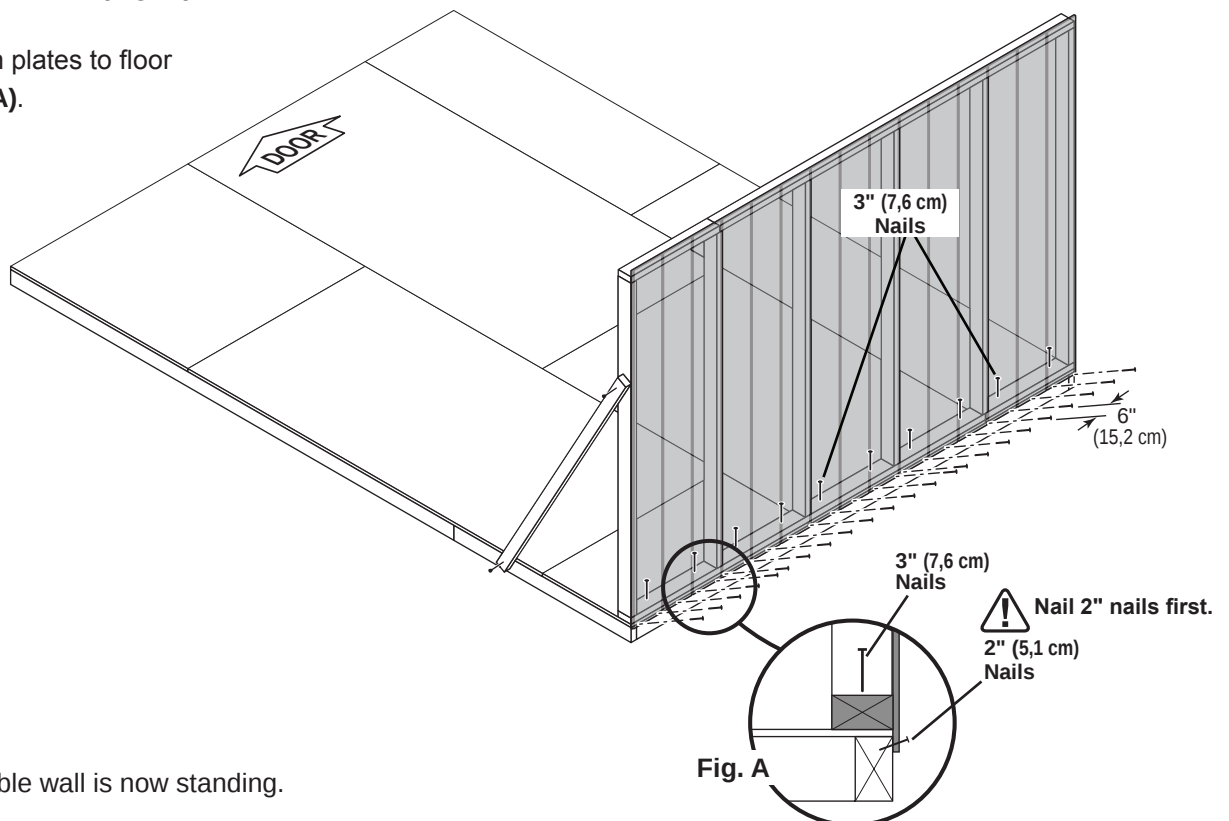

Your 10' gable wall is now standing.

14' EAVE WALL INSTALLATION

PARTS REQUIRED

x1 **TJ** Temporary Brace
2 x 4 x 92-5/8" (5,1 x 10,2 x 235 cm)

x3 3" (7,6 cm)

x2 2" (5,1 cm)
x13 1-1/2" (3,8 cm)

x32 2" (5,1 cm)

x14 3" (7,6 cm)



✓ BEGIN 1




Place 1st 14' eave wall centered on floor.
The 1-1/2" (3,8 cm) overlap is to the top.
Use **TJ** as a temporary brace as shown.
Secure **TJ** with (2) 3" screws.

Secure wall with (1) 2" screw into 10' wall
bottom plate (**Fig. A**) and top plate (**Fig. B**).

Secure wall to bottom plate first.

⚠ **ENSURE PANEL CORNERS ARE FLUSH.**

OPTIONAL:
DOOR LOCATED
ON 14' EAVE WALL

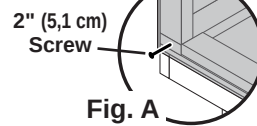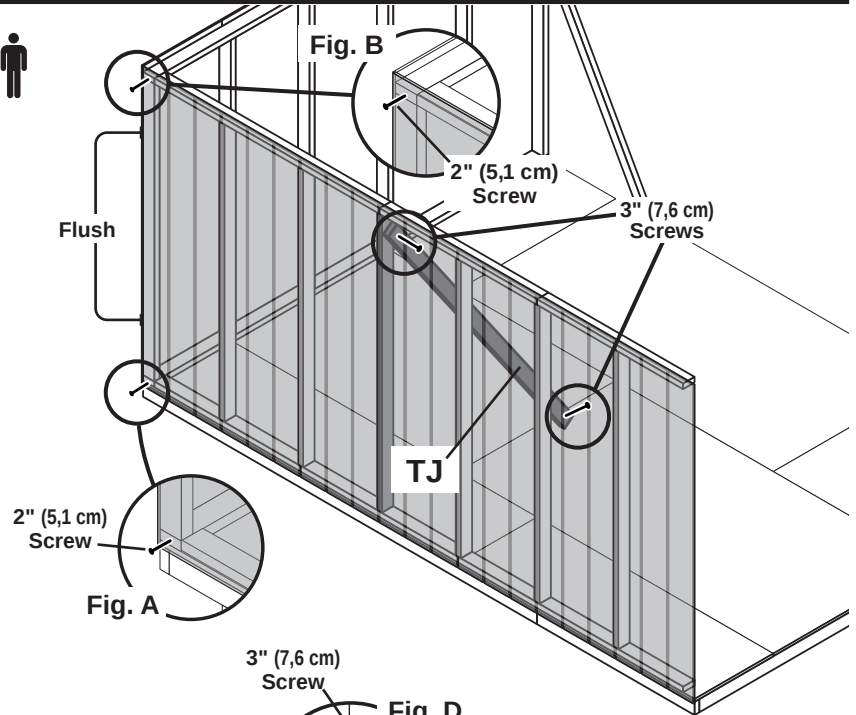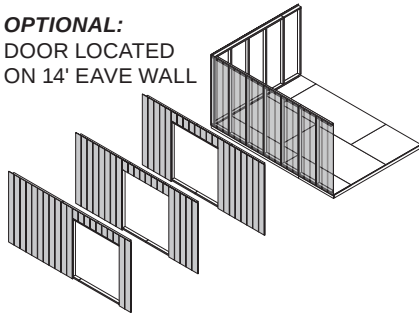

2


Nail lower edge of panels to floor
with 2" nails spaced 6" apart.
Angle nails into floor frame
(**Fig. C**).

Nail panel to 10' wall stud with
1-1/2" nails spaced 6" apart.

3

Secure wall top plate with (1) 3" screw
at the corner at an angle as shown
(**Fig. D**).

⚠ **Nail 2" nails first.**
2" (5,1 cm) Nails

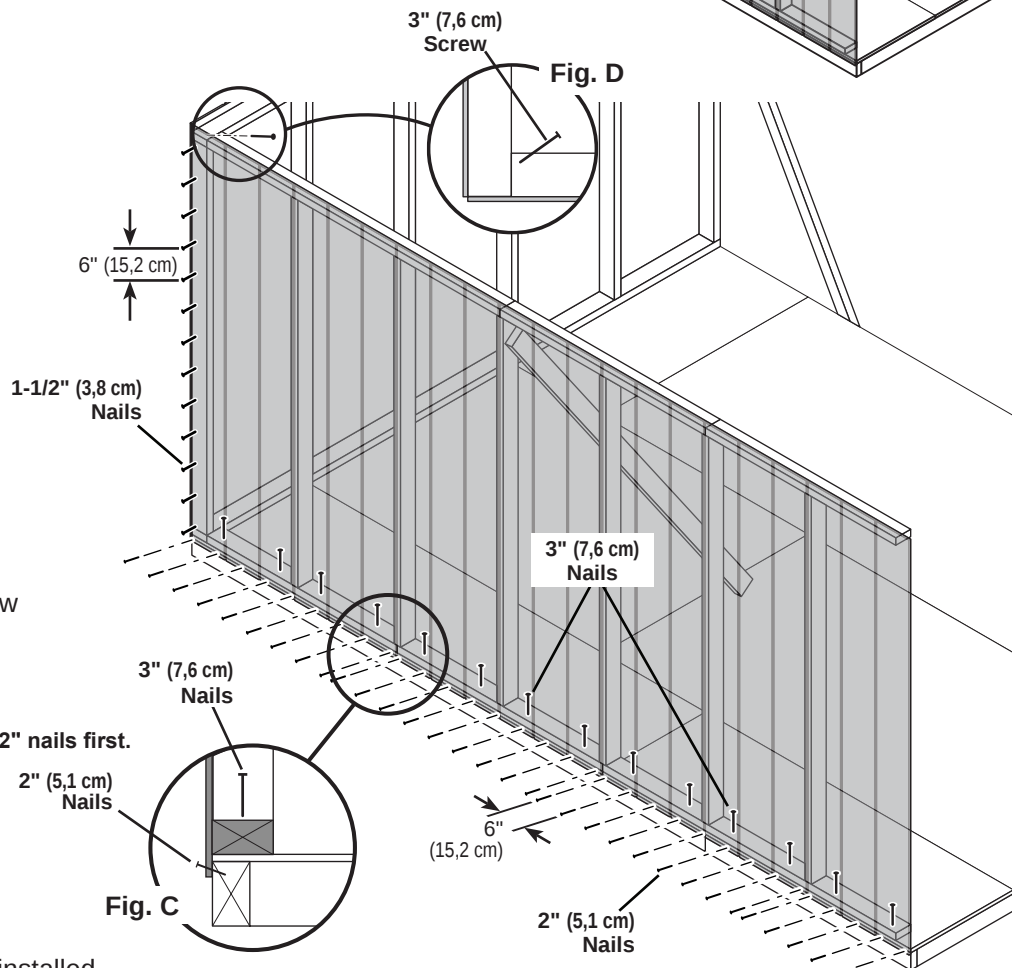

6" (15,2 cm)
1-1/2" (3,8 cm) Nails

3" (7,6 cm) Nails

3" (7,6 cm) Nails

2" (5,1 cm) Nails


Fig. C



Your 1st 14' eave wall is now installed.

14' EAVE WALL INSTALLATION

PARTS REQUIRED:



x1 **TJ** Temporary Brace
2 x 4 x 92-5/8" (5,1 x 10,2 x 235 cm)



✓ **BEGIN**

1



Remove temporary brace **OO** from installed 10' wall.

Place 2nd 14' wall centered on floor.

1-1/2" (3,8 cm) overlap is to the top.

Use **TJ** as a temporary brace as shown.

Secure **TJ** with (2) 3" screws.

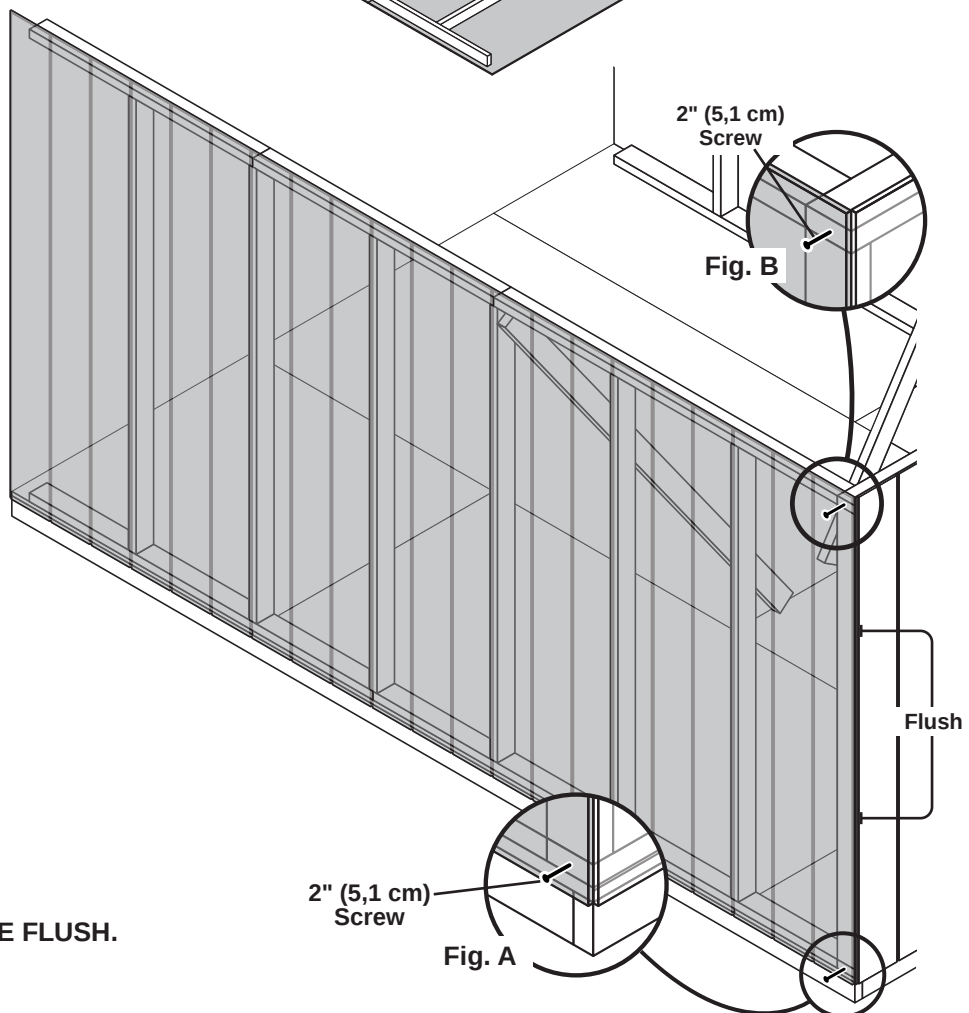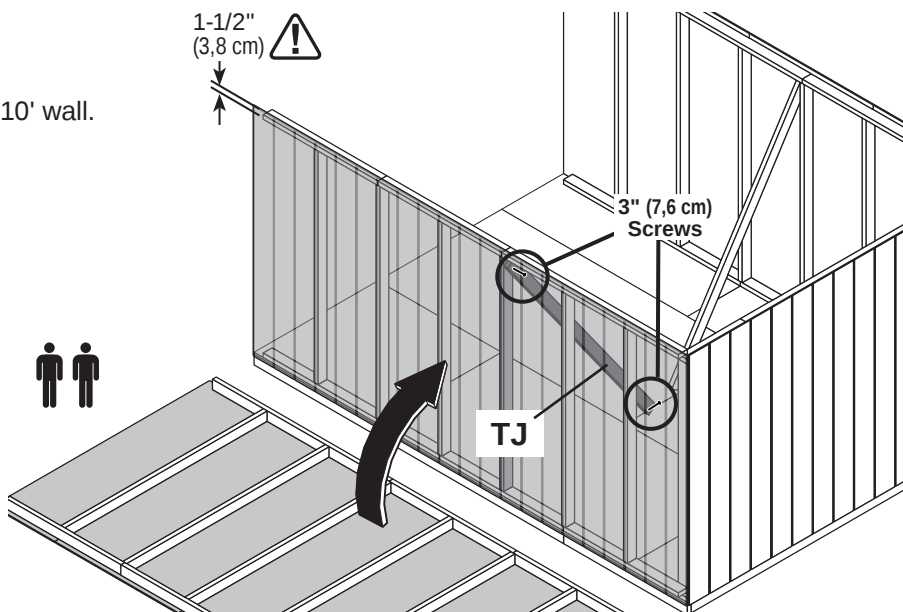

2



Secure wall with (1) 2" screw through gable wall panel into 10' wall bottom and top plates (**Fig. A**, **Fig. B**).

Secure wall to bottom plate first.

 **ENSURE PANEL CORNERS ARE FLUSH.**

14' EAVE WALL INSTALLATION


PARTS REQUIRED:

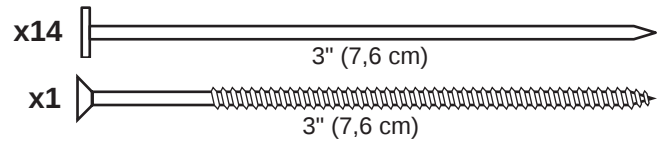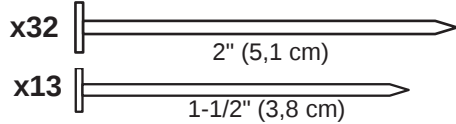

3

Nail lower edge of wall panels to floor frame with 2" nails spaced 6" apart. Angle nails into floor frame (**Fig. C**).

Secure wall bottom plates to floor with 3" nails (**Fig. C**).

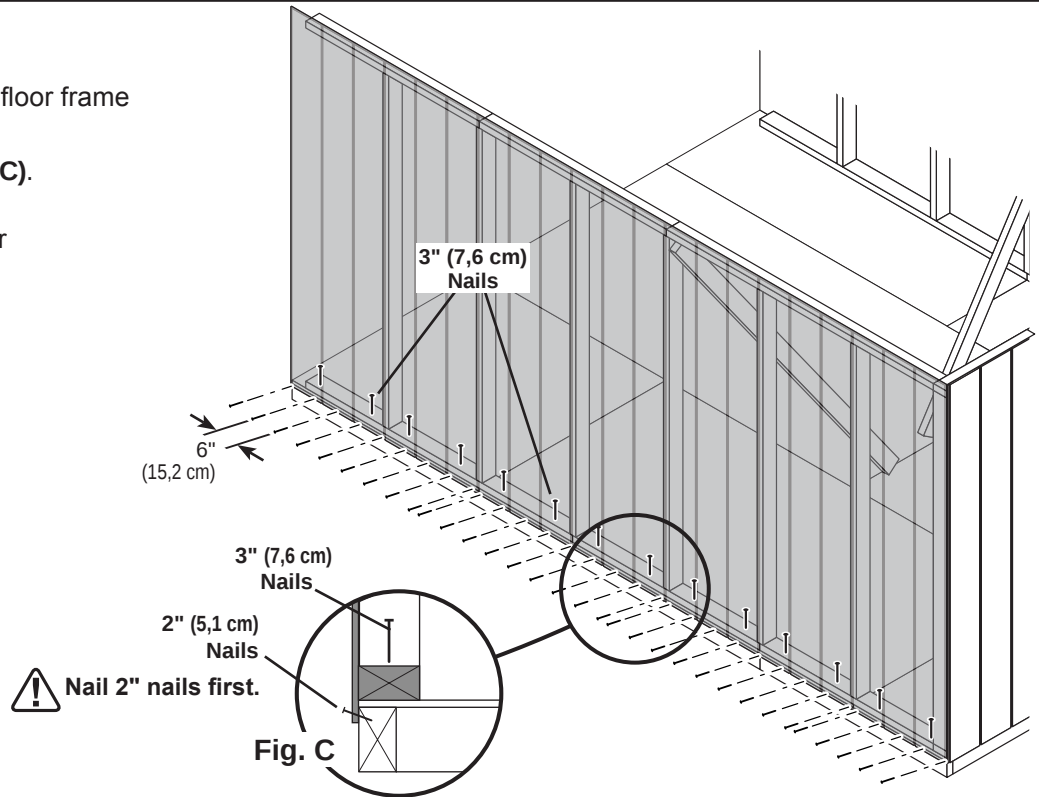


4

Nail 12' wall panel to 10' wall stud with 1-1/2" nails spaced 6" apart.

5


Secure gable wall top plate with (1) 3" screw at the corner at an angle as shown (**Fig. D**).

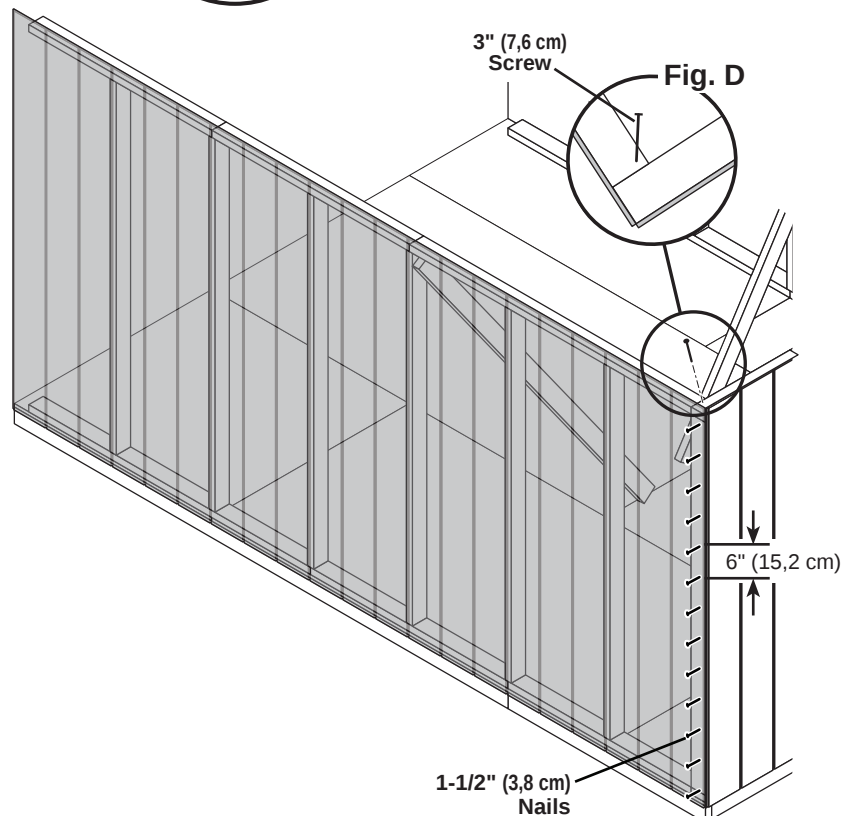

Your 2nd 14' wall is now installed.

10' GABLE WALL INSTALLATION

PARTS REQUIRED

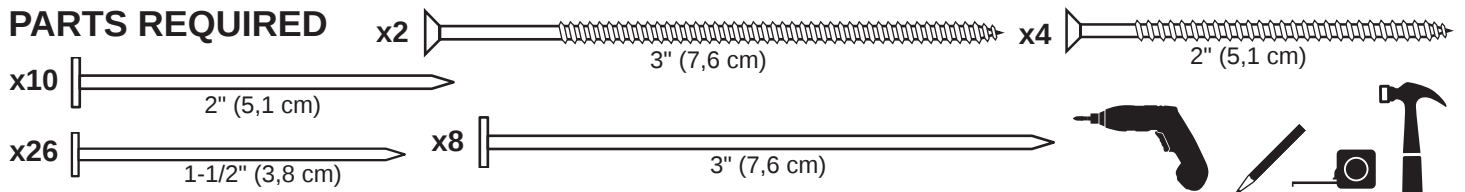

✓ BEGIN


- 1 Place 10' gable wall on floor centered between installed walls.




Secure wall with 2" screws into top and bottom plates (Fig. A, Fig. B).

Secure wall to bottom plate first.

⚠ ENSURE PANEL CORNERS ARE FLUSH. ⚠

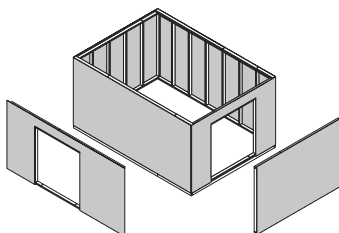


STANDARD:
DOOR LOCATED
ON 10' GABLE WALL

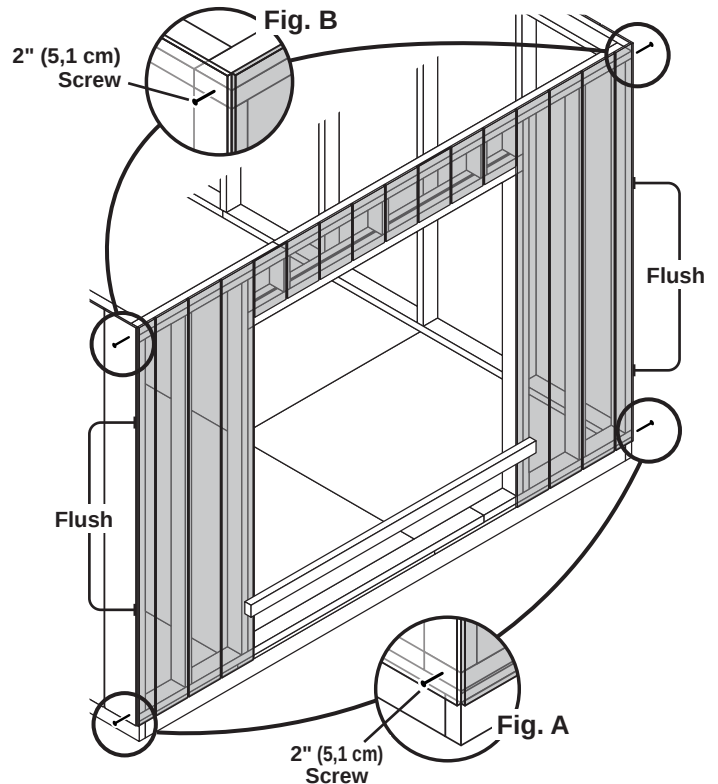

- 2 Nail lower edge of panels to floor with 2" nails spaced 6" apart. Angle nails into floor frame (Fig. C).

Nail panels to 10' wall studs with 1-1/2" nails spaced 6" apart.

- 3 Secure wall top plates with 3" screws at each corner at an angle (Fig. D).

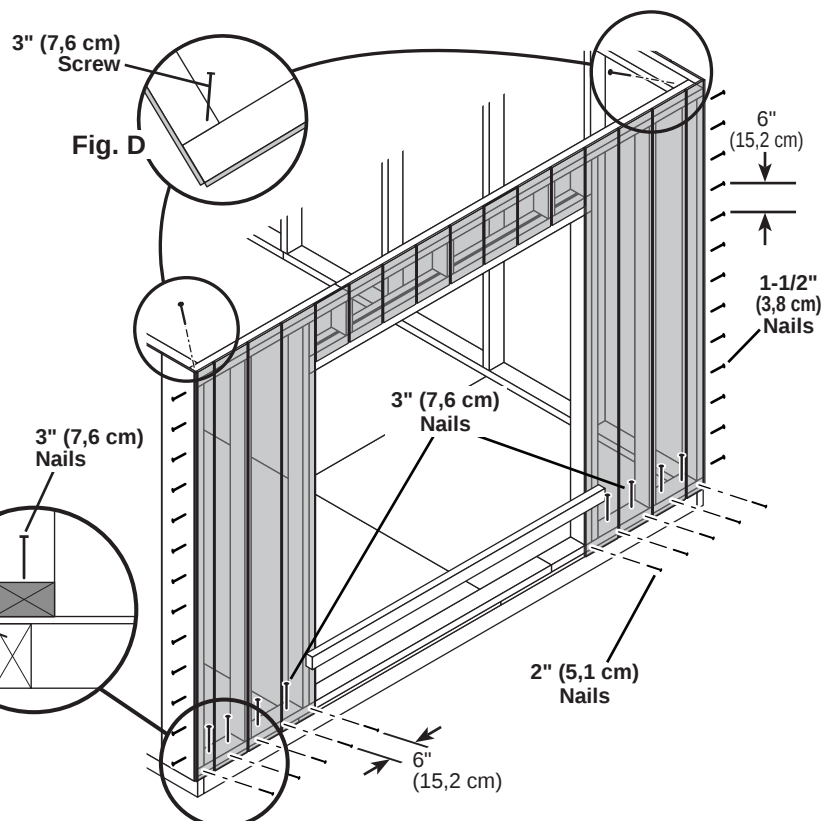

⚠ Nail 2" nails first.

Fig. C



FINISH

Your walls are now installed.

**CUT OUT AND REMOVE BOTTOM PLATE
AT DOOR OPENING.
REMOVE TEMPORARY BRACING.**

10' x 14' WALL DOUBLERS INSTALLATION

PARTS REQUIRED:


x2 **SP**
2 x 4 x 48" (5,1 x 10,2 x 121,9 cm)

x2 **JBD**
2 x 4 x 20-3/8" (5,1 x 10,2 x 51,8 cm)

x2 **TJ**
2 x 4 x 92-5/8" (5,1 x 10,2 x 235,3 cm)





x2 **TP**
2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

x2 **RL**
2 x 4 x 24" (5,1 x 10,2 x 61 cm)

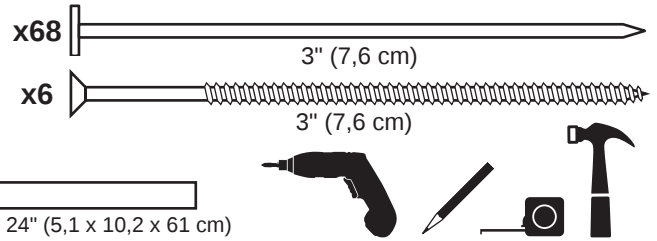

BEGIN

- 1 Orient parts on top of wall frames. Measure and mark from end of boards.
- 2 Secure from top with (2) 3" nails spaced every 24" (Fig. A).
- 3 Secure from bottom with (4) 3" screws at each corner (Fig. B).

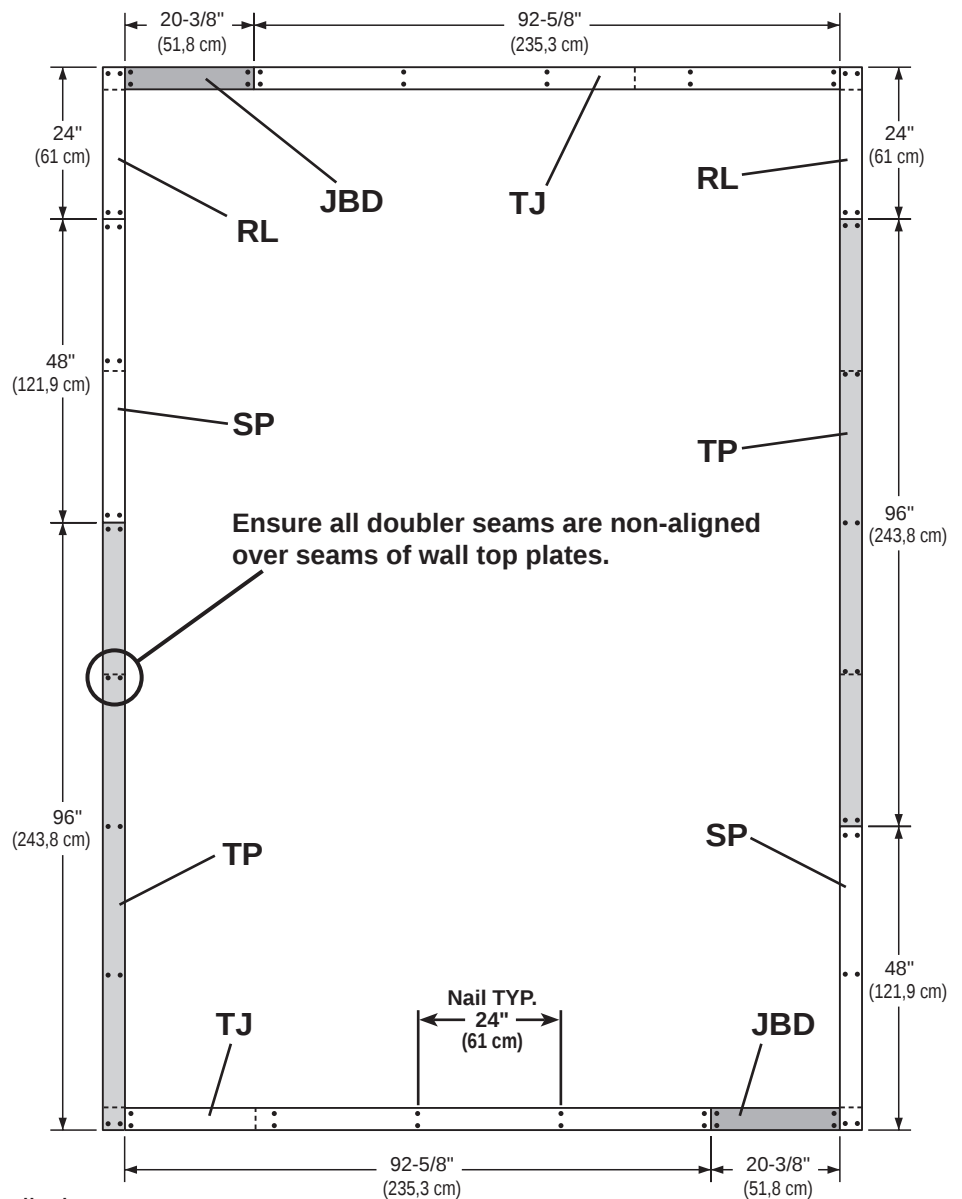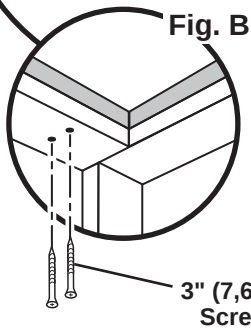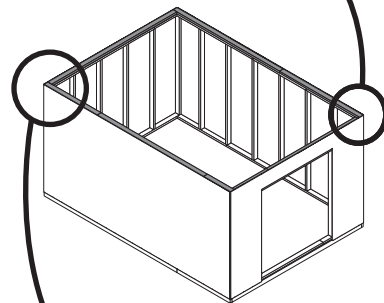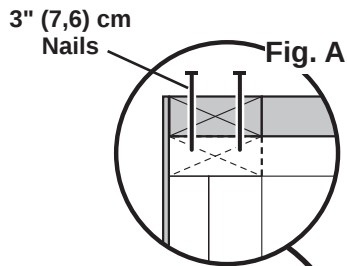

Your wall doublers are now installed.

CONTINUE TO PAGE 61 TO CONTINUE
BUILDING YOUR SHED.






10' GABLE WALL INSTALLATION

PARTS REQUIRED:

x1 **OO**

69" (175,3 cm) Door Stiffener

- x10  3" (7,6 cm)
- x2  3" (7,6 cm)
- x23  2" (5,1 cm)




✓ BEGIN

1

Center 10' wall on the 120" (304,8 cm) floor dimension.

1-1/2" (3,8 cm) overlap is to the top.


Use **OO** as a temporary brace.
Secure with (2) 3" screws.

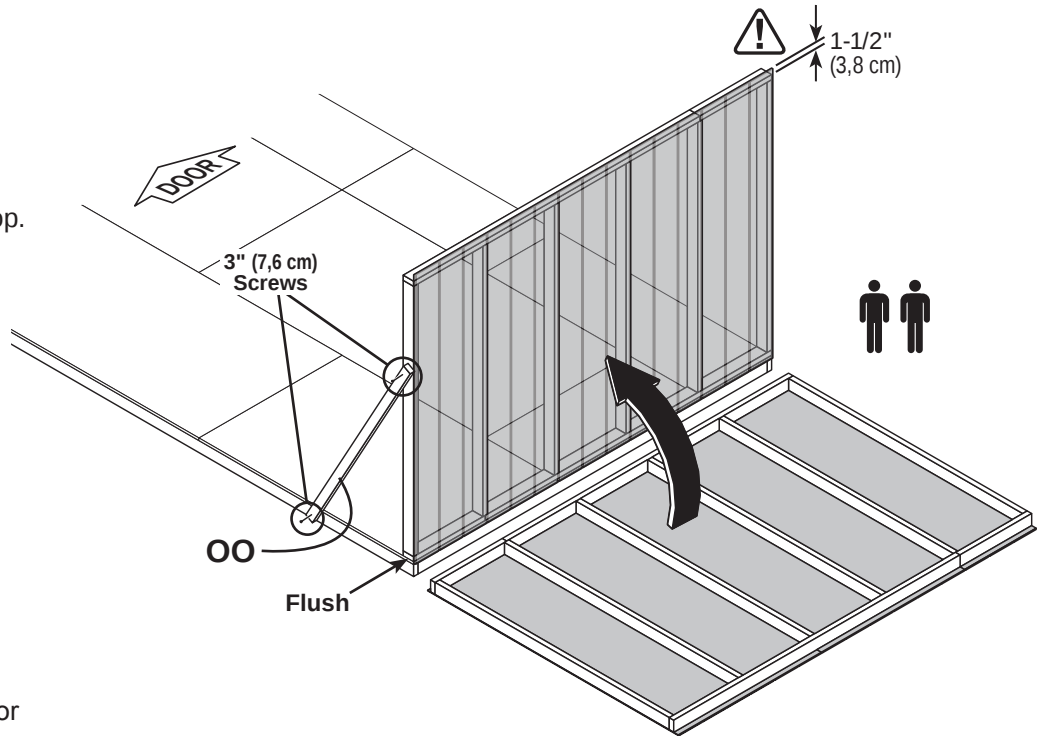

2

Secure lower edge of panel to floor frame with 2" nails spaced 6" apart. Angle nails into floor frame (**Fig. A**).

Secure wall bottom plates to floor with 3" nails (**Fig. A**).

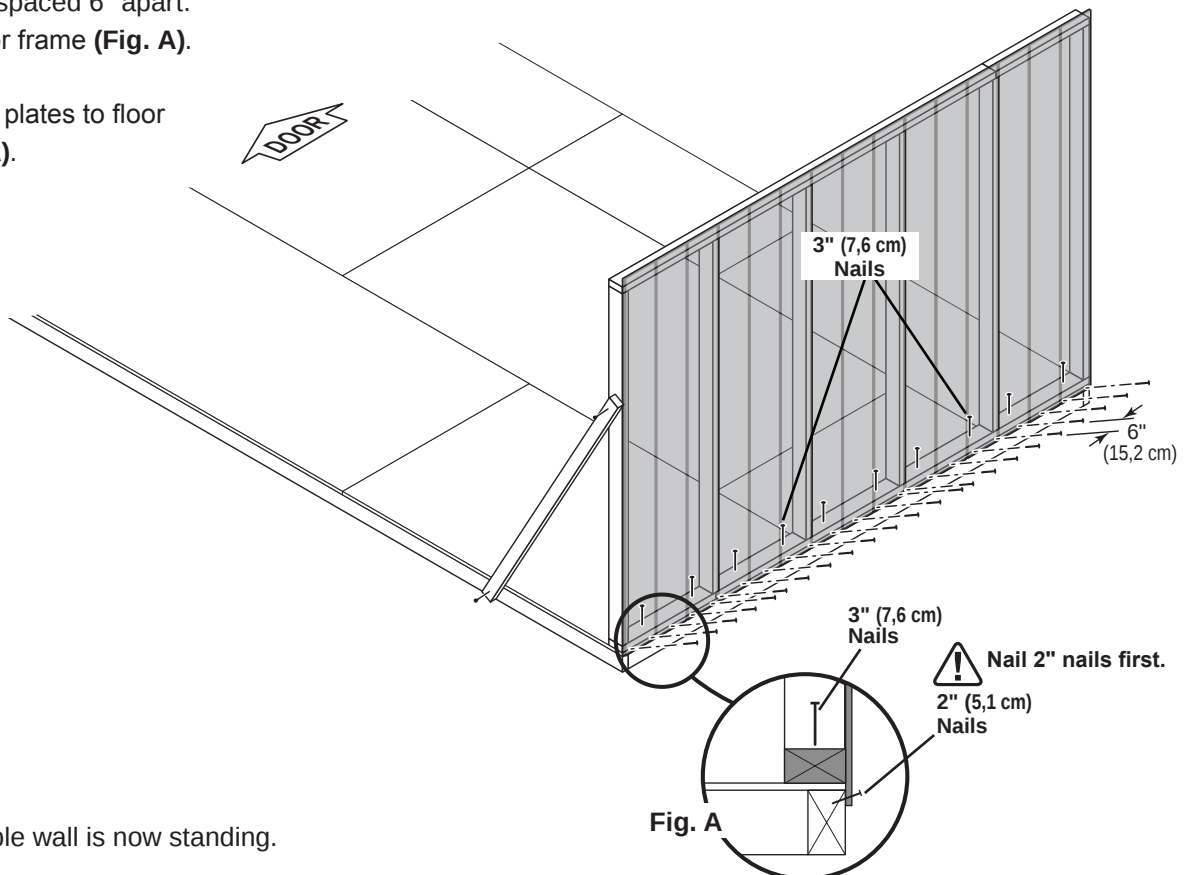

Your 10' gable wall is now standing.

Fig. A

Fig. B

Fig. C

Fig. D

Flush

2" (5,1 cm) Screw

3" (7,6 cm) Screws

TJ

3" (7,6 cm) Screw

3" (7,6 cm) Nails

2" (5,1 cm) Nails


6" (15,2 cm)

(7,6 cm) Nails

(5,1 cm) screw

18' EAVE WALL INSTALLATION

PARTS REQUIRED:

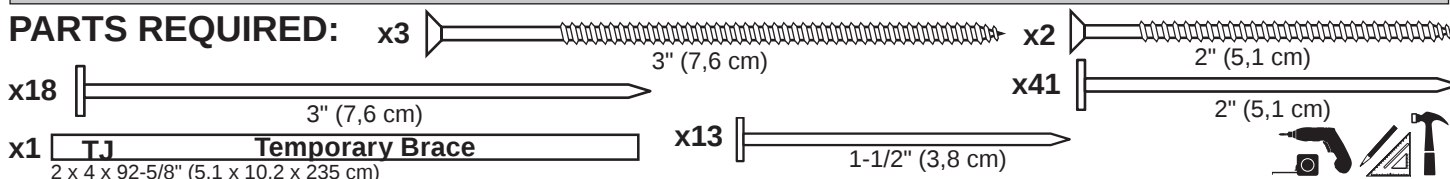

✓ BEGIN

1

Remove temporary brace **OO** from installed 10' wall.

Place 2nd 18' wall centered on floor.

1-1/2" (3,8 cm) overlap is to the top.

Use **TJ** as a temporary brace as shown.

Secure **TJ** with (2) 3" screws.

2

Secure wall with (1) 2" screw through gable wall panel into 10' wall bottom and top plates (**Fig. A, Fig. B**).

⚠ ENSURE PANEL CORNERS ARE FLUSH.

Secure wall to bottom plate first.

3

Nail lower edge of wall panels to floor frame with 2" nails spaced 6" apart.

Angle nails into floor frame (**Fig. C**).

Secure wall bottom plates to floor with 3" nails (**Fig. C**).

4


Nail 18' wall panel to 10' wall stud with 1-1/2" nails spaced 6" apart.

5

Secure gable wall top plate with (1) 3" screw at the corner at an angle as shown (**Fig. D**).




Your 2nd 18' wall is now installed.

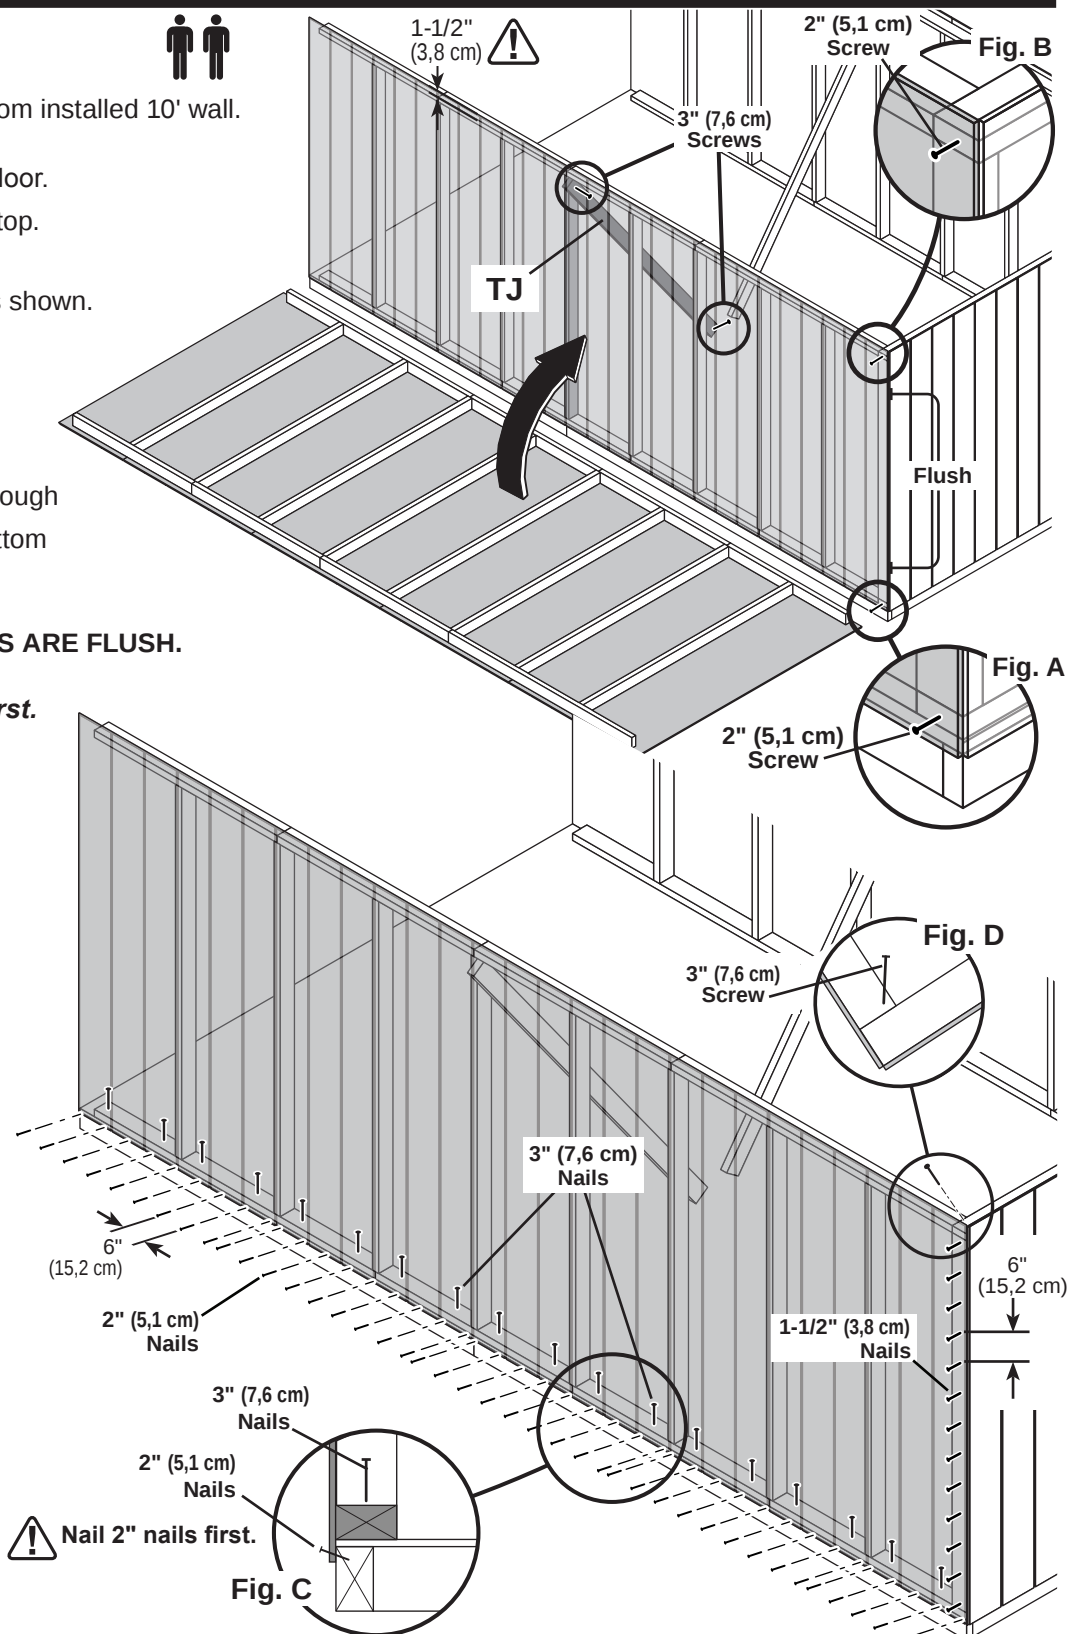

10' GABLE WALL INSTALLATION

PARTS REQUIRED

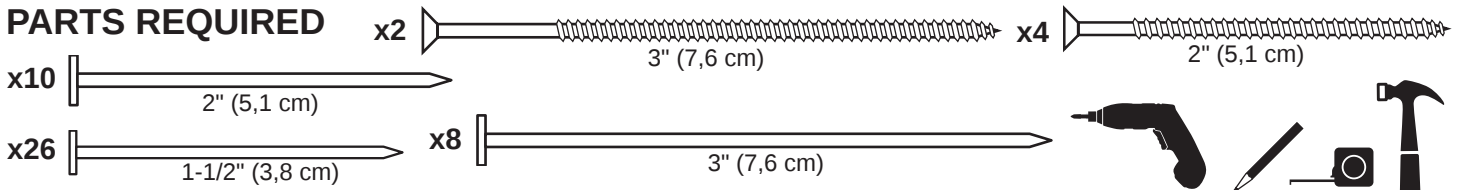


✓ BEGIN

- 1 Place 10' gable wall on floor centered between installed walls.


Secure wall with 2" screws into top and bottom plates (Fig. A, Fig. B).

Secure wall to bottom plate first.

⚠ ENSURE PANEL CORNERS ARE FLUSH. ⚠

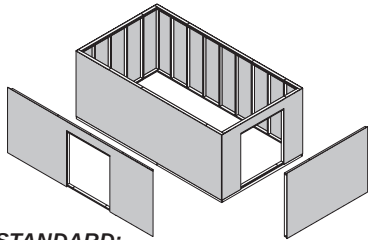


STANDARD:
DOOR LOCATED
ON 10' GABLE WALL

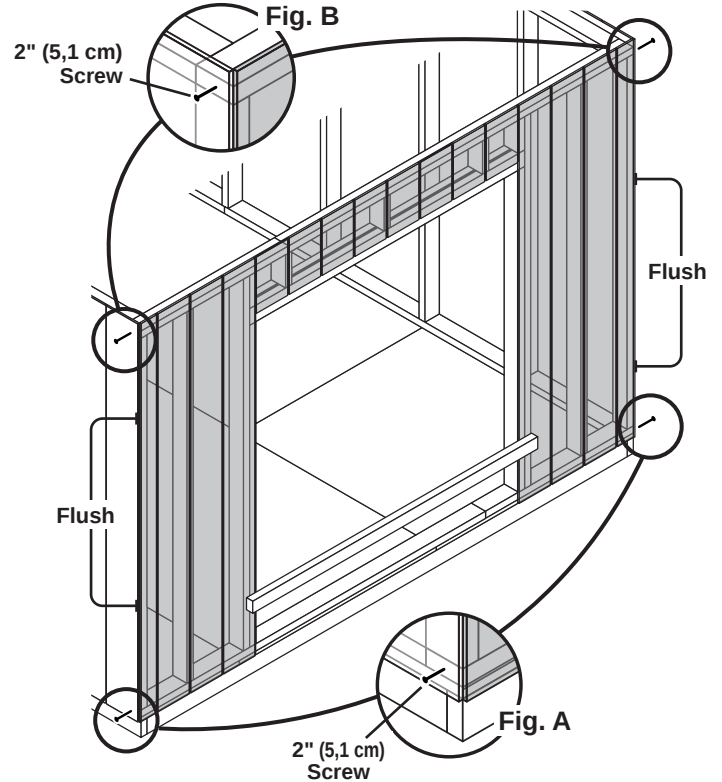

- 2 Nail lower edge of panels to floor with 2" nails spaced 6" apart. Angle nails into floor frame (Fig. C).

Nail panels to 10' wall studs with 1-1/2" nails spaced 6" apart.

- 3 Secure wall top plates with 3" screws at each corner at an angle (Fig. D).

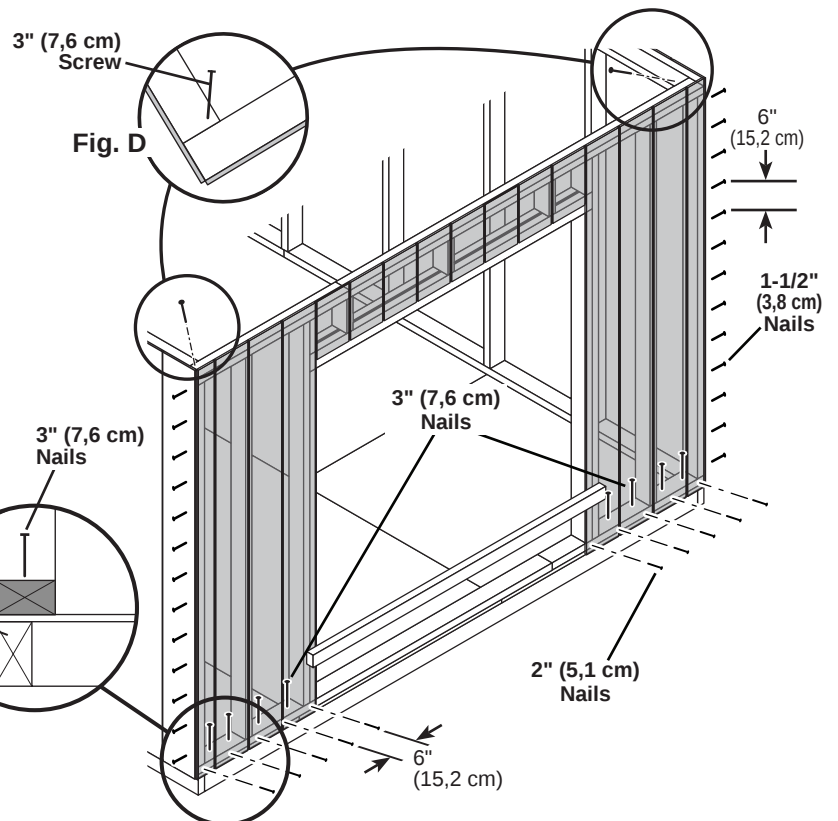

⚠ Nail 2" nails first.
2" (5,1 cm) Nails

Fig. C




Your walls are now installed.

**CUT OUT AND REMOVE BOTTOM PLATE
AT DOOR OPENING.
REMOVE TEMPORARY BRACING.**

10' x 18' WALL DOUBLERS INSTALLATION



PARTS REQUIRED:

x4 SP 2 x 4 x 48" (5,1 x 10,2 x 121,9 cm)	x2 JBD 2 x 4 x 20-3/8" (5,1 x 10,2 x 51,8 cm)
x2 TJ 2 x 4 x 92-5/8" (5,1 x 10,2 x 235 cm)	
x2 TP 2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)	x2 RL 2 x 4 x 24" (5,1 x 10,2 x 61 cm)

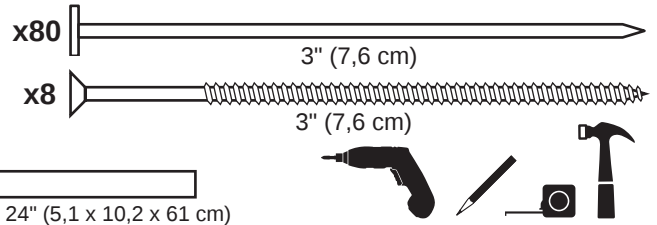

BEGIN

- 1 Orient parts on top of wall frames. Measure and mark from end of boards.
- 2 Secure from top with (2) 3" nails spaced every 24" (Fig. A).
- 3 Secure from bottom with (2) 3" screws at each corner (Fig. B).

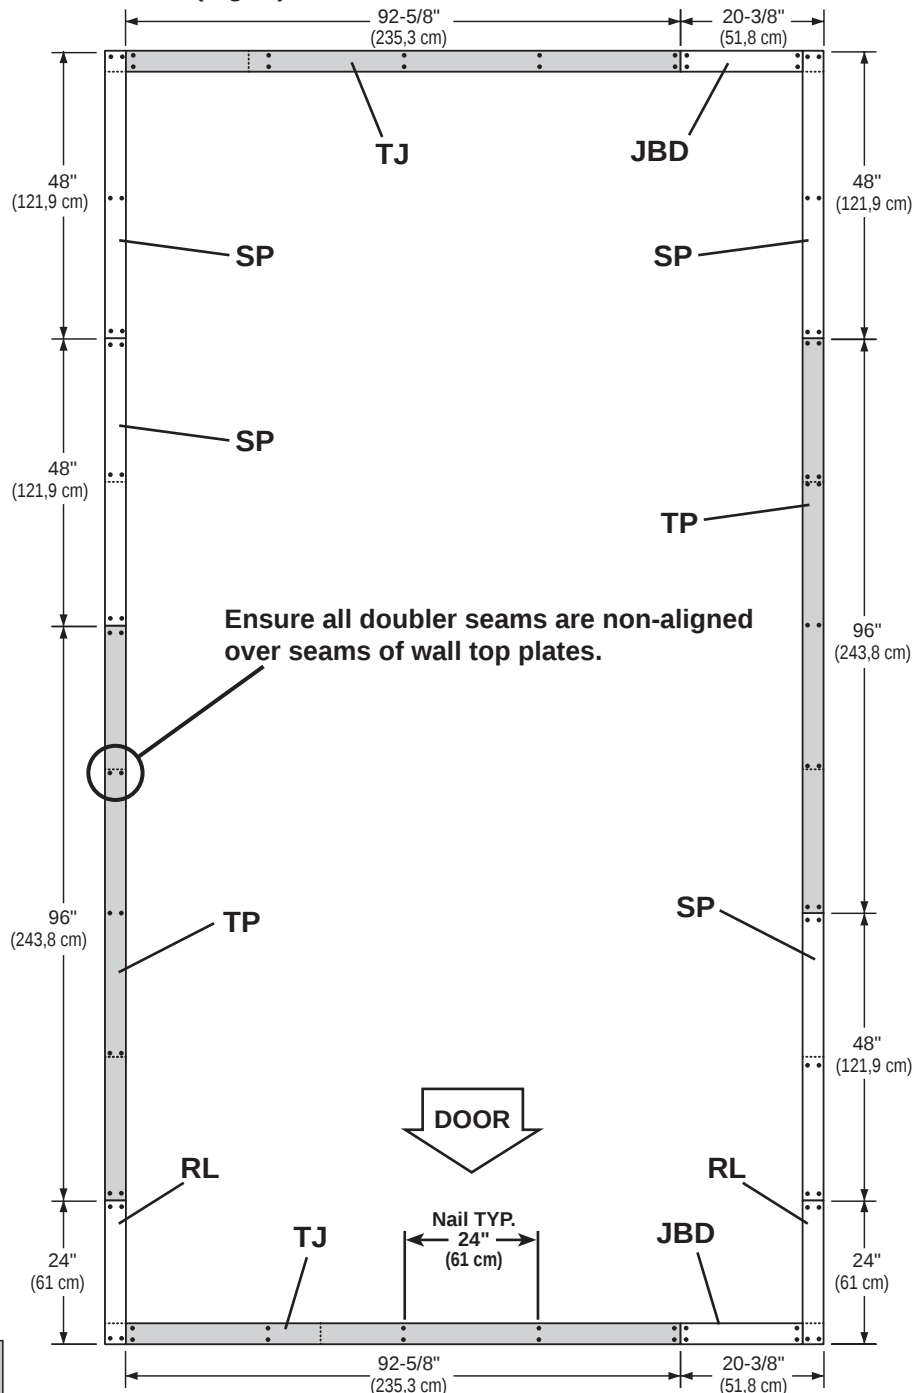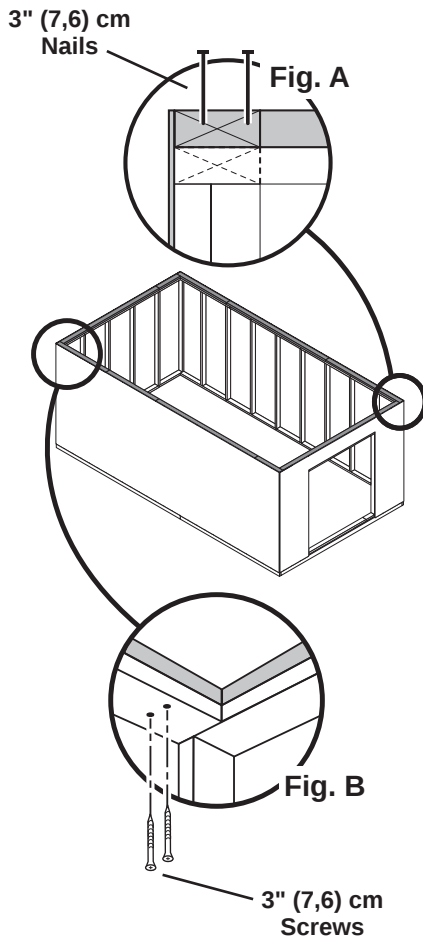

Your wall doublers are now installed.

CONTINUE TO NEXT PAGE TO CONTINUE BUILDING YOUR SHED.

10x10'
↓
x10

10x14'
↓
x14

10x18'
↓
x18

RAFTERS

PARTS REQUIRED:

x120

x168


x216


 6 x 24" (15,2 x 60,9 cm)

x12

x16


x20


 Pre-assembled

x120

x168

x216


 2" (5,1 cm)

x2


3" (7,6 cm)

x1

RL

Temporary Support
 2 x 4 x 24" (5,1 x 10,2 x 61 cm)



Build (2) rafter assemblies with(1) gusset (Fig. B).

✓ BEGIN

1 Measure 120-11/16 (306,5 cm) from the corner and install **RL** with (2) 3" screws. Place two rafter-halves on floor and flush in the corners of wall and **RL**. Flush rafters at peak. Secure gusset to rafters with 2" nails following the pattern shown (**Fig. A**).

HINT:
Use floor and walls to help assemble rafters!


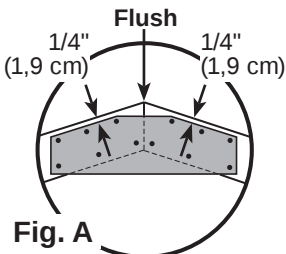


Fig. A

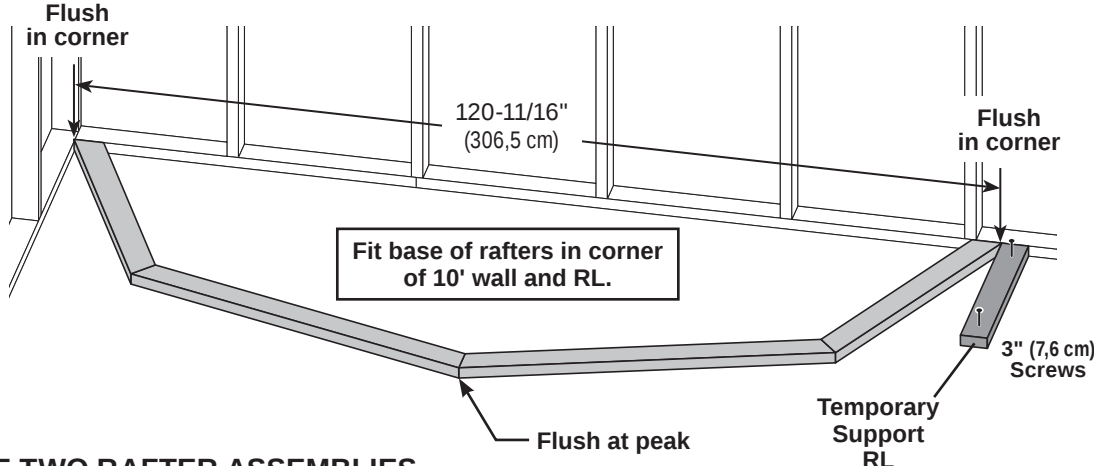

⚠ SET ASIDE THESE TWO RAFTER ASSEMBLIES.

Depending on your shed size, build 4 , 6 or 8 rafter assemblies with (2) gussets (Fig. C).

2 Place two rafter-halves on floor and flush in the corners of wall and **RL**, as shown in STEP - 1. Flush rafters at peak. Secure gusset to rafters with 2" nails following the pattern shown (**Fig. A**).

3 Flip over rafter assembly and fasten second gusset to other side with 2" nails (**Fig. C**).

Fig. C - Build 4, 6 or 8


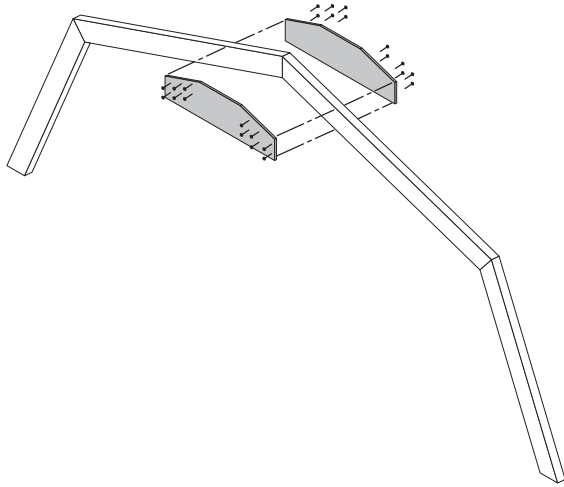


Fig. B - Build 2

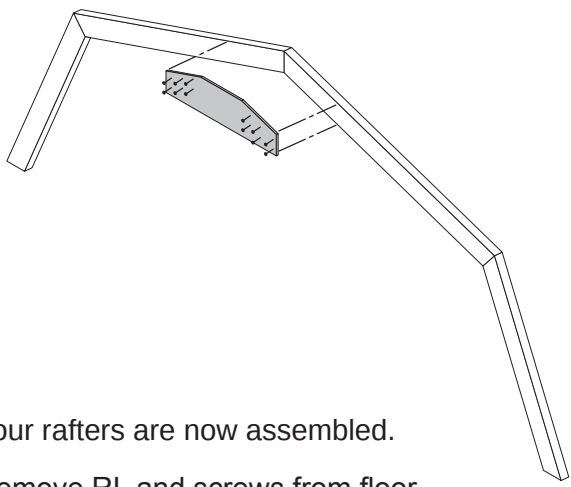

FINISH

Your rafters are now assembled.

Remove RL and screws from floor.

10x10' 10x14' **RAFTER INSTALLATION** 10x18'

PARTS REQUIRED:

x4	x6
x2	x2
x24	x32

Two-Gusset
Preassembled

One-Gusset
Preassembled



3" (7,6 cm)

Page 63

- ✓ **BEGIN**

1

Align rafters over the wall studs.
- Check that you have the measurements shown.
- Secure rafters with (2) 3" screws angled at each end (**Fig. A, Fig. B**).
- Secure rafters on opposite side.

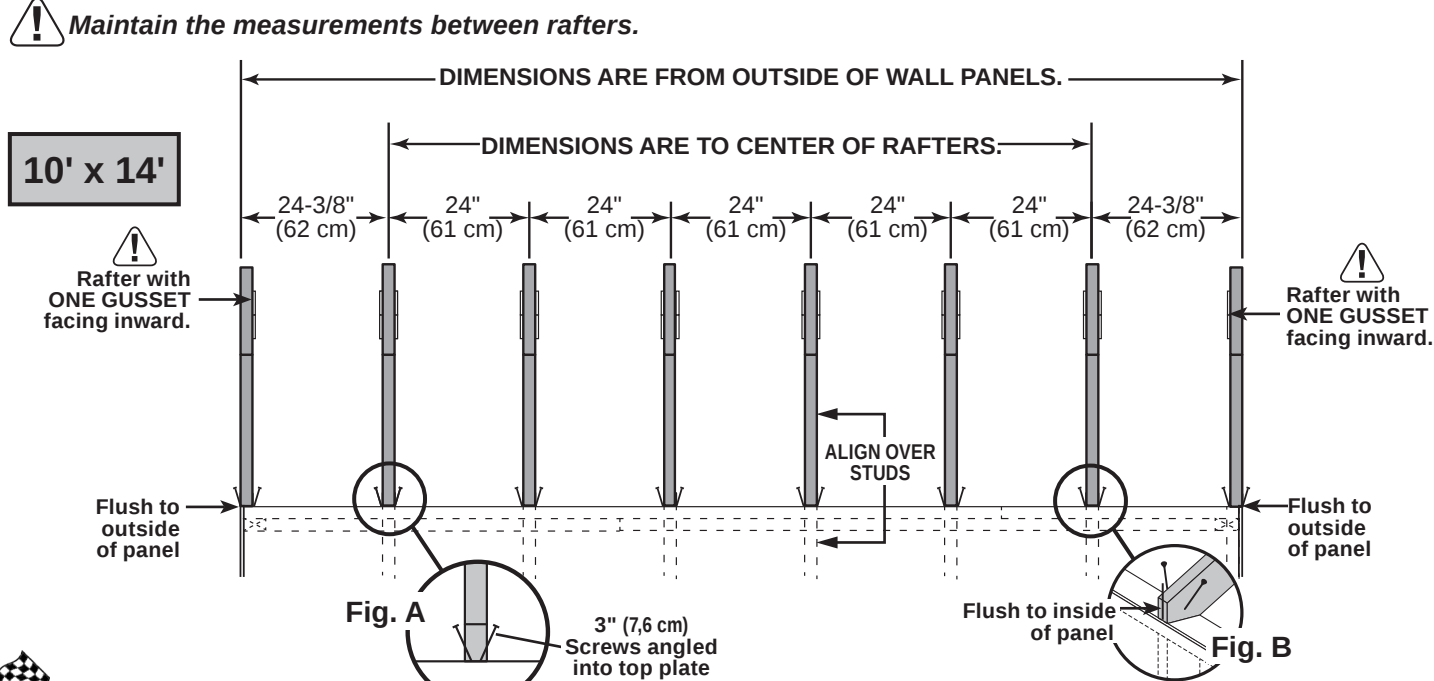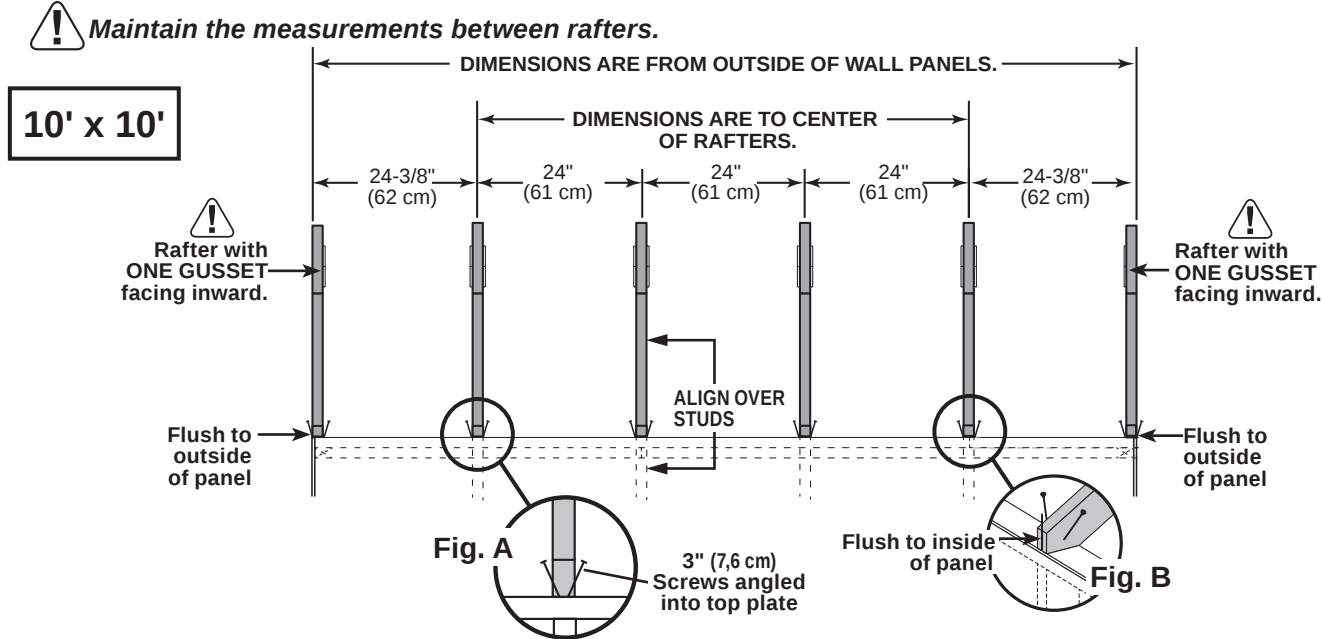

FINISH

Your rafters are now installed.

10x18'

RAFTER INSTALLATION

PARTS REQUIRED:



x8

x2

x40



Two-Gusset
Preassembled



One-Gusset
Preassembled



3" (7,6 cm)

✓ **BEGIN**


1 Align rafters over the wall studs.



- Check that you have the measurements shown.
- Secure rafters with (2) 3" screws angled at each end (**Fig. A, Fig. B**).
- Secure rafters on opposite side.

! *Maintain the measurements between rafters.*

10' x 18'

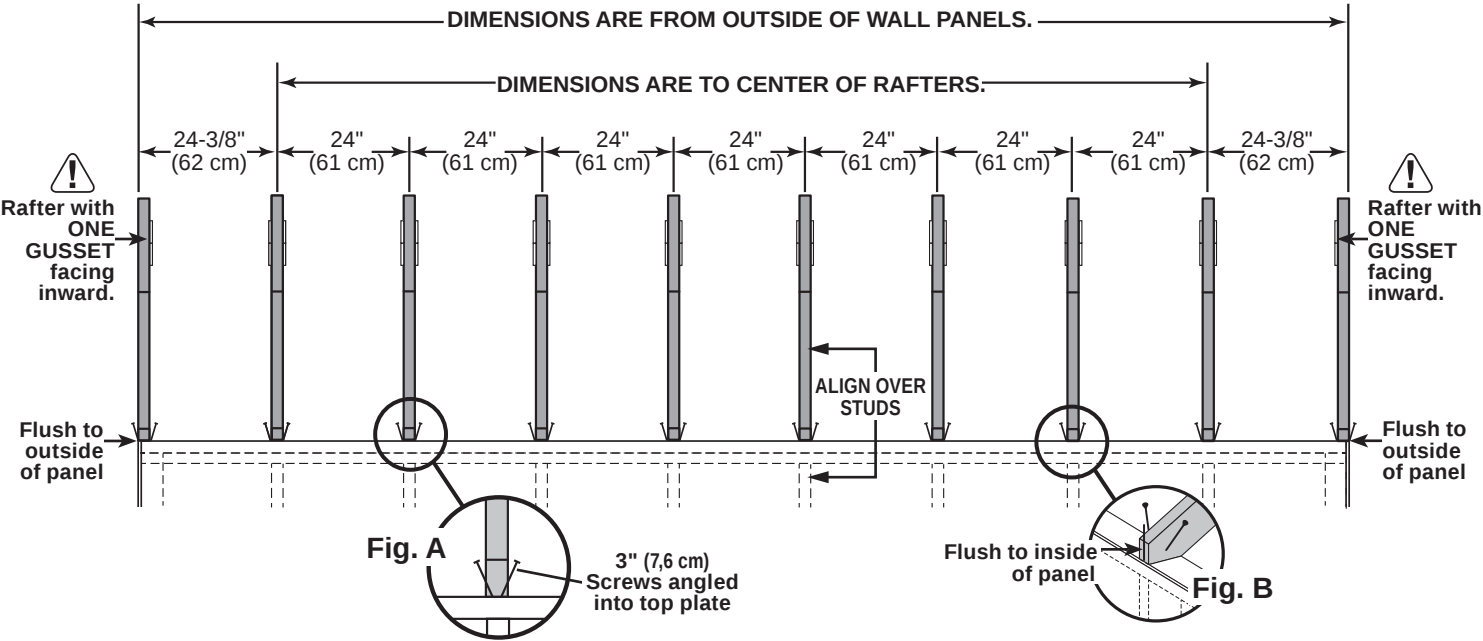

Your rafters are now installed.

GABLE HAY LOFT TRIM

PARTS REQUIRED:

x2 **JGA**
19/32" x 2-1/2" x 12-7/8" (1,6 x 7,6 x 32,7 cm)

x4 **KX**
19/32" x 2-1/2" x 21-3/4" (1,6 x 7,6 x 55,2 cm)

x1 **LKA**
19/32" x 2-1/2" x 25-3/4" (1,6 x 7,6 x 65,4 cm)



x14 2" (5,1 cm)

x20 3/4" (1,9 cm)

x2 **QL Temporary Support**
2 x 4 x 39" (5,1 x 10,2 x 99,1 cm)



✓ BEGIN


- 1 Set gable center panel on top of (2) **QL**, as shown.

Measure and mark the 12" (30, cm) center of the gable panel and 7-1/2" (19,1 cm) from bottom of panel.

- 2 Arrange trim parts as shown, with all connections flush.

Secure with 2" finishing nails, (2) in each part.


You are finished with the temporary supports.
Set them aside.

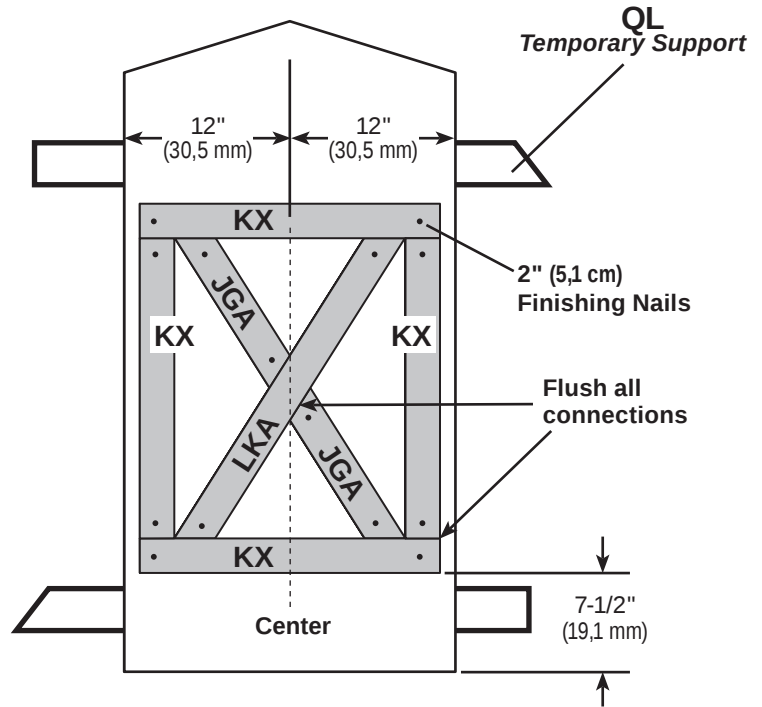

- 3 Turn the panel (with trim attached) over.

Secure each part with 3/4" screws between nails, as shown.


Snip off the protruding nails.

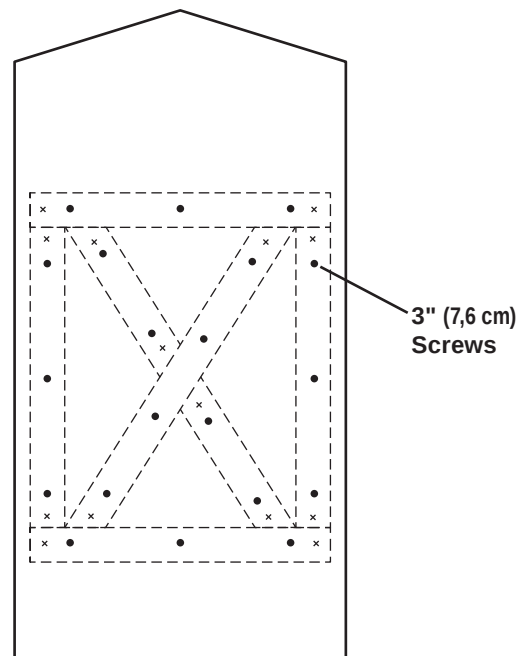

Your gable panel with hay loft trim is now assembled.


GABLE PANELS

PARTS REQUIRED:

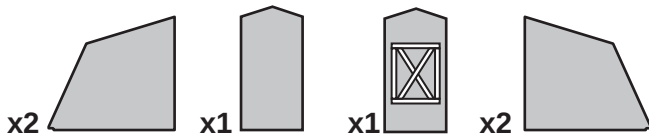

x4 **QL**
2 x 4 x 39" (5,1 x 10,2 x 99,1 cm)





x24 1-1/2" (3,8cm)



Install gable panels with the primed side facing up.

✓ BEGIN



- 1** Orient parts **QL** on the flat side, as shown.
Measure and mark the center of the middle gable panel. Secure with 1-1/2" nails spaced 6" apart along edge.
- 2** Place end panels on **QL** flush to installed panel and secure with 1-1/2" nails spaced 6" apart along edge.
Repeat STEP 2 for right panel.
Repeat STEPS 1 - 3 for opposite side gable panels.

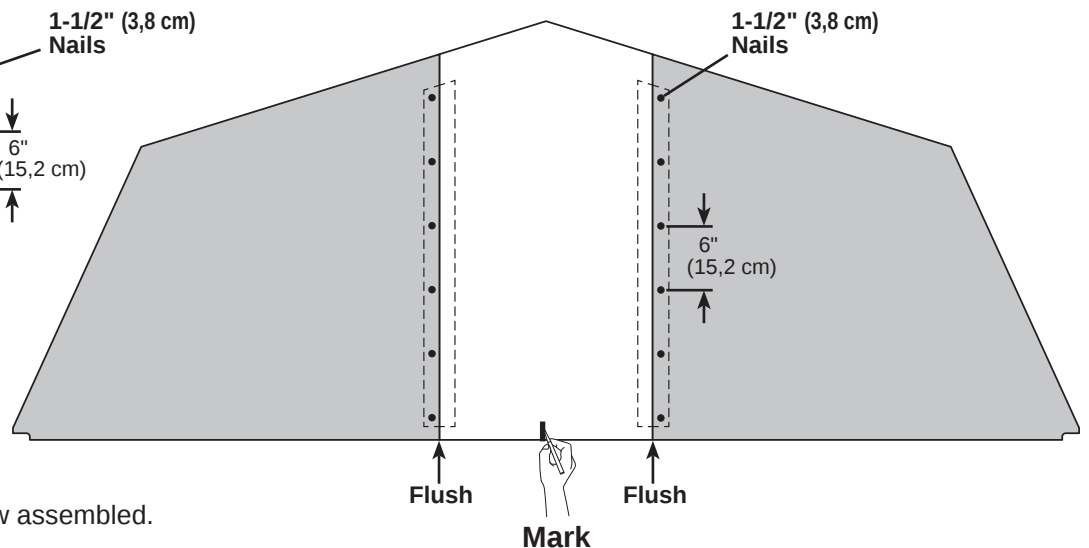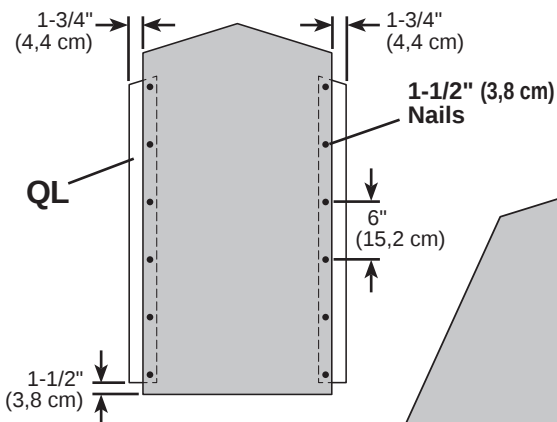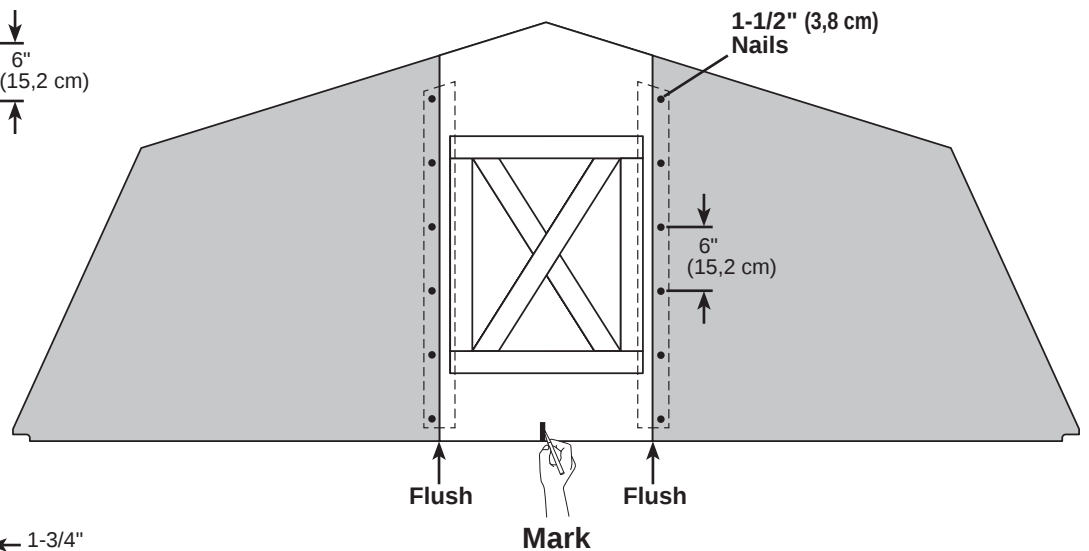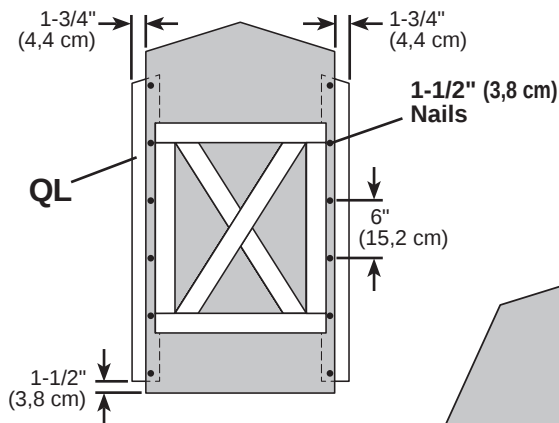

Your gable units are now assembled.

GABLE INSTALLATION

PARTS REQUIRED:

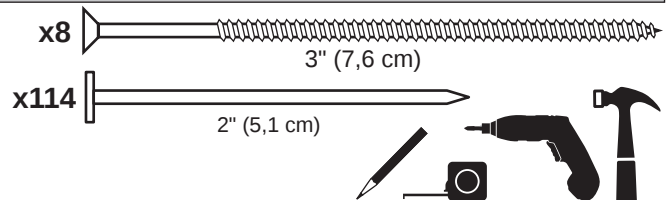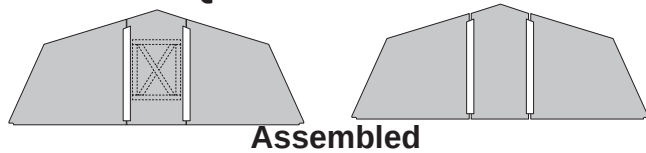

✓ BEGIN




- 1 Measure 1-1/2" down from top plate doubler and mark at each side as shown. Set gable unit on top plate. Fasten with (1) 2" nail on each side.

⚠ BE SURE GABLE IS CENTERED ON WALL BEFORE NAILING. ⚠

Continue nailing lower edge of panels to wall doubler with 2" nails spaced 6" apart.

- 2 Working inside, secure gable unit with (2) 3" screws angled into each QL at an angle (**Fig. A**).

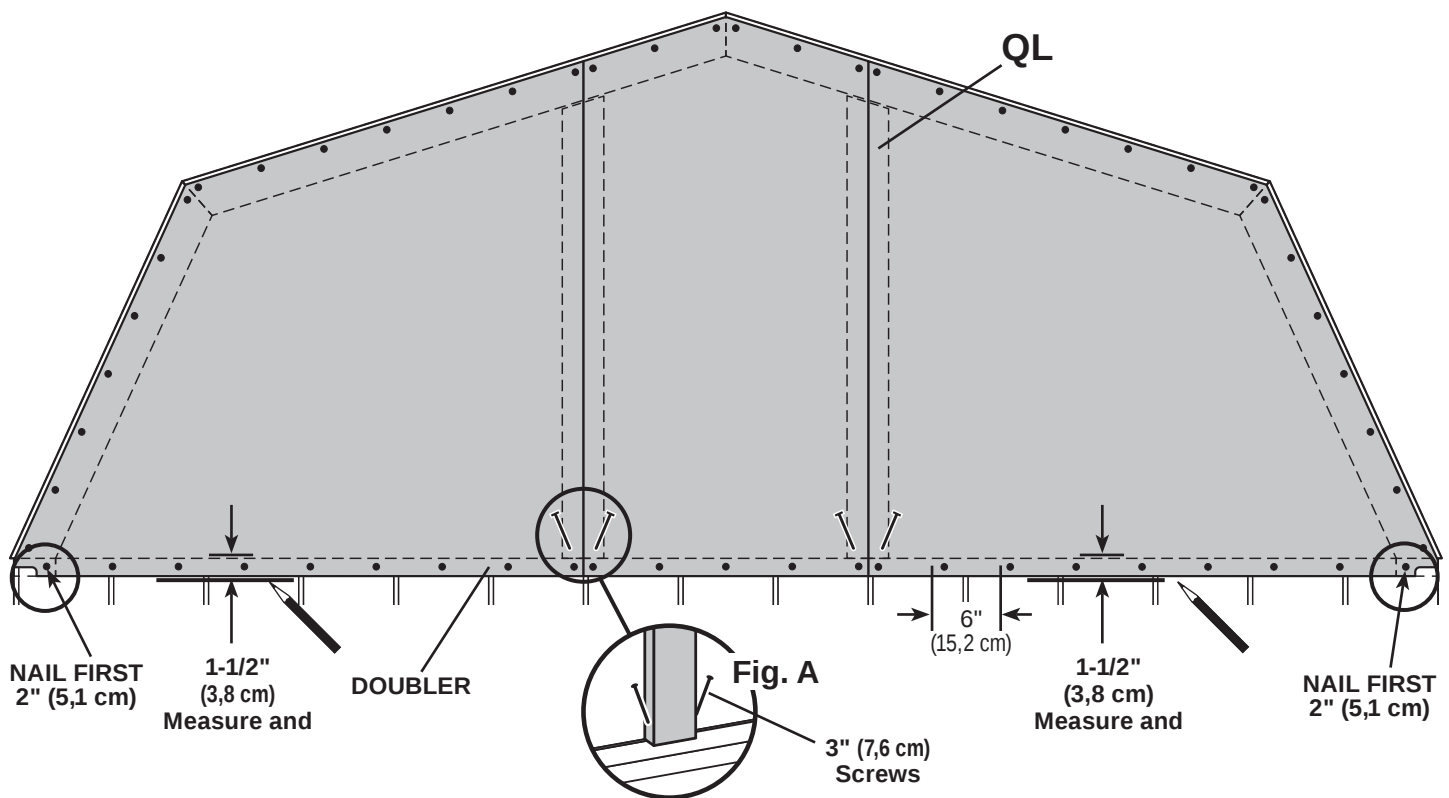

Repeat steps for installation of the opposite side 10' gable (with hay loft trim).



Your gable units are now installed.

10' x 10' ROOF PANELS

PARTS REQUIRED:


x1



7/16 x 48 x 96"
(1,1 x 121,9 x 243,8 cm)

GAA
3/4" GAUGE
BLOCK

x4 2" (5,1 cm)

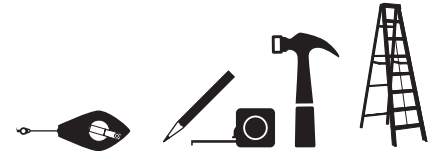

Roof panels may cause serious injury until securely fastened.


Note: Install all roof panels with the rough side up (painted grid lines).



✓ BEGIN


- 1 Place the 48" x 96" panel on rafters with a 3/4" measurement on the rafter (Fig. A) and the panel flush at the peak (Fig. B).

Secure panel with (2) 2" nails in the corners.

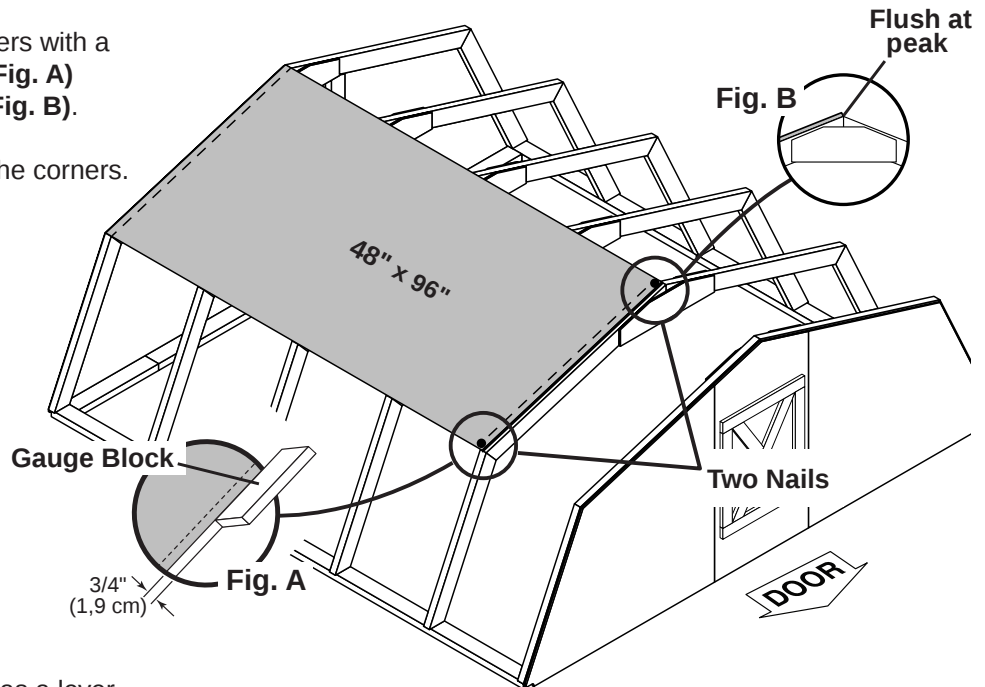



- 2 Move to the opposite end. Using the long edge of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (Fig. B) and there is a 1/2" measurement on the gable end rafter (Fig. C).

Secure panel with (2) 2" nails in the corners.

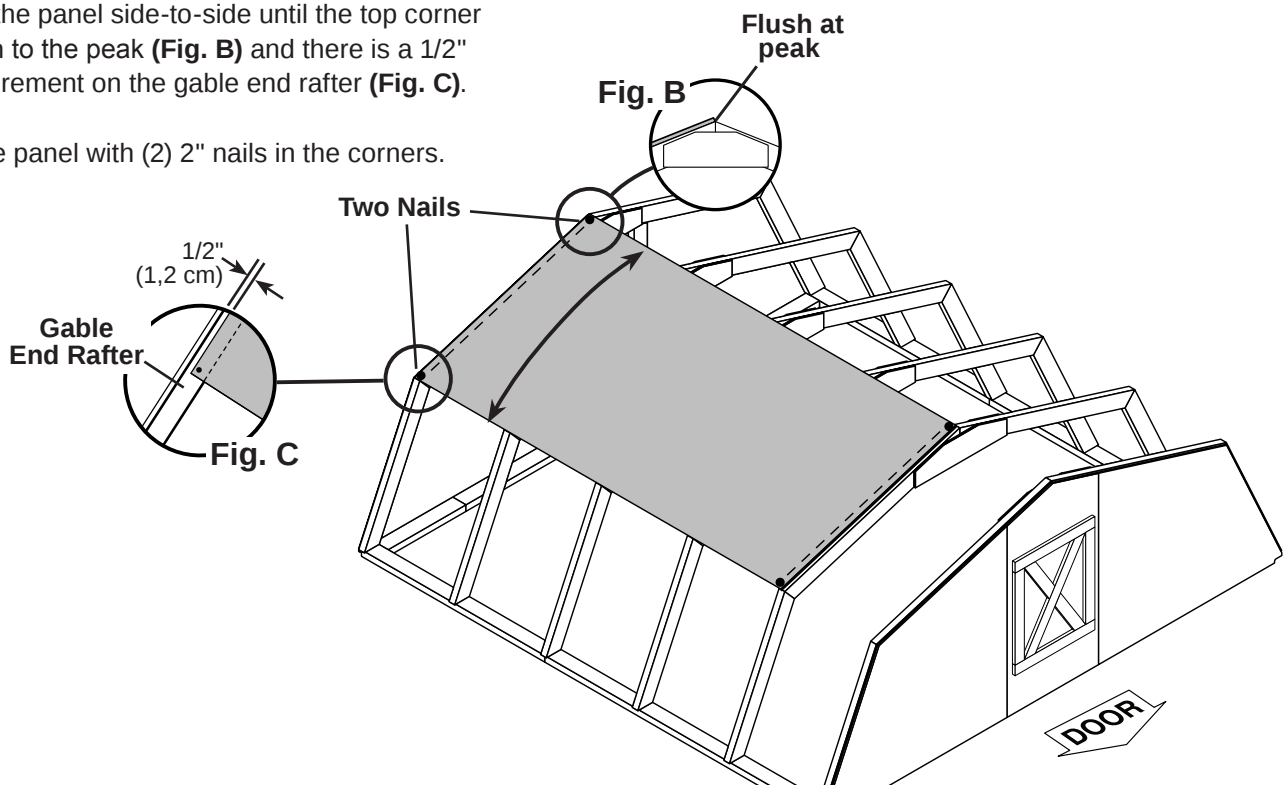

10' x 10' ROOF PANELS

PARTS REQUIRED:

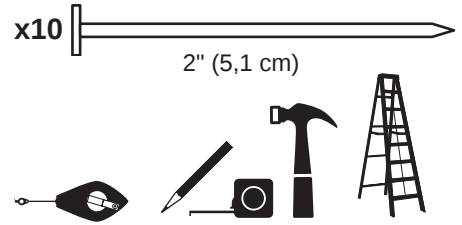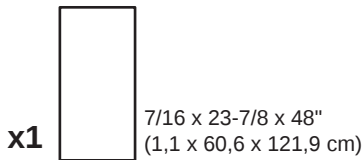

- 3** Install a 23-7/8" x 48" roof panel flush to the installed panel and flush at peak (**Fig. B**).

Secure panel with (1) 2" nail in each corner.

- 4** Move the gable end rafter edge until it is 1/2" from the 23-7/8" x 48" roof panel (**Fig. C**).

Finish securing panel with (1) 2" nail in each corner.

- 5** Maintain spacing between the center of the rafters at the lower edge of the panels (**Fig. D**).

Secure panels with (1) 2" nail into each rafter, as shown.

Move to the top of the panel and keep spacing between the center of the rafters.

Secure panels with (1) 2" nail into each rafter.


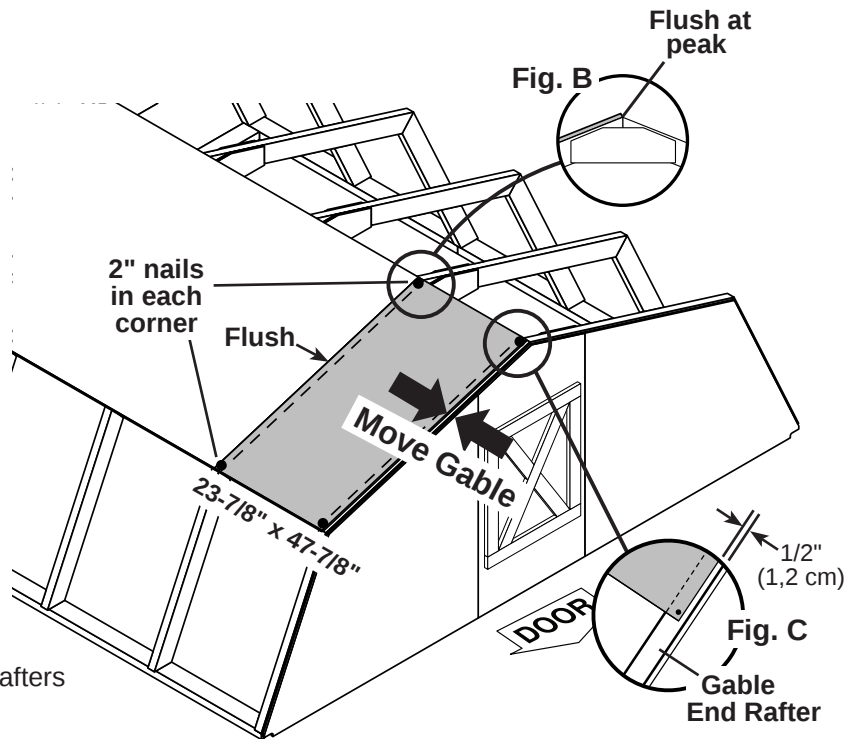


Fig. D

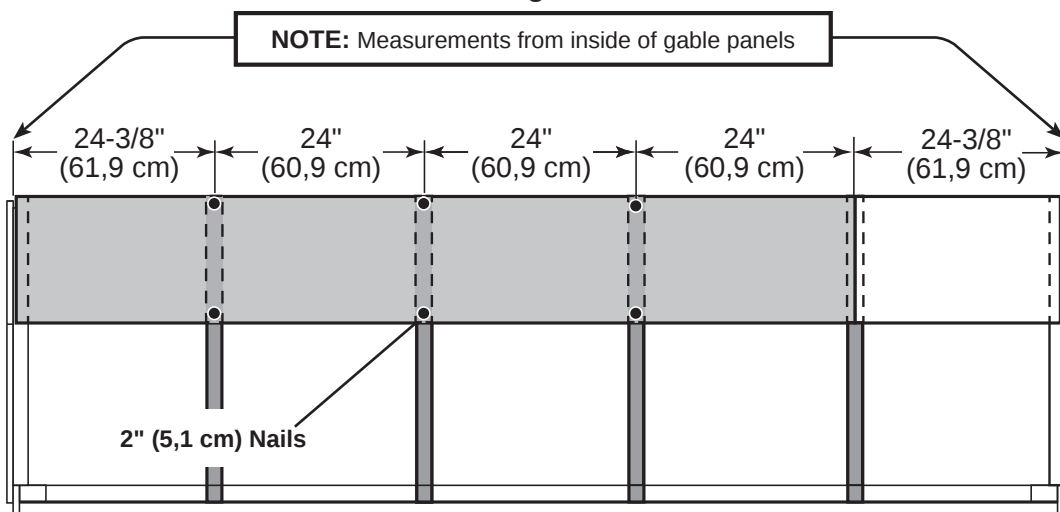

10' x 10' ROOF PANELS

PARTS REQUIRED:

☐ x2		☐ x2	
	23-7/8" x 96" (60,6 x 243,8 cm)		23-7/8" x 24" (60,6 x 61 cm)
☐ x2		☐ x2	
	11-7/8" x 96" (30,2 cm x 243,8 cm)		11-7/8" x 24" (30,2 x 61 cm)


x16 2" (5,1 cm)

3/4" GAUGE BLOCK



- 6** Next, install **23-7/8" x 48"** and **23-7/8" x 96"** roof panels with a **3/4"** measurement on the rafter (**Fig A**) and flush to the installed panels (**Fig. E**).


Secure panels with (1) 2" nail in each corner.

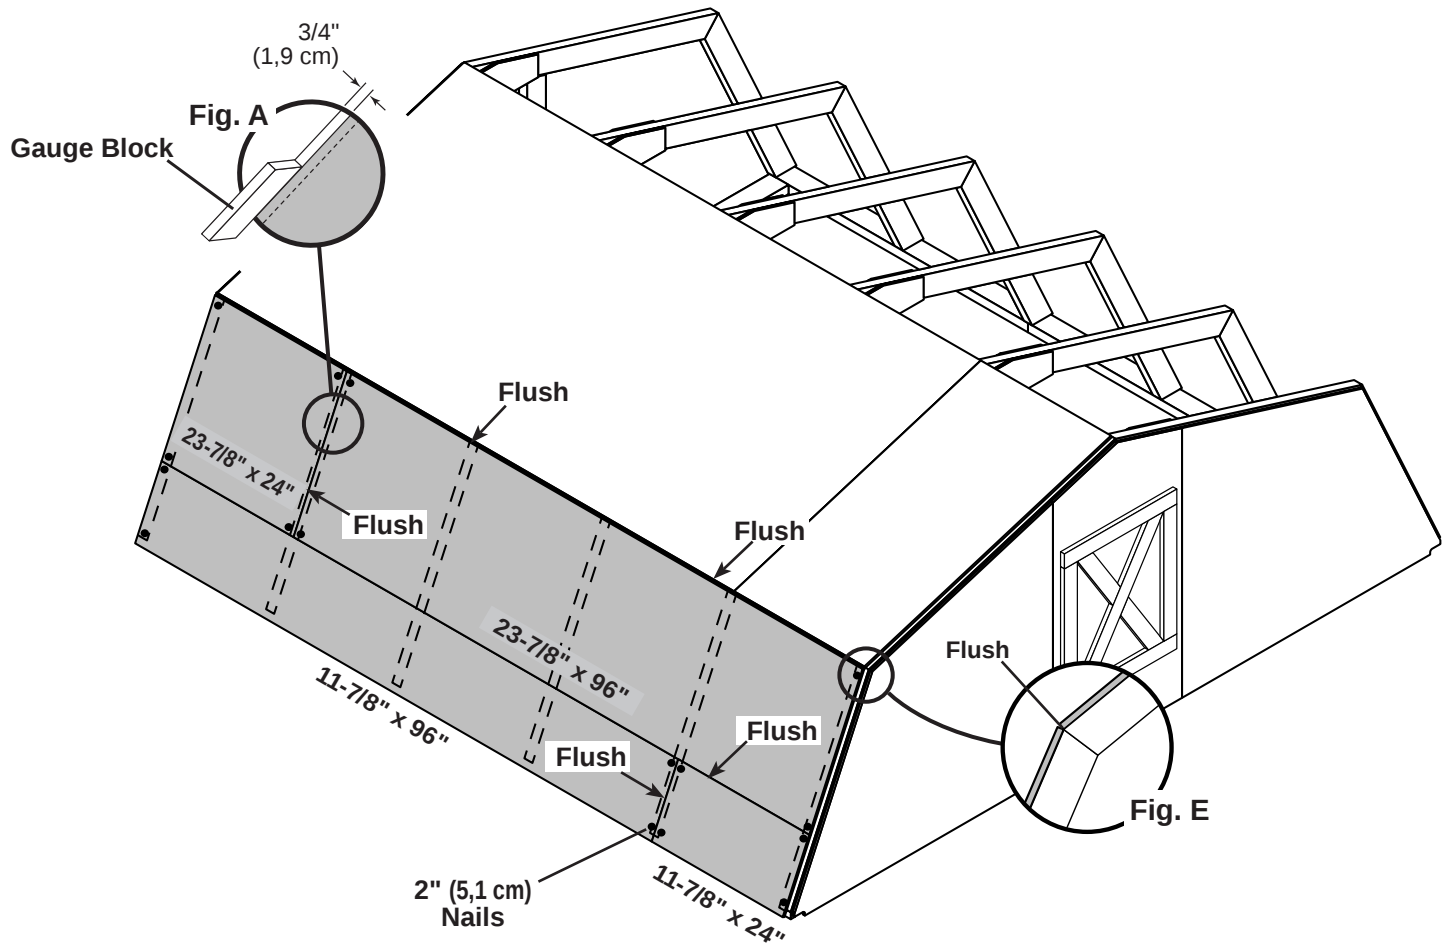


- 7** Install **11-7/8" x 96"** and **11-7/8" x 24"** roof panels flush to the installed panels. Secure panels with (1) 2" nail in each corner.

10' x 10' ROOF PANELS


PARTS REQUIRED:

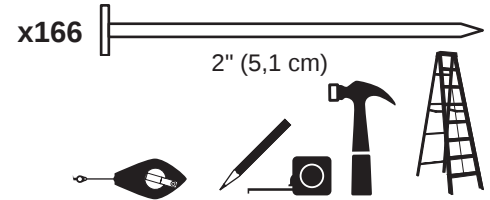

- 8 Secure all roof panels with 2" nails spaced 6" apart and 12" apart inside of the upper panels.

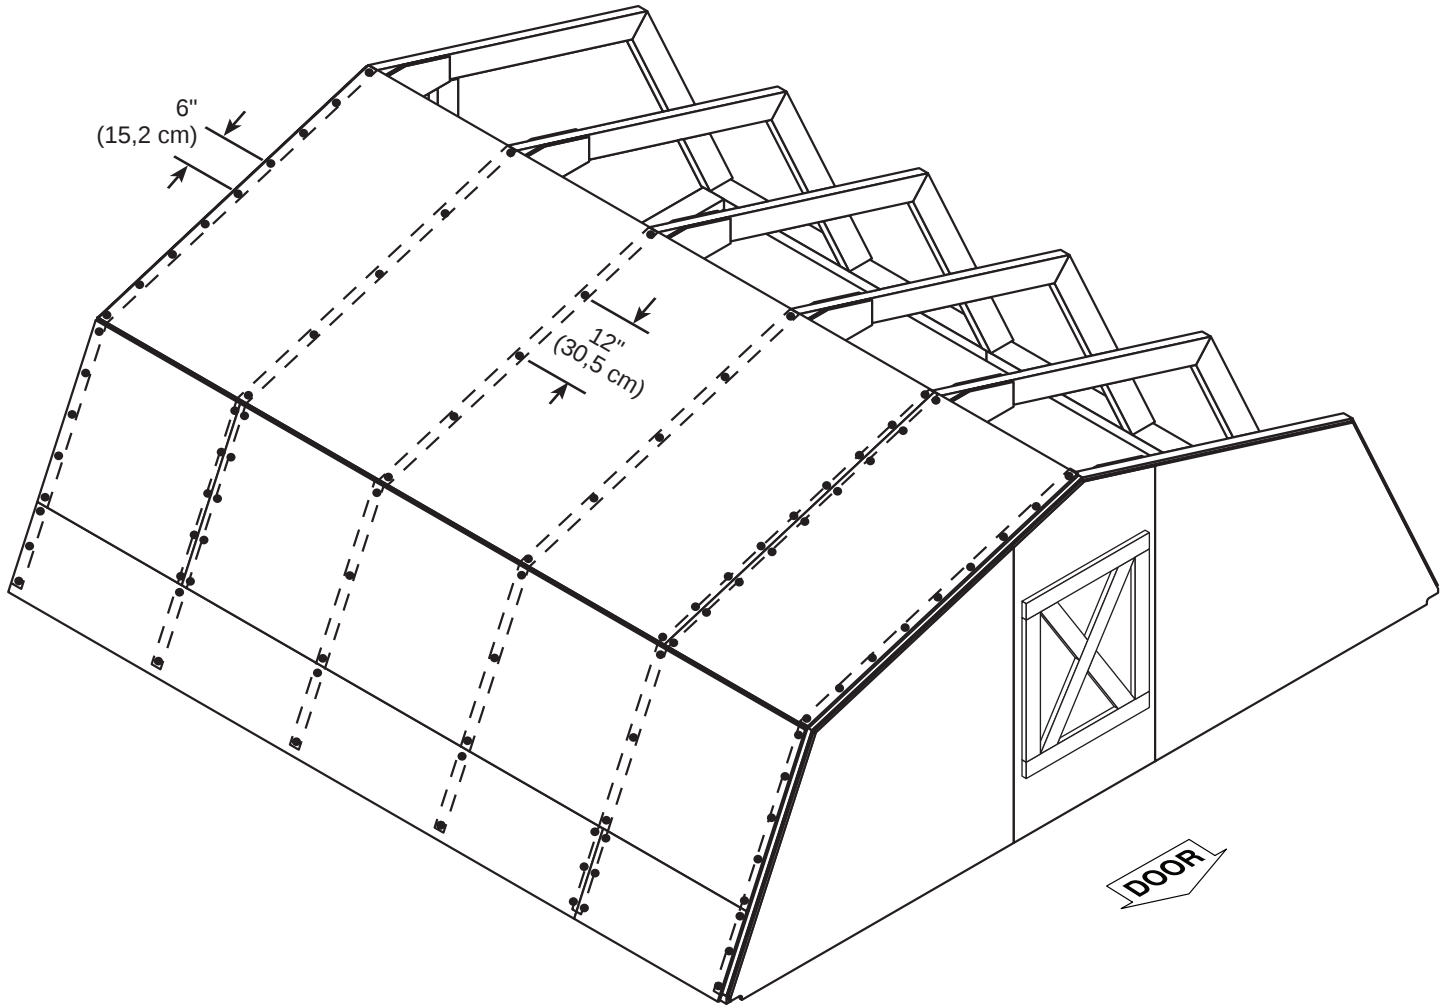

Repeat all steps to install roof panels on the opposite side.

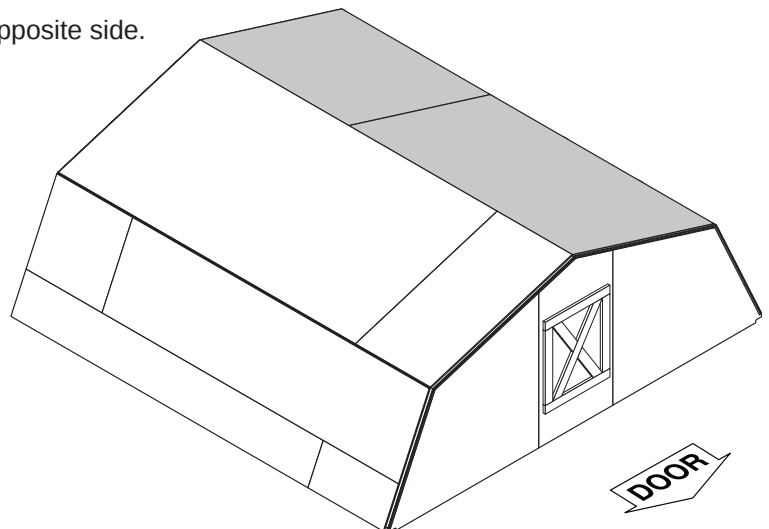


FINISH

Your roof panels are now installed.

10' x 14' ROOF PANELS

PARTS REQUIRED:

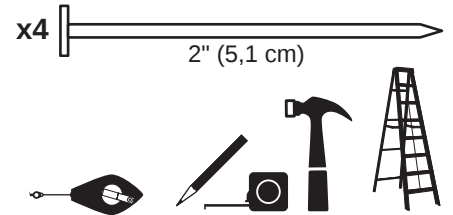


⚠ Roof panels may cause serious injury until securely fastened.
Note: Install all roof panels with the rough side up (painted grid lines).

✓ BEGIN

1

Place the **48" x 96"** panel on rafters with a 3/4" measurement on the rafter (**Fig. A**) and the panel flush at the peak (**Fig. B**).

Secure panel with (1) 2" nail in each corner.

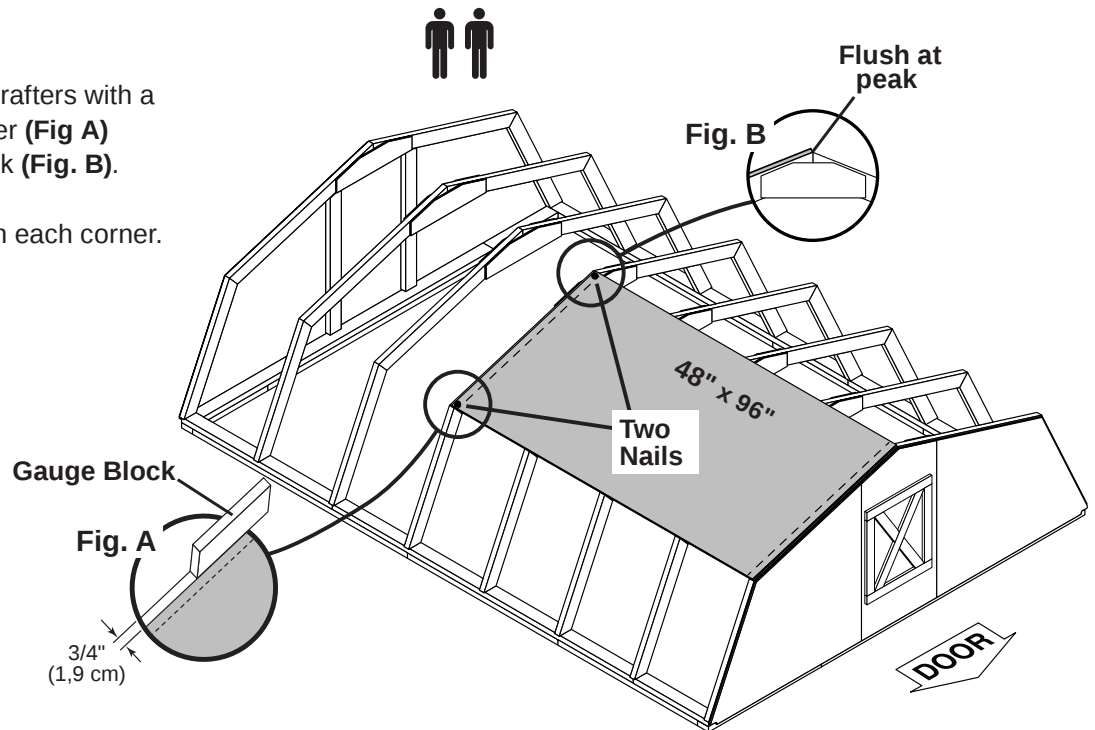


2

Move to the opposite end.
Using the long edge of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (**Fig. B**).



Move gable end rafter edge until it is 1/2" from the **48" x 47-7/8"** roof panel (**Fig. C**).

Secure panel with (1) 2" nail in each corner.

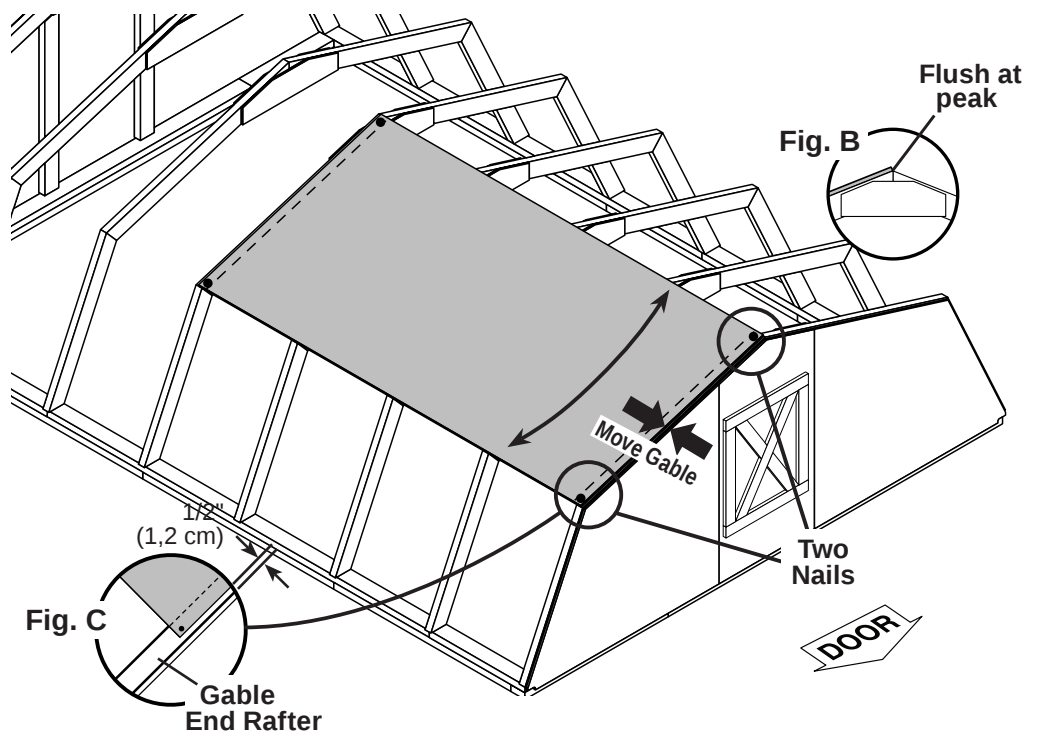

10' x 14' ROOF PANELS


PARTS REQUIRED:

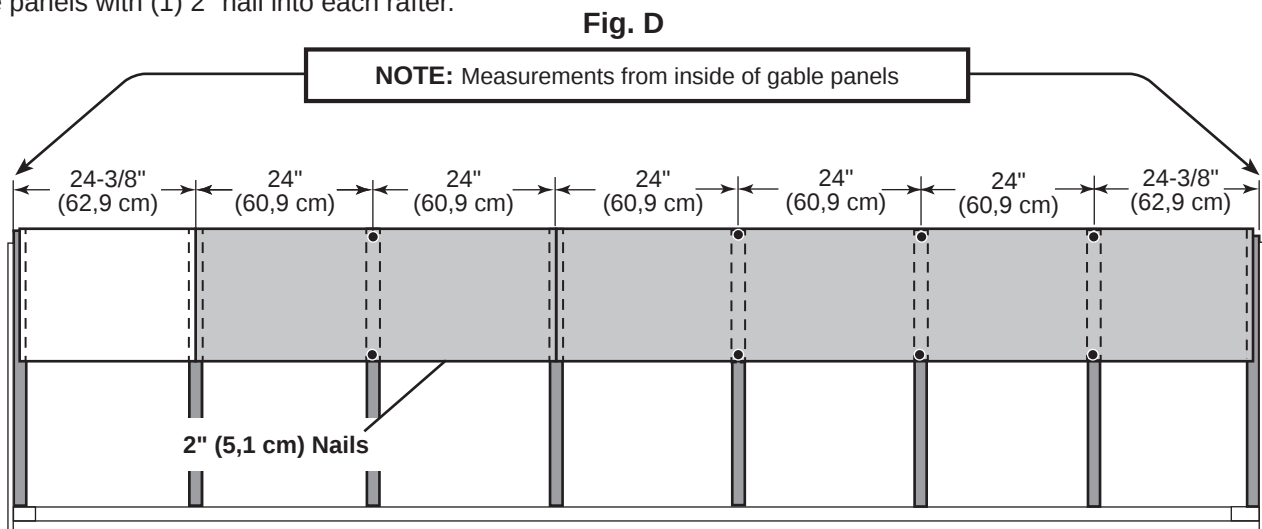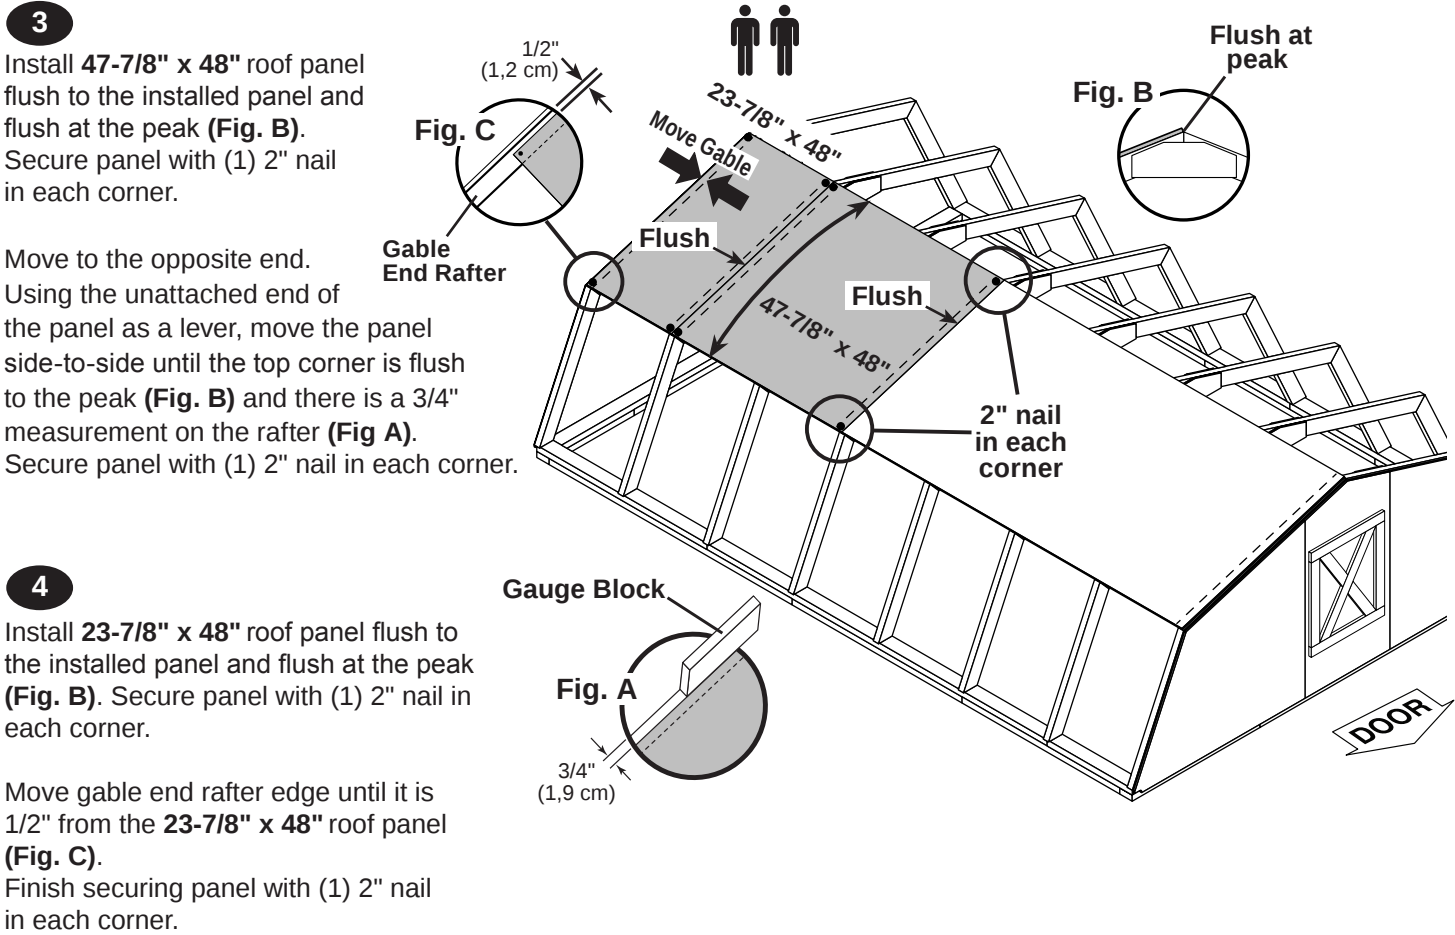

10' x 14' ROOF PANELS

PARTS REQUIRED:


☐ x2		☐ x2		☐ x2	
	23-7/8" x 96" (60,6 x 243,8 cm)		23-7/8" x 24" (60,6 x 61 cm)		23-7/8" x 48" (60,6 x 121,9 cm)
☐ x2		☐ x2		☐ x2	
	11-7/8" x 96" (30,2 cm x 243,8 cm)		11-7/8" x 24" (30,2 x 61 cm)		11-7/8" x 48" (30,2 x 121,9 cm)

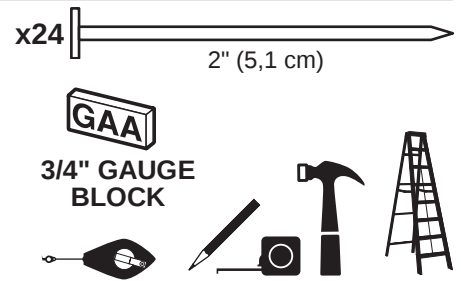

6

Install **23-7/8" x 96"** roof panel with a 3/4" measurement on the rafter (**Fig A**) and flush to the upper installed panels (**Fig. E**).


Secure panel with (1) 2" nail in each corner.

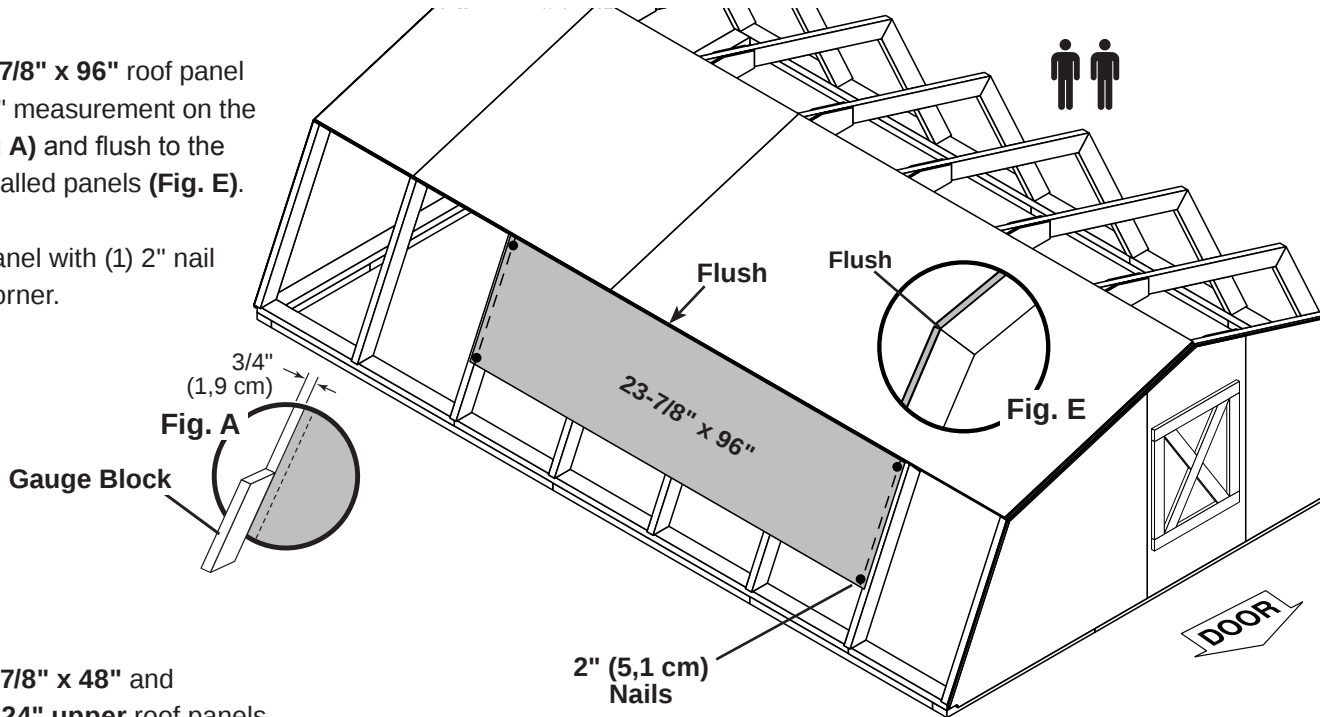

7

Install **23-7/8" x 48"** and **23-7/8" x 24"** upper roof panels flush to the installed panels (**Fig. E**).

Secure panels with (1) 2" nail in each corner.

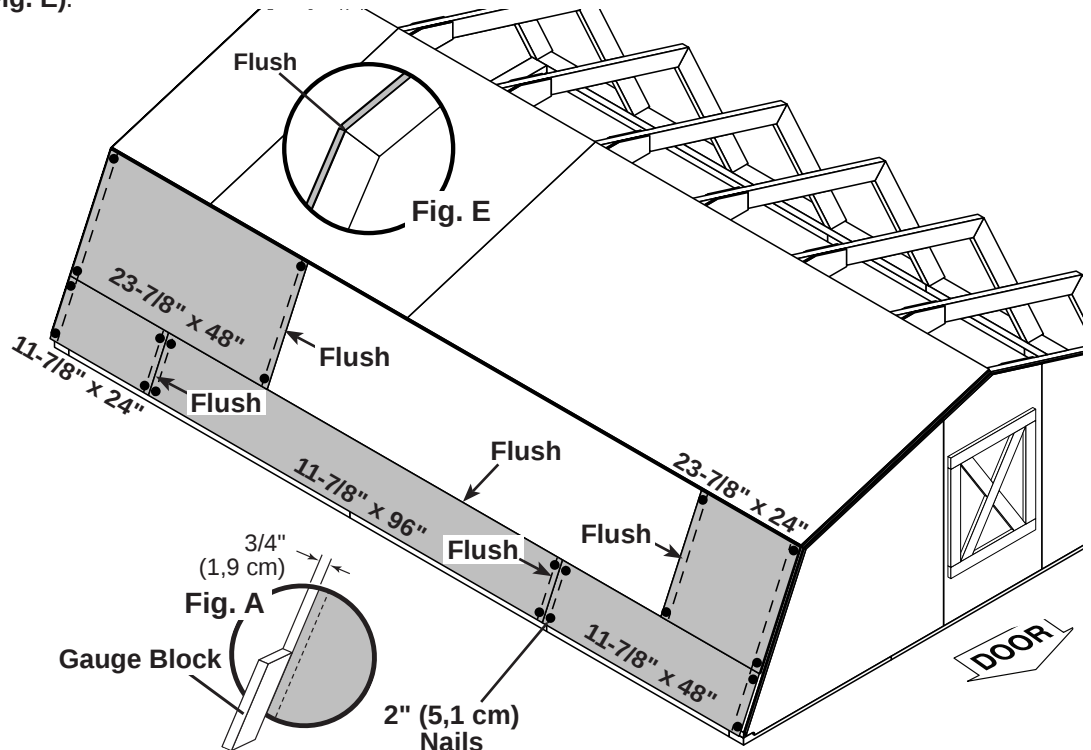

8


Install **11-7/8" x 96"** panel with a 3/4" measurement on the rafter (**Fig A**) and flush to the installed panels.

Secure panels with (1) 2" nail in each corner.

9


Install **11-7/8" x 48"** and **11-7/8" x 24"** roof panels flush to the installed panels.

Secure panels with (1) 2" nail in each corner.

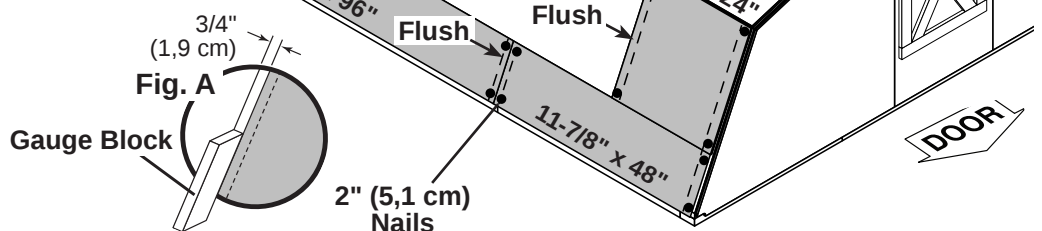


10' x 14 ROOF PANELS


PARTS REQUIRED:

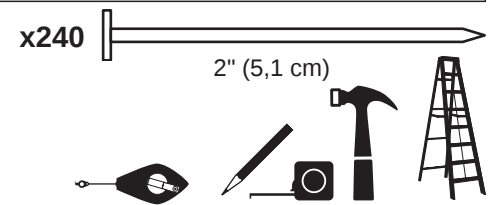

- 10** Secure all roof panels with 2" nails spaced 6" apart and 12" apart inside panels.

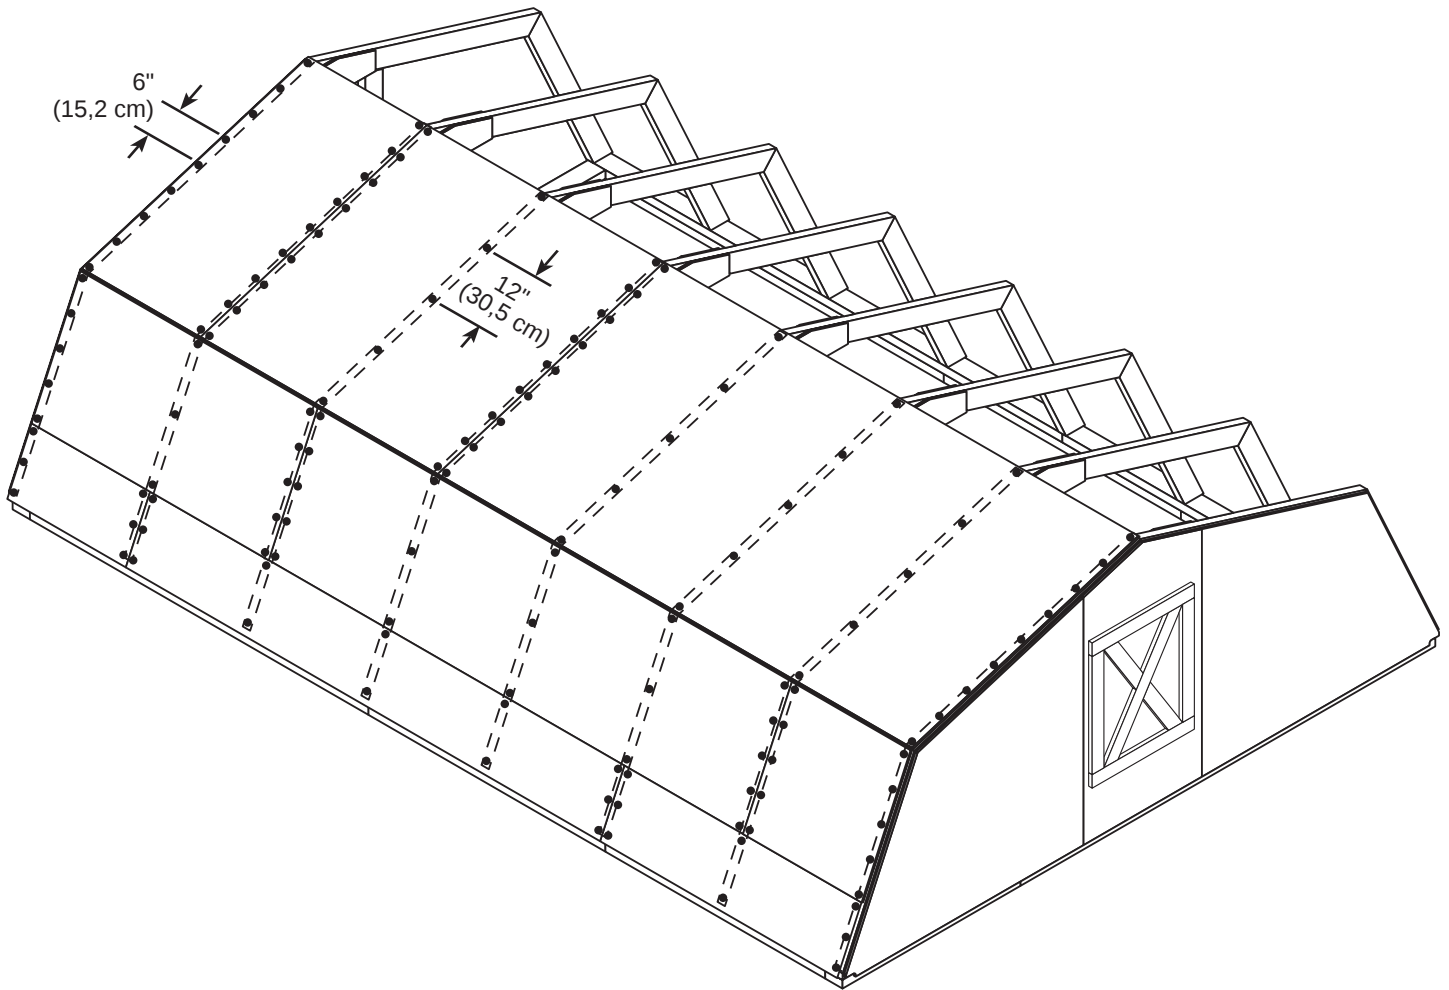

Repeat all steps to install roof panels on the opposite side.

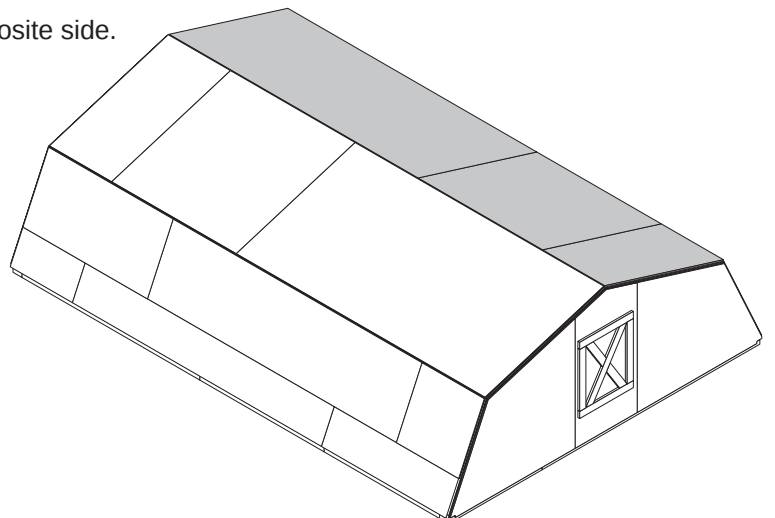

Your roof panels are now installed.

10' x 18' ROOF PANELS

PARTS REQUIRED:



3/4" GAUGE
BLOCK

x1



48 x 96"
(121,9 x 243,8 cm)

x4 2" (5,1 cm)



Roof panels may cause serious injury until securely fastened.

Note: Install all roof panels with the rough side up (painted grid lines).




✓ BEGIN

1

Place the **48" x 96"** panel on rafters with a 3/4" measurement on the rafter (**Fig A**) and the panel flush at the peak (**Fig. B**).

Secure panel with (1) 2" nail in each corner.

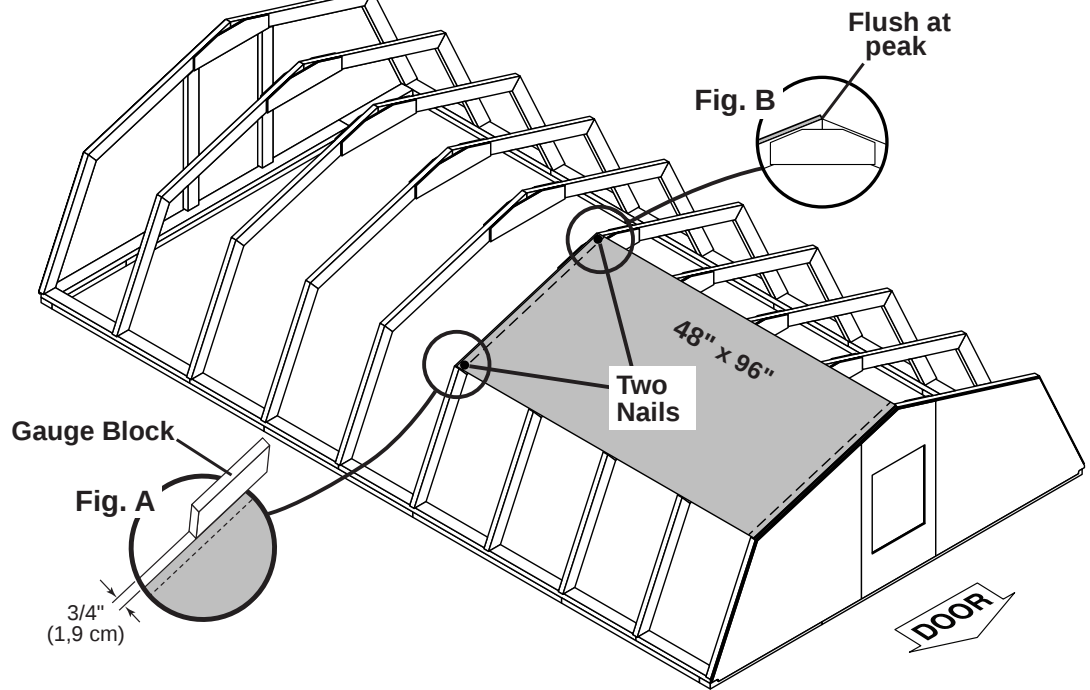


2

Move to the opposite end. Using the long edge of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (**Fig. B**).

Move gable end rafter edge until it is 1/2" from the **48" x 47-7/8"** roof panel (**Fig. C**).

Secure panel with (1) 2" nail in each corner.

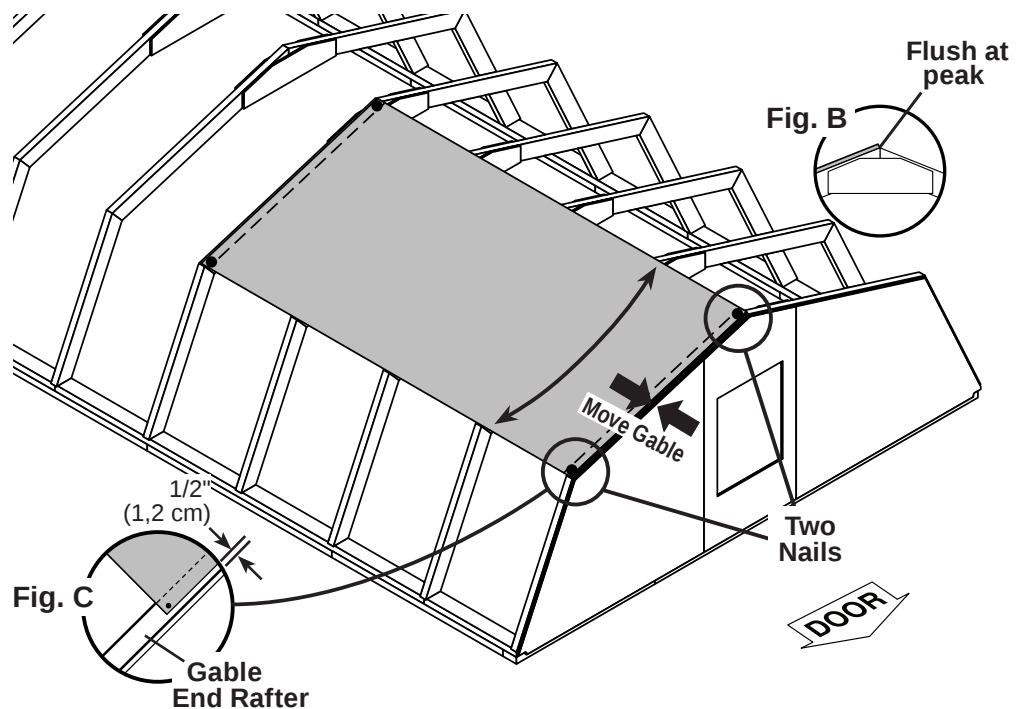

10' x 14' ROOF PANELS

PARTS REQUIRED:



3/4" GAUGE
BLOCK

x1

23-7/8" x 48"
(121,6 x 121,9 cm)

x2



47-7/8" x 48"
(121,6 x 121,9 cm)



x22



2" (5,1 cm)

3



Install 23-7/8" x 48" roof panel flush to the installed panel and flush at the peak (**Fig. B**). Secure panel with (1) 2" nail in each corner (**see: Fig. A**).

4

Install 47-7/8" x 48" roof panel flush to the installed panel and flush at the peak (**Fig. B**). Secure panel with (1) 2" nail in each corner.

Move to the opposite end. Using the unattached end of the panel as a lever, move the panel side-to-side until the top corner is flush to the peak (**Fig. B**) and there is a 3/4" measurement on the rafter (**Fig A**). Secure panel with (1) 2" nail in each corner.

5

Install 2nd 47-7/8" x 48" roof panel flush to the installed panel and flush at the peak (**Fig. B**). Secure panel with (1) 2" nail in each corner.

Move gable end rafter edge until it is 1/2" from the 23-7/8" x 48" roof panel (**Fig. C**).

Finish securing panel with (1) 2" nail in each corner.

6

Maintain spacing between the center of the rafters at the lower edge of the panels (**Fig. D**).

Secure panels with (1) 2" nail into each rafter, as shown.

Move to the top of the panel and keep spacing between the center of the rafters.

Secure panels with (1) 2" nail into each rafter.


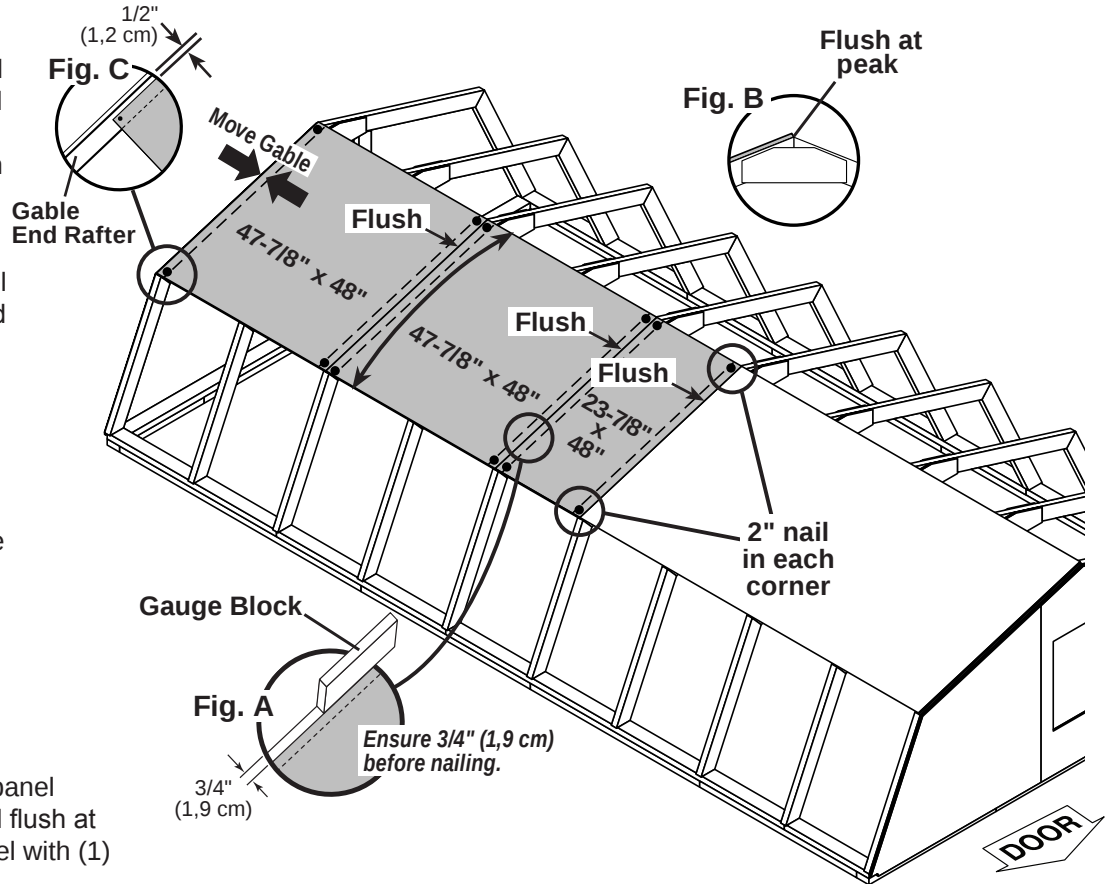



Fig. D


NOTE: Measurements from inside of gable panels

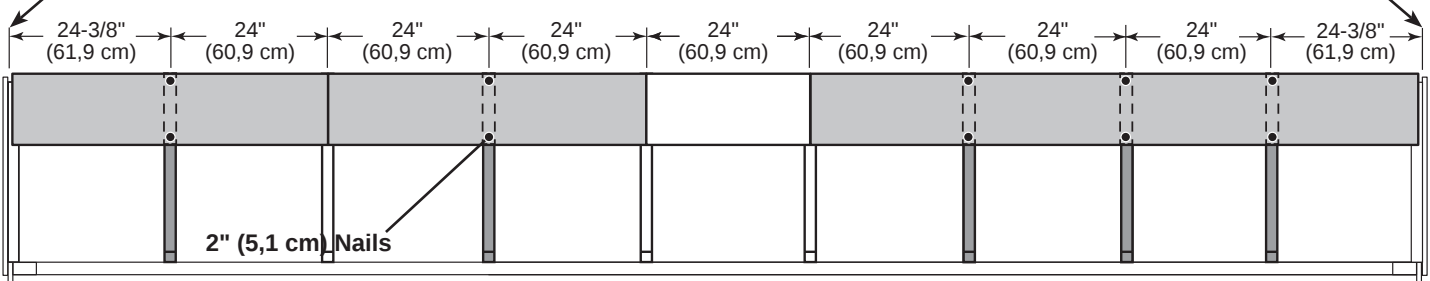

10' x 14' ROOF PANELS

PARTS REQUIRED:



 x2	 23-7/8" x 96" (60,6 x 243,8 cm)	 x2	 23-7/8" x 24" (60,6 x 61 cm)	 x2	 23-7/8" x 48" (60,6 x 121,9 cm)
 x2	 11-7/8" x 96" (30,2 cm x 243,8 cm)	 x2	 11-7/8" x 24" (30,2 x 61 cm)	 x2	 11-7/8" x 48" (30,2 x 121,9 cm)

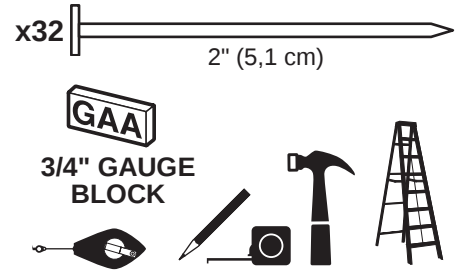

6

Install **23-7/8" x 96"** roof panel with a 3/4" measurement on the rafter (**Fig. A**) and flush to the upper installed panels (**Fig. E**).

Secure panel with (1) 2" nail in each corner.

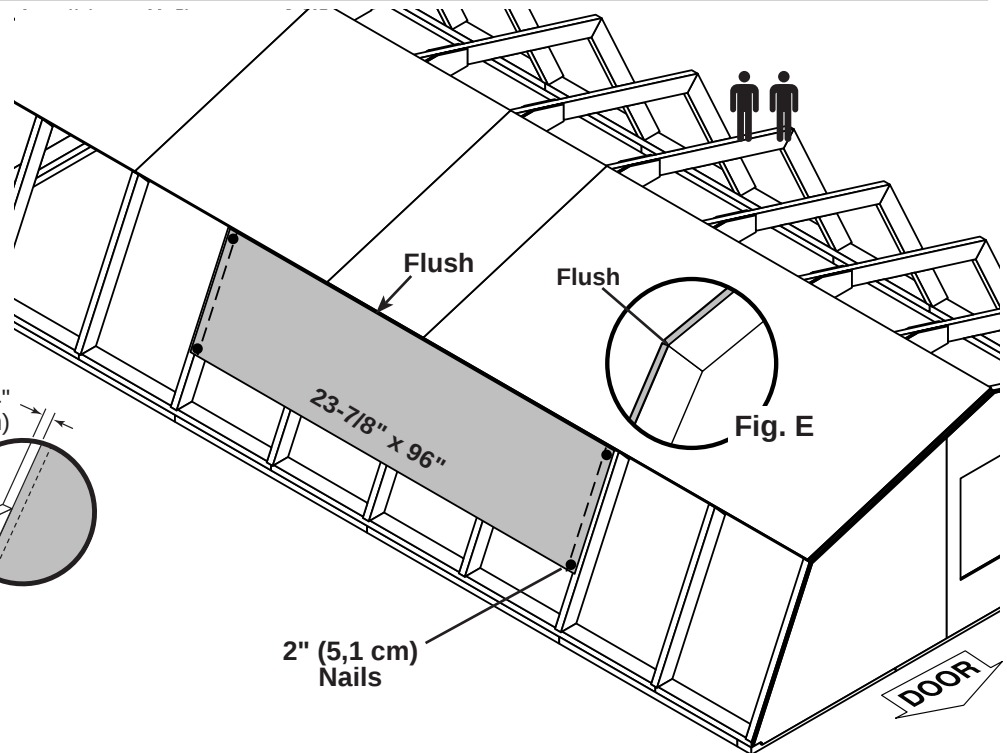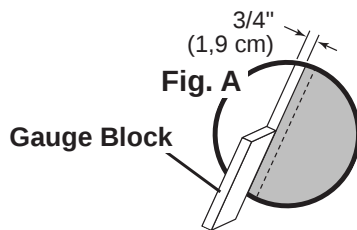

7


Install (2) **23-7/8" x 48"** and (1) **11-7/8" x 24"** upper roof panels flush to the installed panels (**Fig. E**).

Secure panels with (1) 2" nail in each corner.

8

Install **11-7/8" x 96"** panel with a 3/4" measurement on the rafter (**Fig. A**) and flush to the installed panels.

Secure panels with (1) 2" nail in each corner.

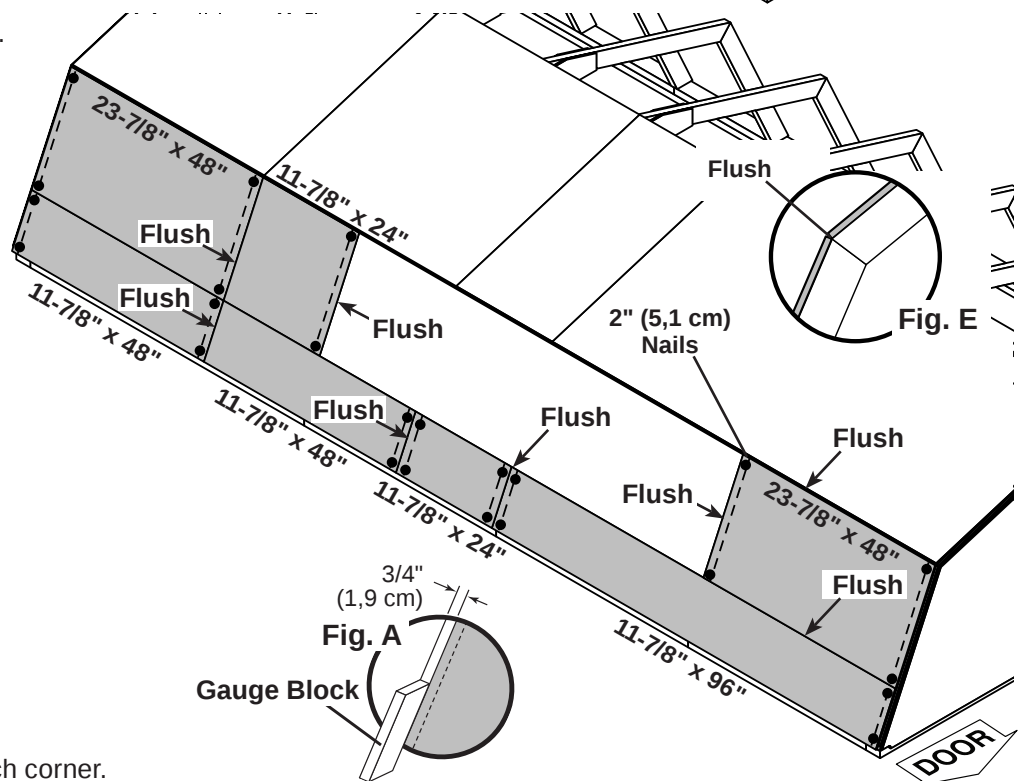

9


Install **11-7/8" x 96"**, **11-7/8" x 24"** and (2) **11-7/8" x 48"** roof panels flush to the installed panels.

Secure panels with (1) 2" nail in each corner.


10' x 14' ROOF PANELS

PARTS REQUIRED:



x314  2" (5,1 cm)


- 10** Secure all roof panels with 2" nails spaced 6" apart and 12" apart inside panels.

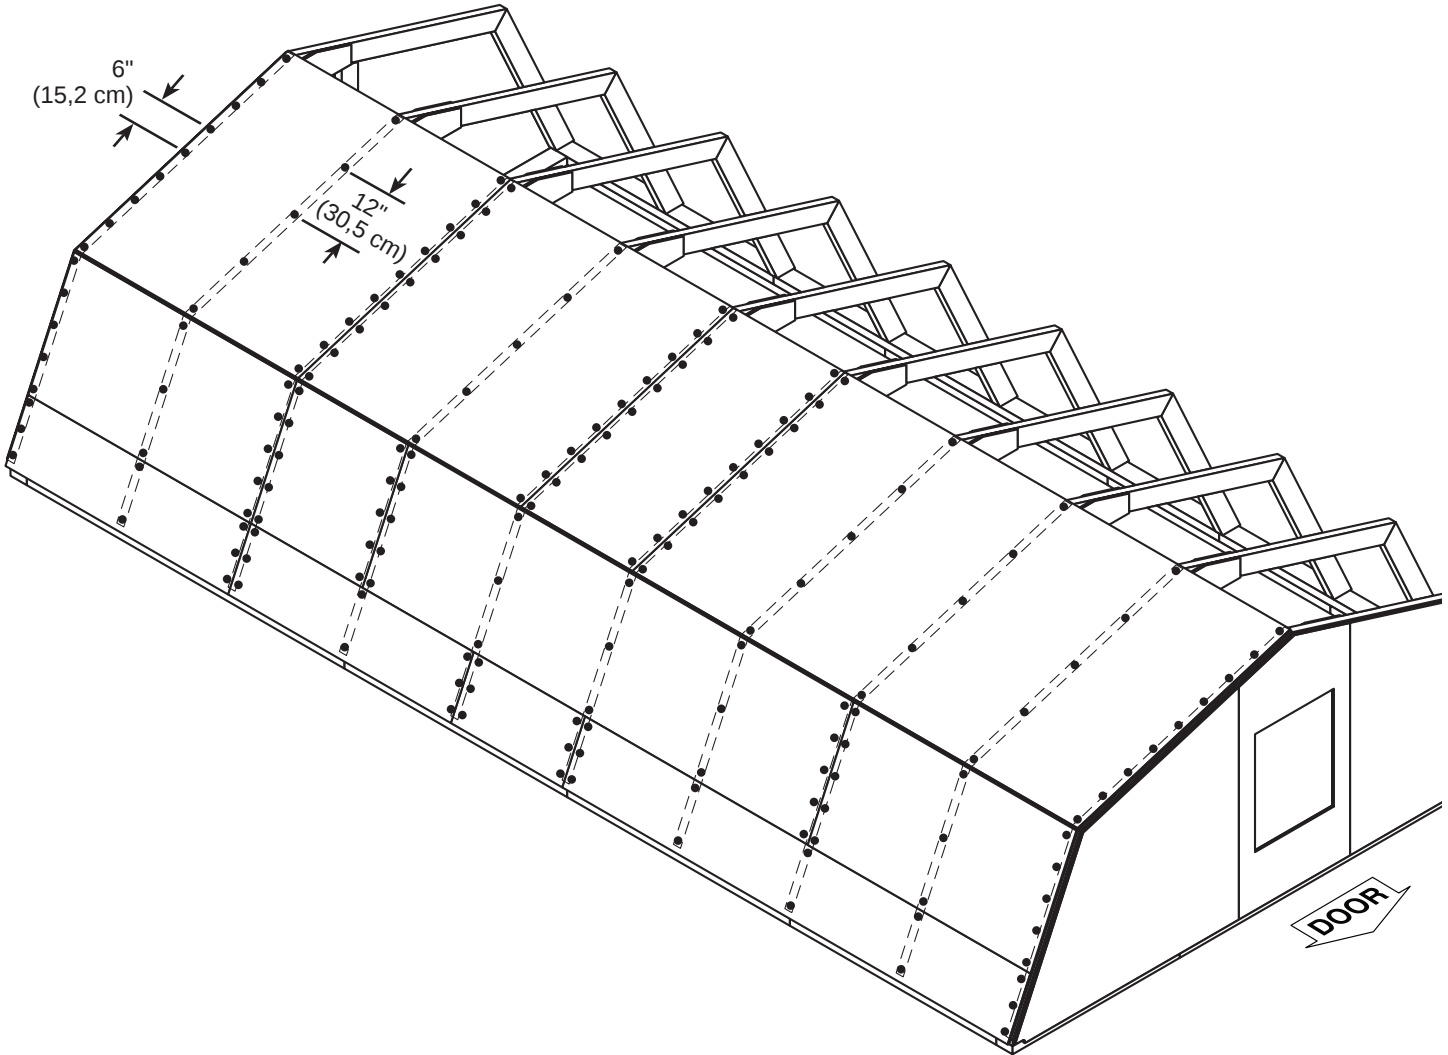

Repeat all steps to install roof panels on the opposite side.

We suggest installing the 2nd set of panels in the configuration shown (Fig. F). Install the 96" panels first.




Fig. F

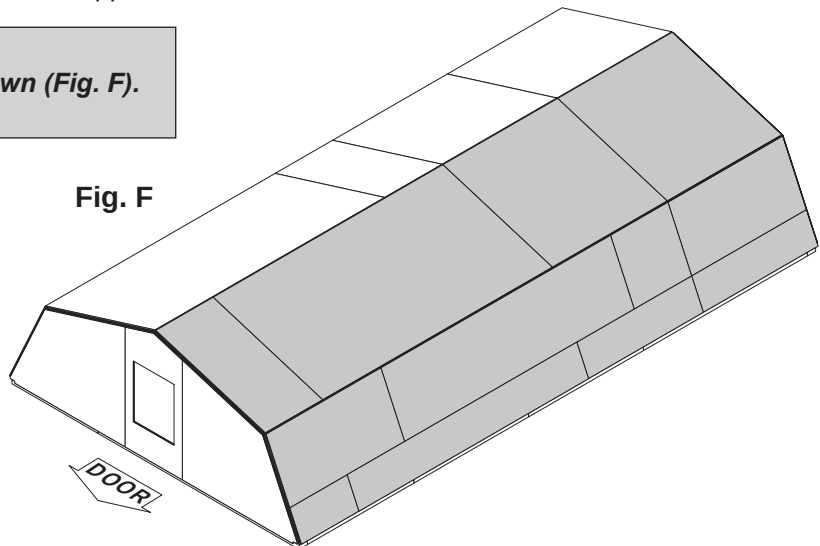


Your roof panels are now installed.

GABLE TRIM

PARTS REQUIRED:


x2		5/8 x 4 x 48-5/16 (1,6 x 10 x 123 cm)	x2		5/8 x 4 x 36" (1,6 x 10 x 91 cm)
x2		5/8 x 4 x 48-5/16 (1,6 x 10 x 123 cm)	x2		5/8 x 4 x 36" (1,6 x 10 x 91 cm)

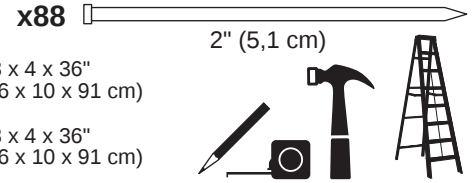

✓ BEGIN

- 1 Install upper gable trim **ZQR** and **ZQL** flush to top of roof panels and flush at peak.
Secure trim with 2" finish nails evenly spaced, as shown.
- 2 Install lower gable trim **ZJR** and **ZJL** flush to top of roof panels and flush to installed trim.
Secure trim with 2" finish nails evenly spaced, as shown.

Repeat steps to install trim to the opposite gable.

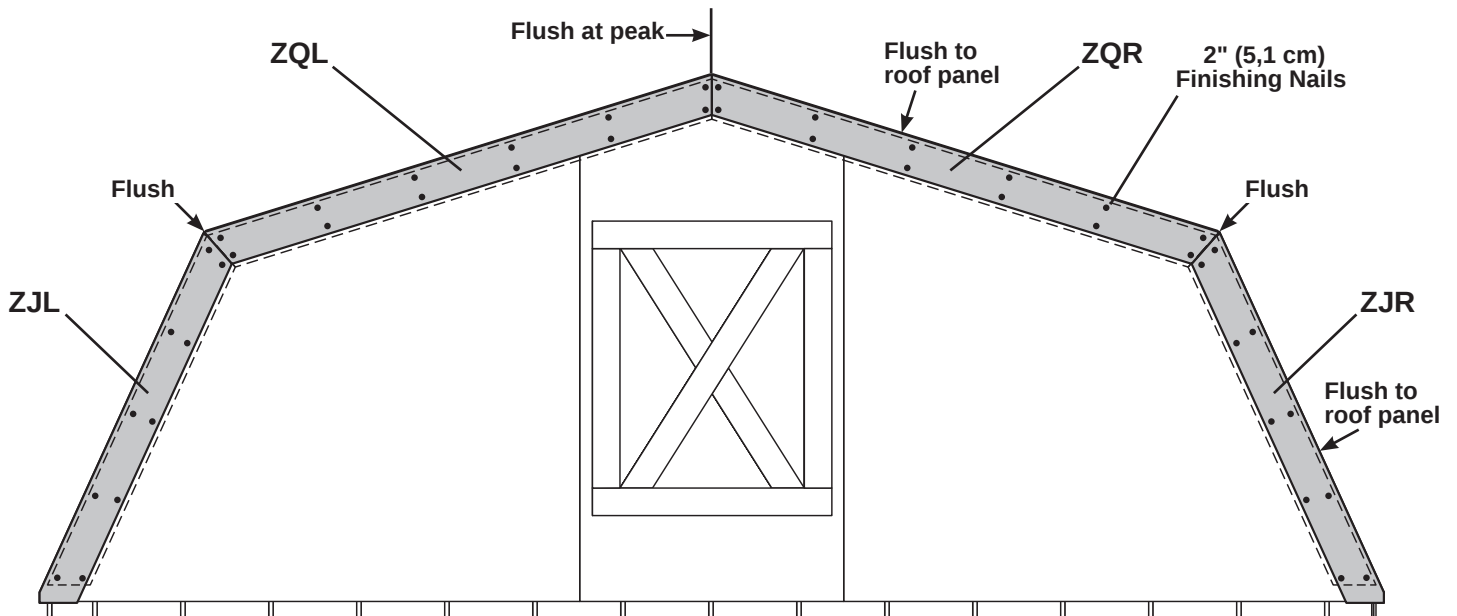



Your gable trim is now installed.

CORNER TRIM

PARTS REQUIRED:


x8 
3/8" x 1-3/4" x 83-1/4" (1 x 4,5 x 211,5 cm)

x64  2" (5,1 cm)

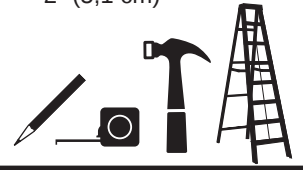

✓ BEGIN

- 1 Install gable end **83-1/4"** corner trim under gable panel, **(Fig. A)** and flush to eave wall panel **(Fig. B)**. Secure with 2" finishing nails spaced evenly.
- 2 Install eave side **83-1/4"** corner trim flush to eave soffit and flush along seam of installed corner trim **(Fig. C)**. Secure with 2" finishing nails spaced evenly.

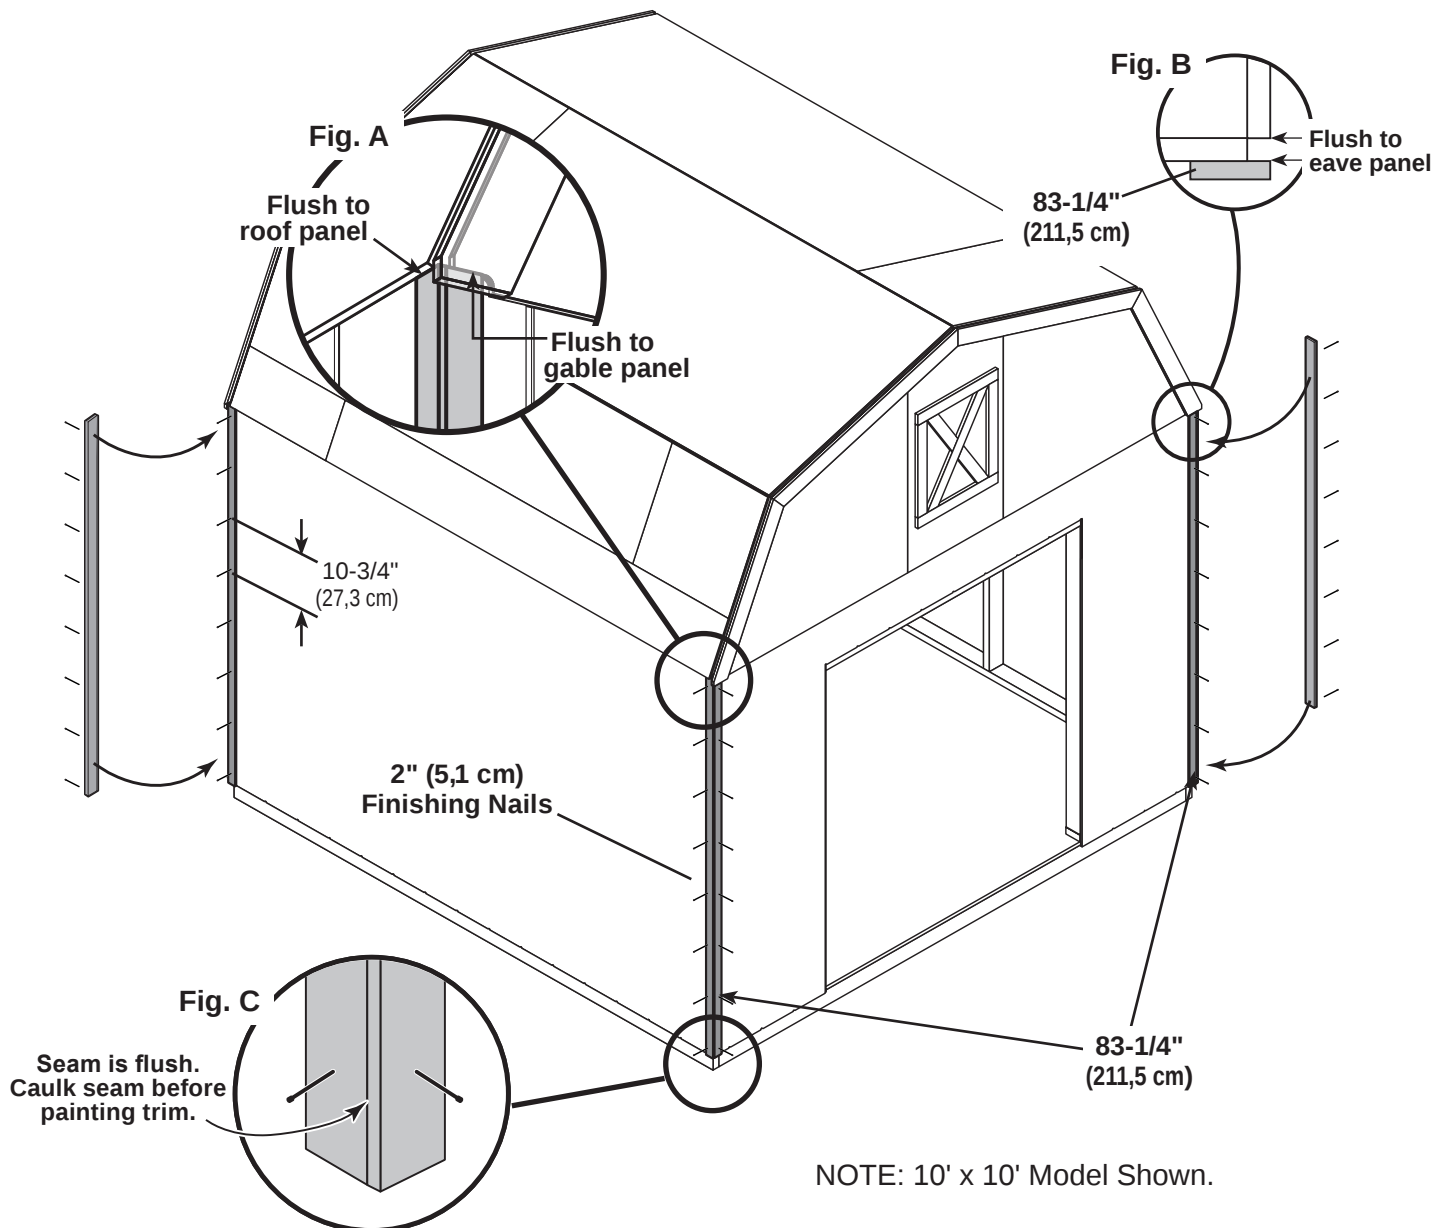



Repeat STEPS 1 - 2 for each corner of shed.



Your corner trim is now installed.

COLLAR TIE INSTALLATION

PARTS REQUIRED:

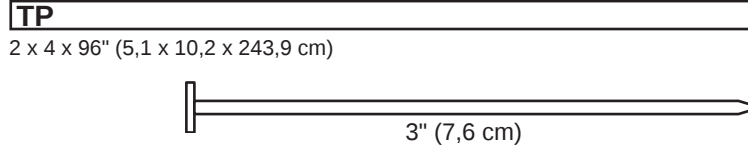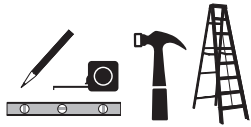

10x10'	10x14'	10x18'
x2	x3	x4
x12	x18	x24

✓ BEGIN

- 1 Install collar tie to the rafter with (3) 3" nails at each end (Fig. A).


Starting at the wall with the door, install first collar tie **TP** on the 2nd rafter from the gable wall and then on **every other** rafter, as shown.



Fig. A



3" (7,6 cm)
Nails

Flush to roof panel.

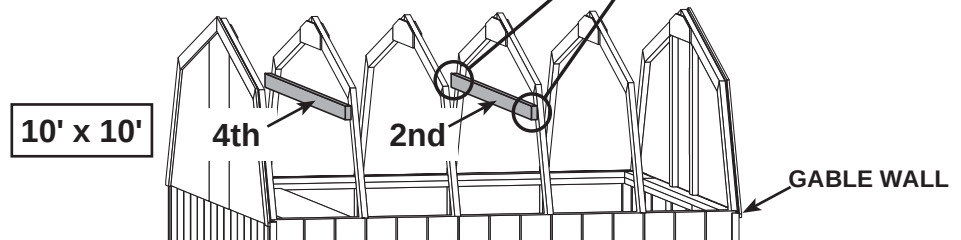

HINT:

For best appearance, install collar ties on back side of rafter.

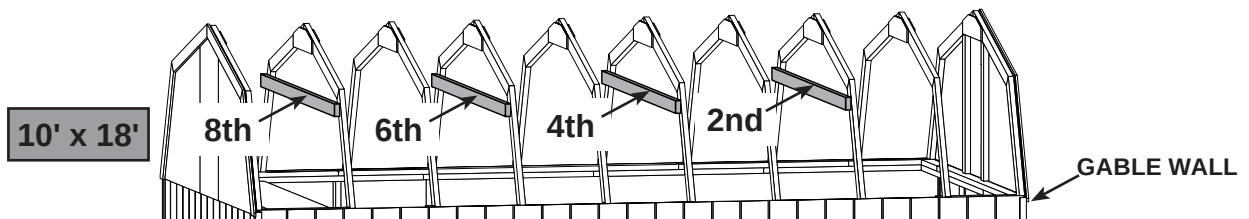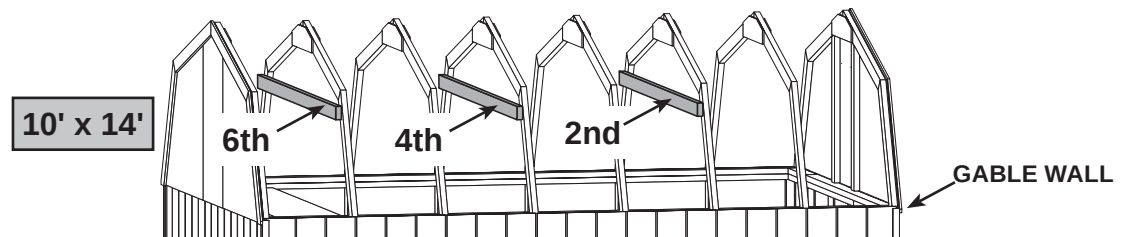


FINISH

Your collar tie(s) are now installed.

DOORS

PARTS REQUIRED:

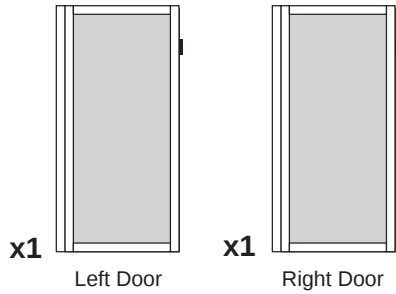


x1 **GAA**
1 x 3 x 5" (2,5 x 7,6 x 12,7 cm)

x1 **OO**
69" (175,3 cm) Door Stiffener

x4 3" (7,6 cm)


x2 1-1/4" (3,2 cm)



✓ BEGIN

- 1 Place doors on flat surface. **3/8" offset is to top.**
Look for red (right) and green (left) on hinge board.

Attach temporary supports **OO** and **GAA** as shown.

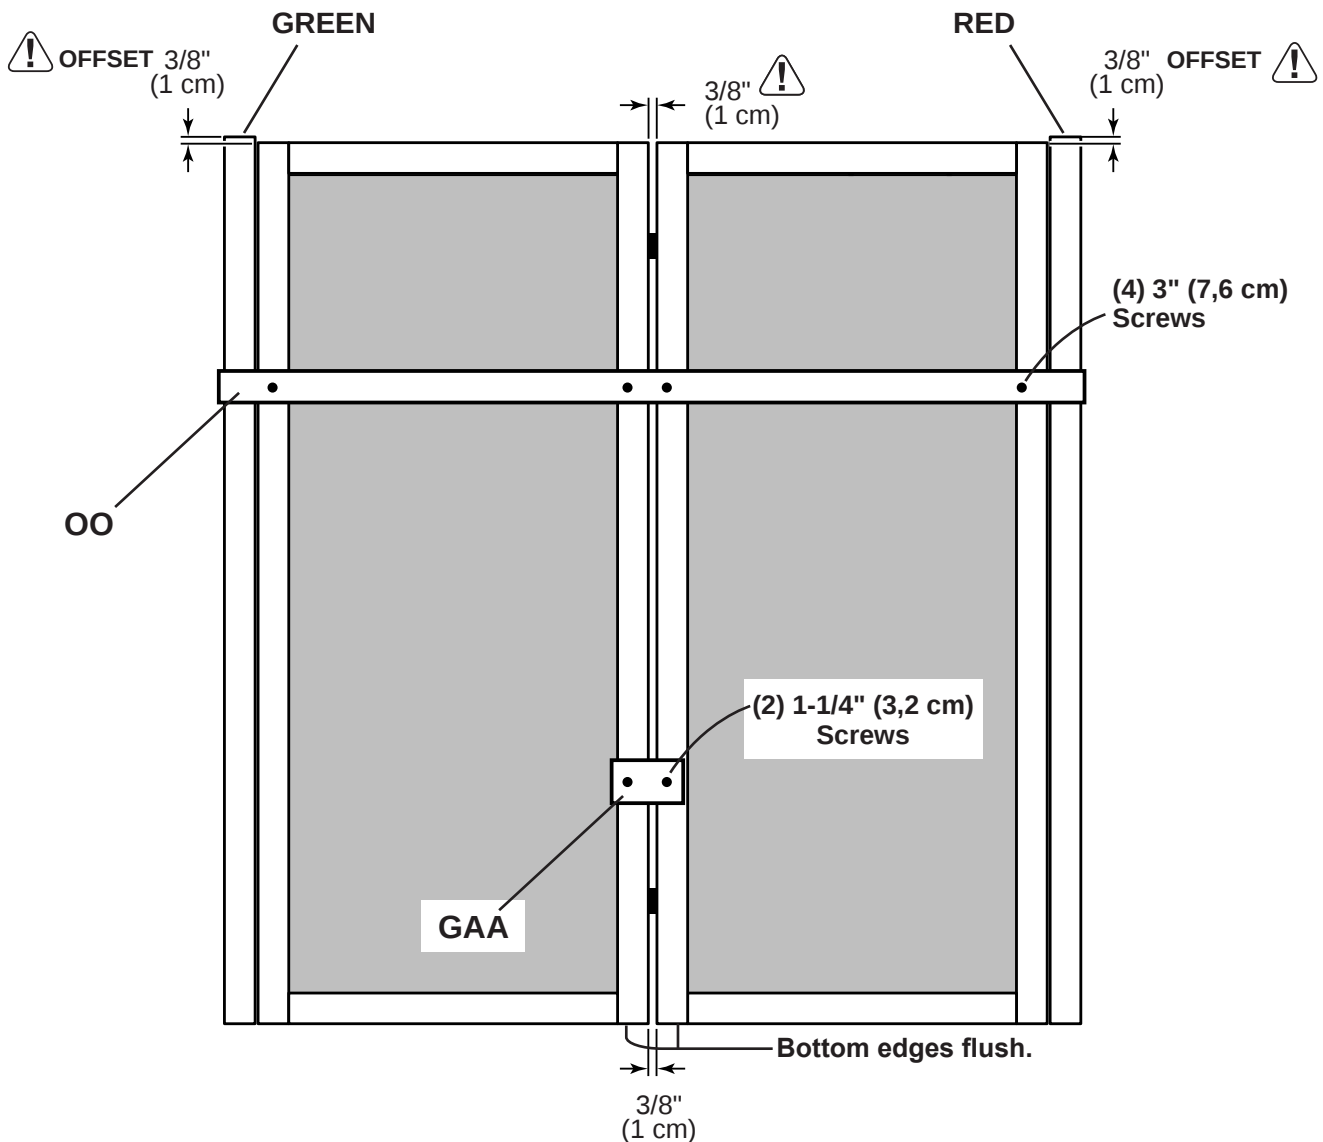



DOORS

PARTS REQUIRED:


x1 **OO** *TEMPORARY SUPPORT*

69" (175,3 cm) Door Stiffener

x12  3" (7,6 cm)




- 2 Install **OO** flush under panels.
Secure to floor frame with (2) 3" screws (**Fig. A**).
Mark center of door opening.

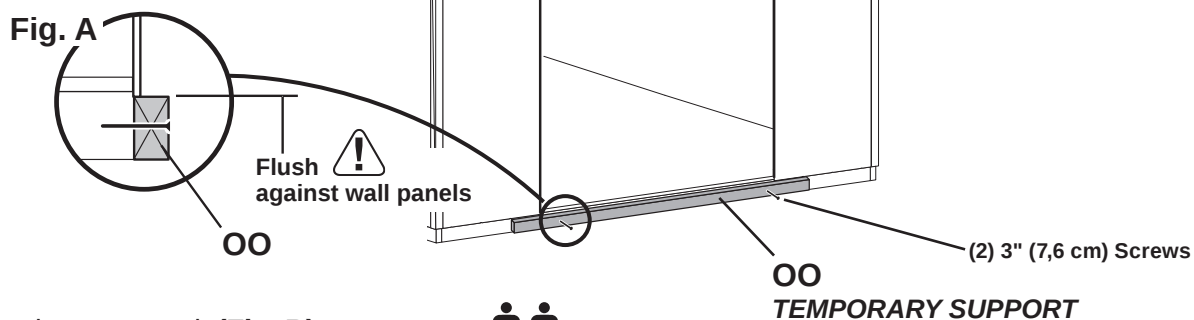

- 3 Center doors on mark (**Fig. B**).



- 4 Screw hinge boards into wall supports with (10) 3" screws, as shown.
 **Make sure screws go into framing.**

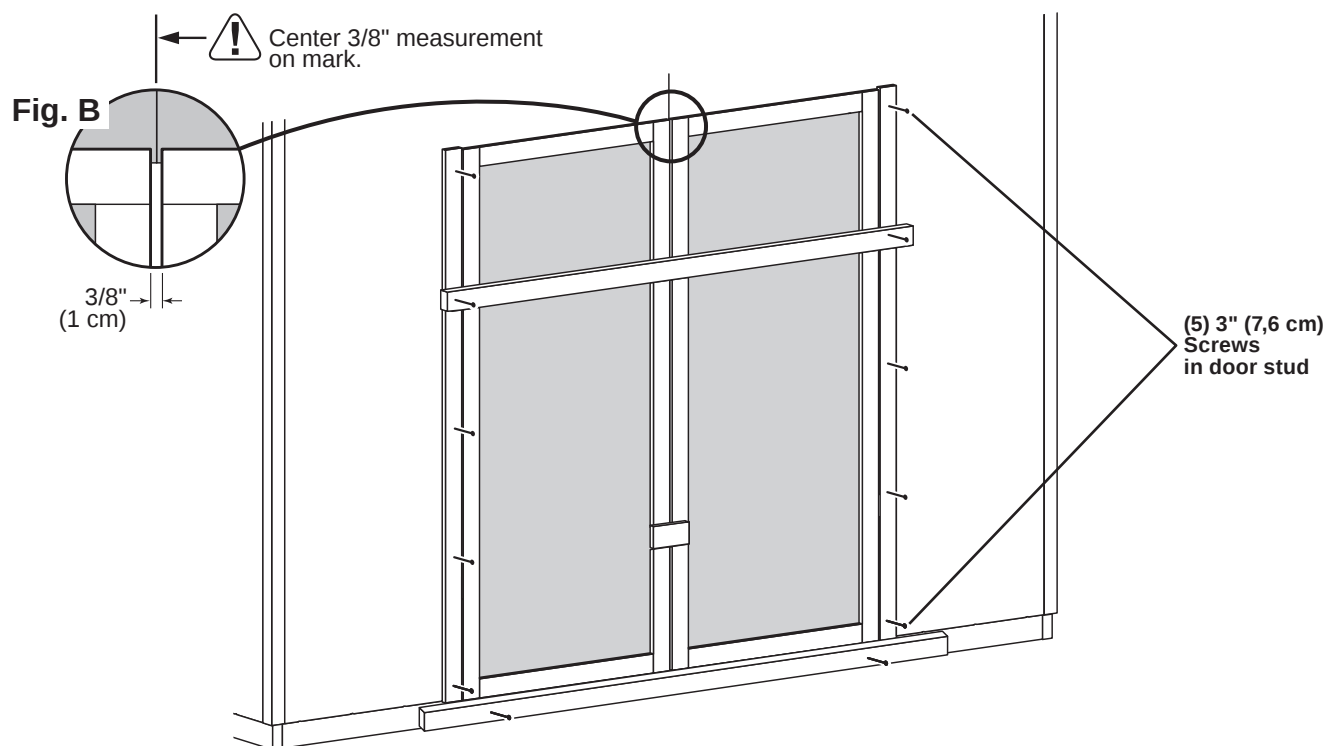

Remove temporary supports and check to make sure doors open and close properly.



Your doors are now installed.

DOORS

PARTS REQUIRED:

x2 **AH**
19/32" x 2-1/2" x 26 5/8" (1,5 x 6,3 x 67,6 cm)


x1 **ZJ**
19/32" x 2-1/2" x 72" (1,5 x 7,6 x 182,9 cm)

x7 2" (5,1 cm)

x72 3/4" (1,9 cm)


x2 **MDR**
19/32" x 2-1/2" x 39-7/8" (1,5 x 6,3 x 101,3 cm)

x2 **MDL**
19/32" x 2-1/2" x 39-7/8" (1,5 x 6,3 x 101,3 cm)

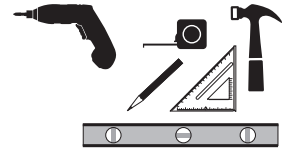

You have 3 options for door trim, see Fig. C.

Fig. C

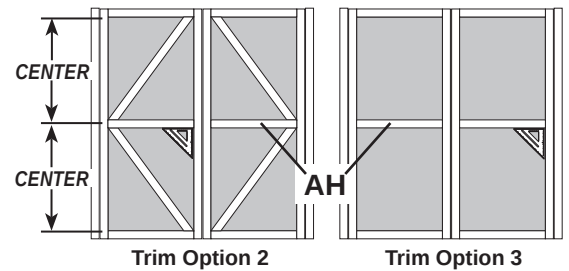

Customize your door trim; use 1 of 3 options:
Assembly for Option 1 is shown in Fig. A.
If you choose Option 2, reverse MDL and MDR.
If you choose Option 3, center AH horizontally.
Follow steps 1, 2 and 3.
Add or subtract more screws as needed.

- 1 Arrange trim **AH**, **MDL** and **MDR** as shown.
Square **AH** before fastening.
Fasten trim to each door from inside with 3/4" screws (Fig. A, Fig B).

- 2 Center trim **ZJ** over doors and secure with (7) 2" finishing nails into framing, as shown.


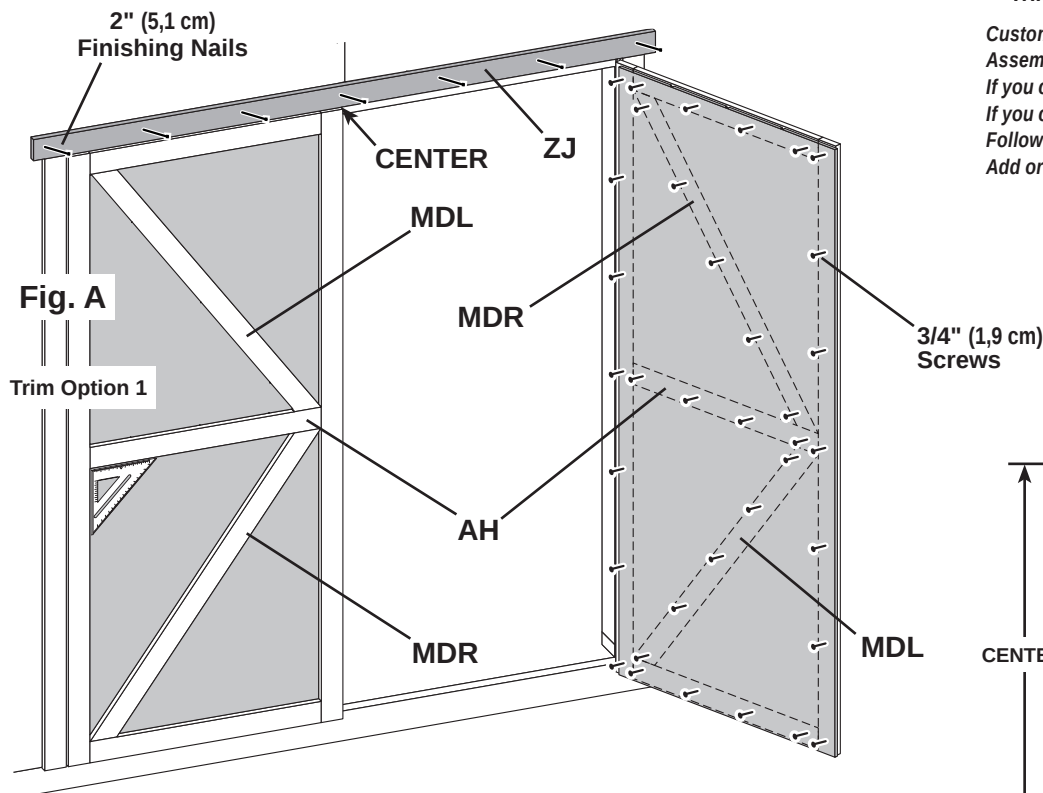


Fig. B

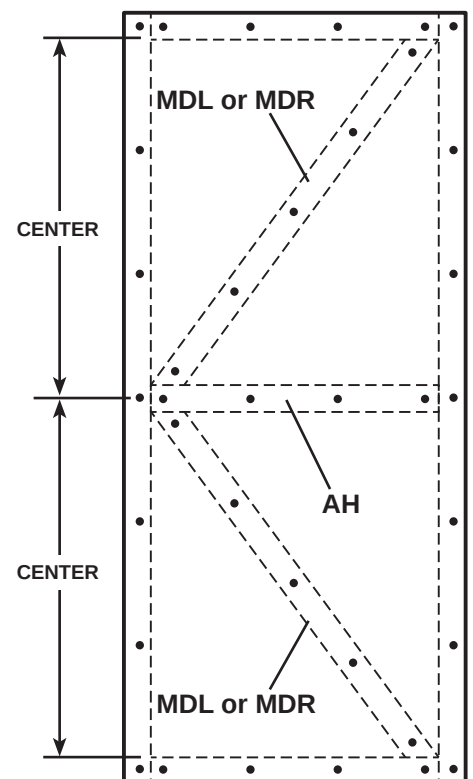

Your door trim is now installed.

DOOR STIFFENERS

PARTS REQUIRED:

x2 **OO**
69" (175,3 cm) Door Stiffener





x14 
2" (5,1 cm)



✓ BEGIN

- 1** Center **OO** vertically on the left door in the doorway (**Fig. A**) overlapping 1" (2,5 cm) along the edge of door (**Fig. B**).
Secure with (7) 2" screws through outside trim into **OO**.
- 2** Center **OO** vertically on the right door in the door opening offset 1" (2,5 cm) from the edge of door (**Fig. B**).
Secure with (7) 2" screws through outside trim into **OO**.

Fig. A

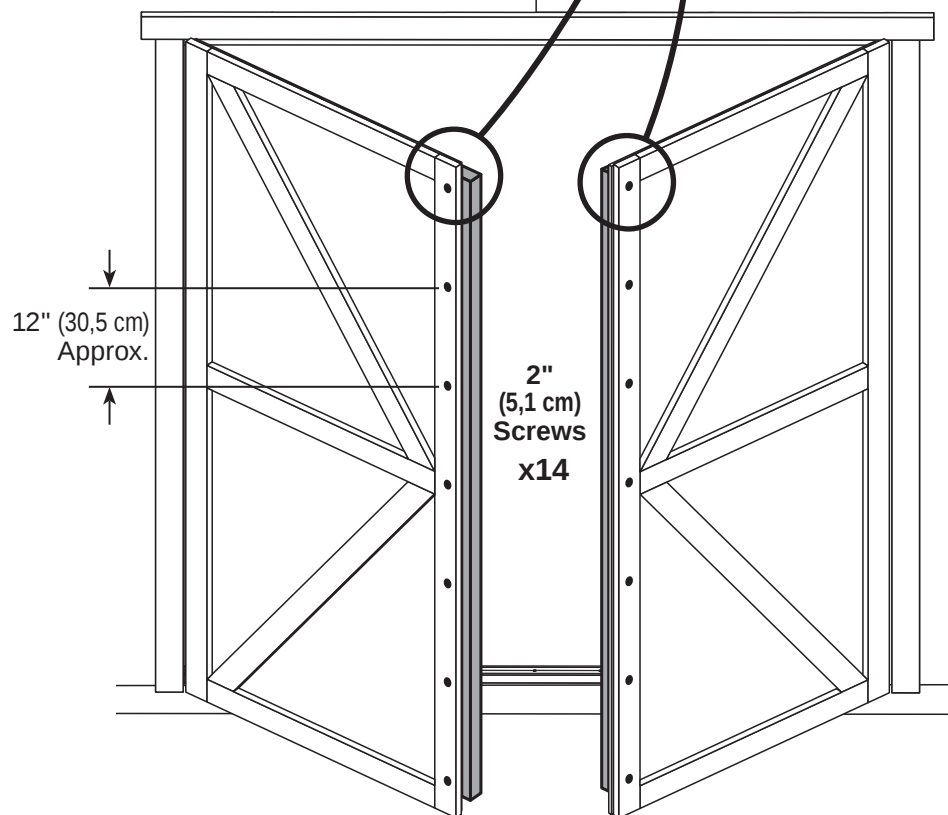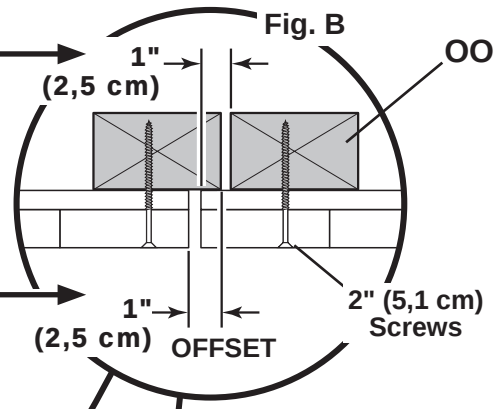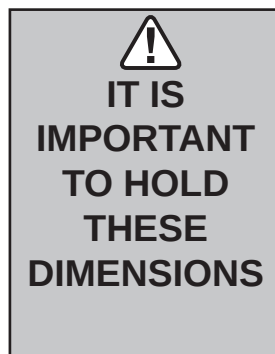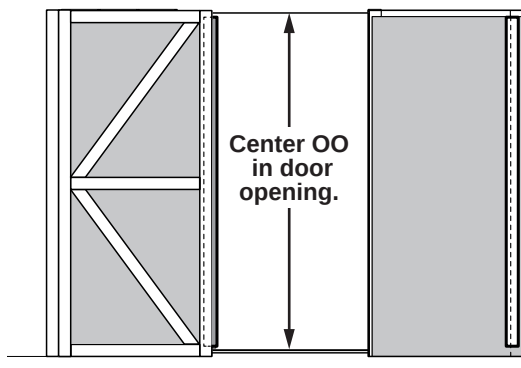


FINISH

Your door stiffeners are now installed.

DOOR HARDWARE

PARTS REQUIRED:



✓ BEGIN

- 1 Place bolt on **OO** in open position with bolt end 3/8" (9,5 mm) down from frame. Bolt is open when loop is contacting base (**Fig A**).
- 2 Mark and pre-drill holes for screws. Install bolt with screws supplied.
Drill 5/16" (7,9 mm) hole deep enough for bolt to slide into.
- 3 Place bolt on **OO** in open position with bolt end 1/2" (12,7 mm) up from floor. Bolt is open when loop is connecting base (**Fig. B**).
- 4 Mark and pre-drill holes for screws. Install bolt with screws supplied.
Drill 5/16" (7,9 mm) hole deep enough for bolt to slide into.

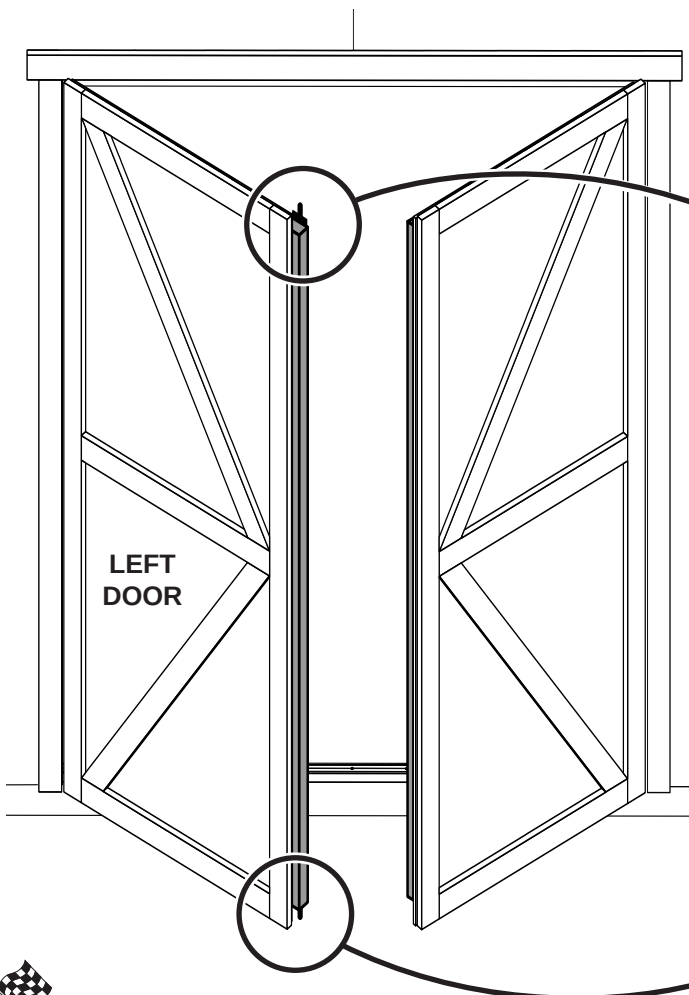


Fig. A


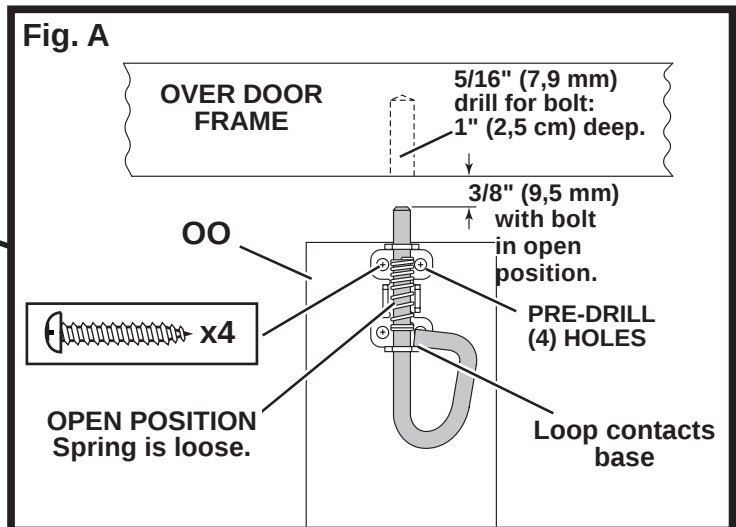




Fig. B

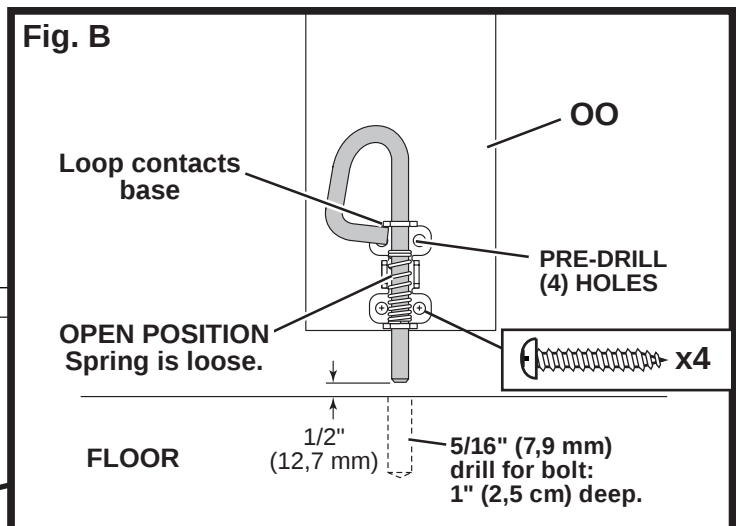

Your spring bolts are now installed.

DOOR HARDWARE

PARTS REQUIRED:

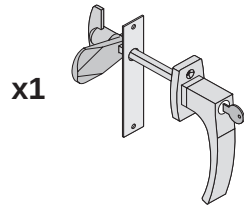

1/2" (13 mm) Drill Bit

1/4" (6 mm) Drill Bit




✓ BEGIN

- 1 Measure and mark location of hole on outside of right door as shown (Fig. A).
Pre-drill hole with 1/4" drill.


Re-drill hole with 1/2" drill.



Keep drilled hole square to trim to avoid breaking edge of door stiffener.

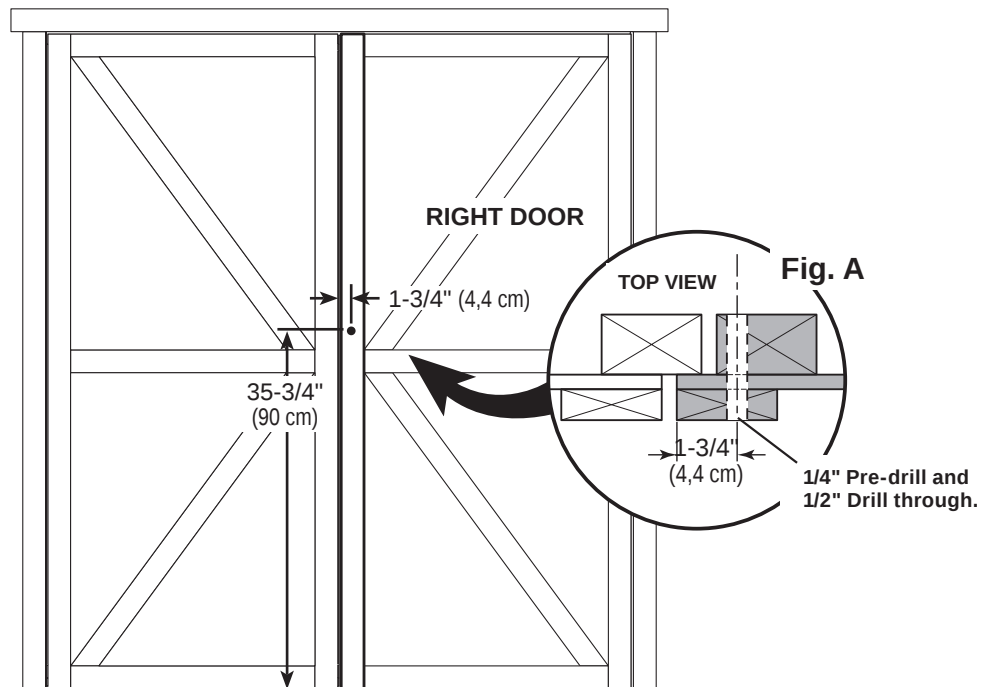


- 2 Secure backplate with 1" screws and handle with 1-1/4" screws as shown.

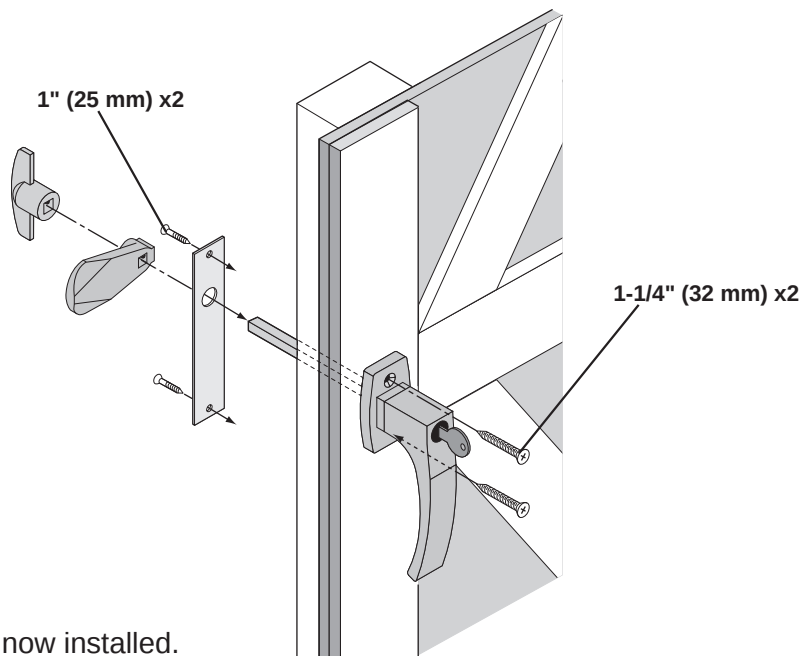

Your door handle is now installed.

HOOK & EYE



PARTS REQUIRED:



BEGIN

1 Install hooks in wall and into framing behind (Fig.A).

2 Swing door open to locate eye.

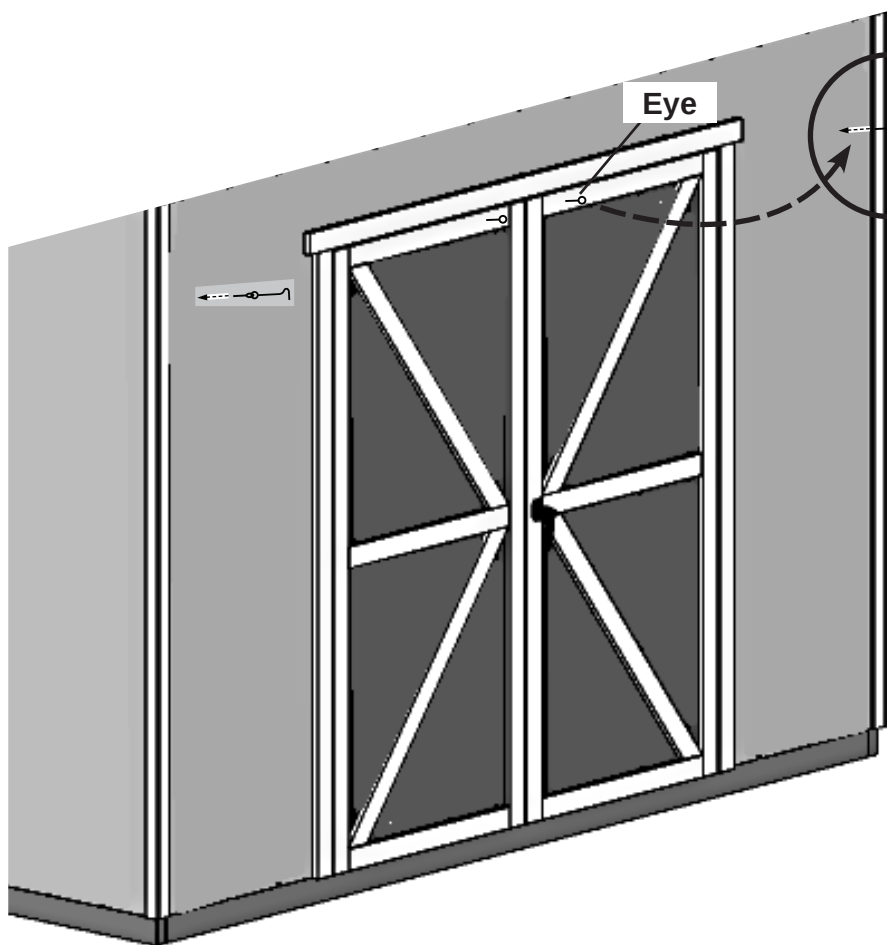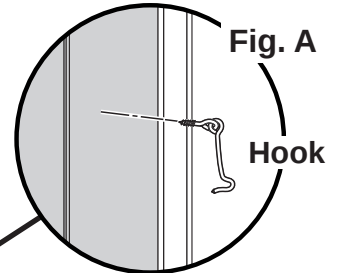

Install hook into framing, if possible.






FINISH

You have installed your hook & eyes.

VENT (Not included in kit.)

- Follow directions provided by manufacturer and these instructions.

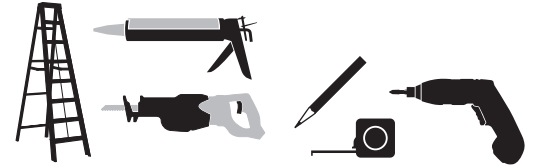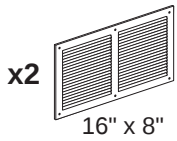



✓ BEGIN

- 1 Locate and mark for two vents in side walls as shown; (1) at top and (1) at bottom.

Cut out marked openings.

Caulk behind vent flanges.


Secure with 1/2" screws.

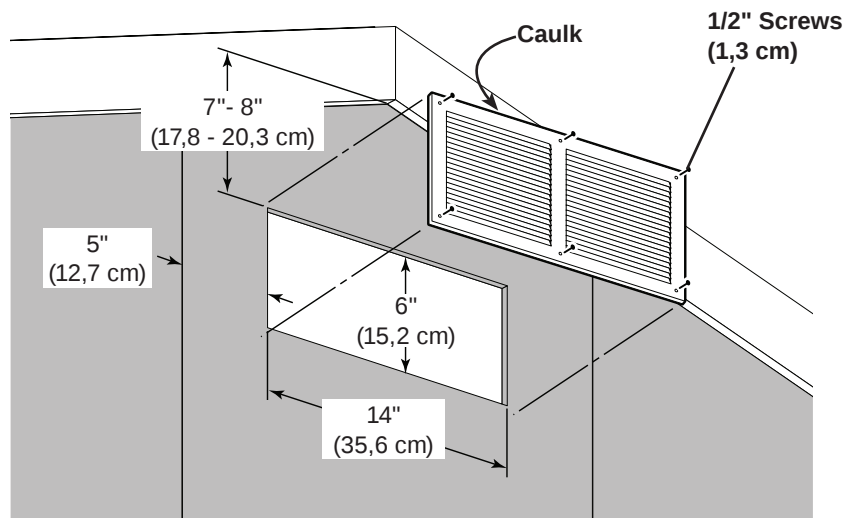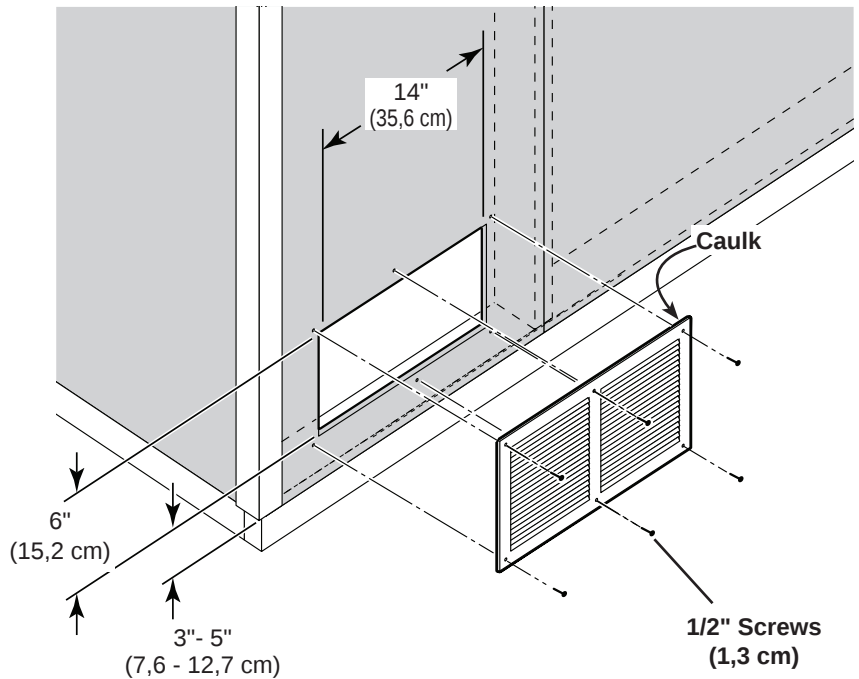

Your vents are now installed.

PAINT & CAULK

- NOT INCLUDED -



- Use acrylic latex caulk that is paintable. Caulk at all horizontal and vertical seams, between the trim and walls, and all around the door trim.
- Use a high quality exterior acrylic latex paint. When painting your building, there are a few key areas that can be easily overlooked that must be painted:
 - Bottom edge of all siding and trim
 - Inside of doors and all 4 edges


Note:

Prime all un-primed exterior wood before painting.
(Follow directions provided by manufacturer.)

ROOF FELT

- NOT INCLUDED -

- Install felt flush to all roof edges overlapping 3". Use minimal amount of roofing nails to hold in place.


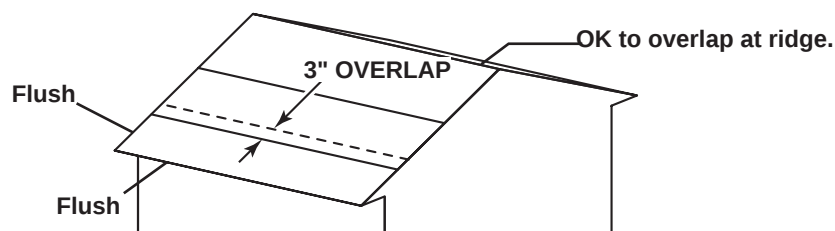


DRIP EDGE

- NOT INCLUDED -

 Drip edge is only installed on the front and back sides of this shed.

- Install over roof felt or over roof deck.
- Do not use nails on side of drip edge that hangs over side of building.
- Only nail top of drip edge as shown.

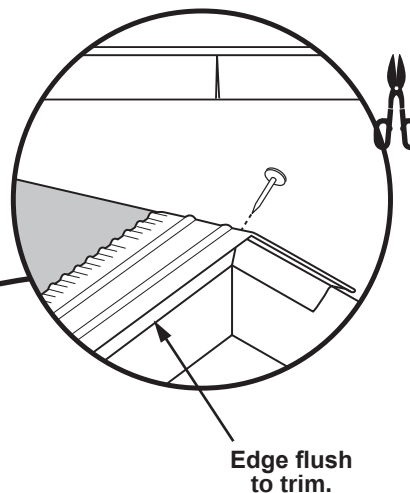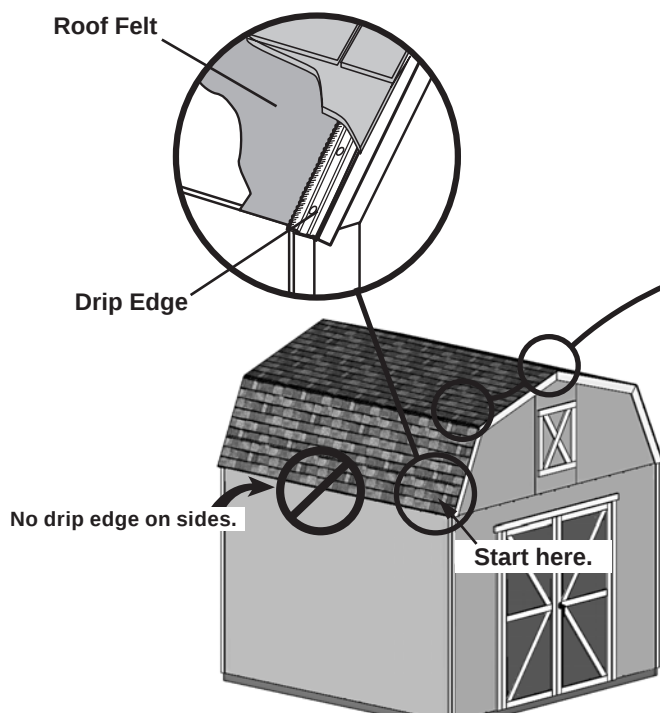

Snip bottom side of drip edge and bend over to other side of roof.


(Follow directions provided by manufacturer.)

NOTE: 10' x 12' Model Shown.


SHINGLES

- NOT INCLUDED -

- Follow directions provided by manufacturer and these instructions.

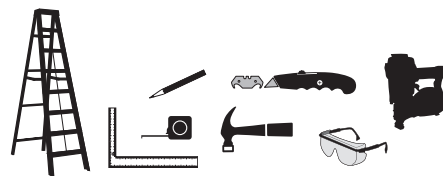


! Familiarize yourself with a 3-Tab Shingle.

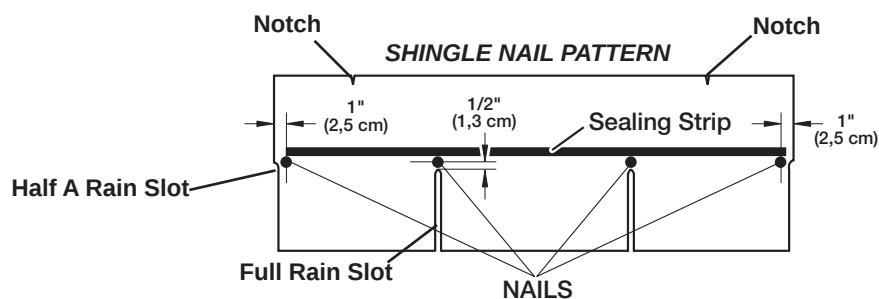

! NEVER DRIVE FASTENERS INTO OR ABOVE SEALING STRIPS.

✓ BEGIN


- 1 Install first starter row upside down and color up with a 1" overhang at back and bottom of roof panel. Use (4) nails per shingle. Starter row must be straight and level all the way across with lower edge of roof deck.
NOTE: If you have installed drip edge install shingles flush to drip edge.

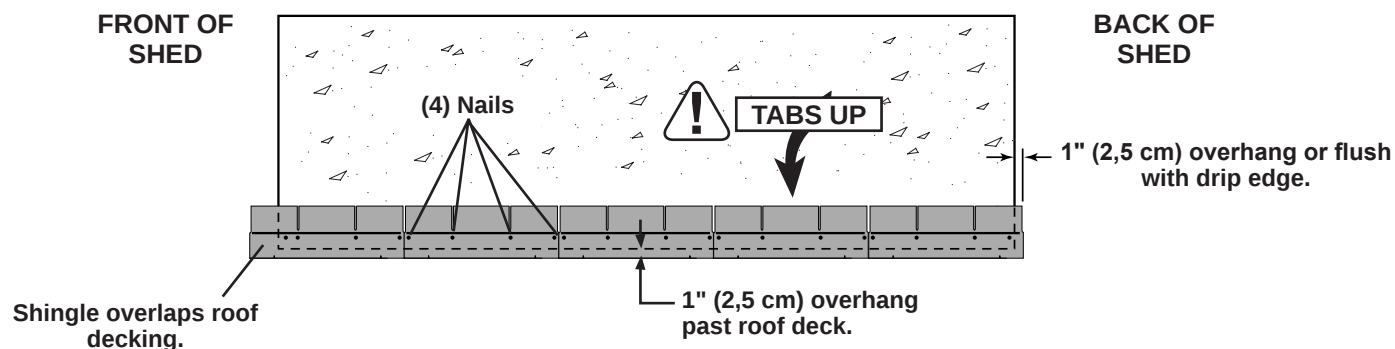


SHINGLES

continued...


- 2 Beginning at front of shed, install first row of shingles with notch at 1" past roof edge or flush with drip edge.

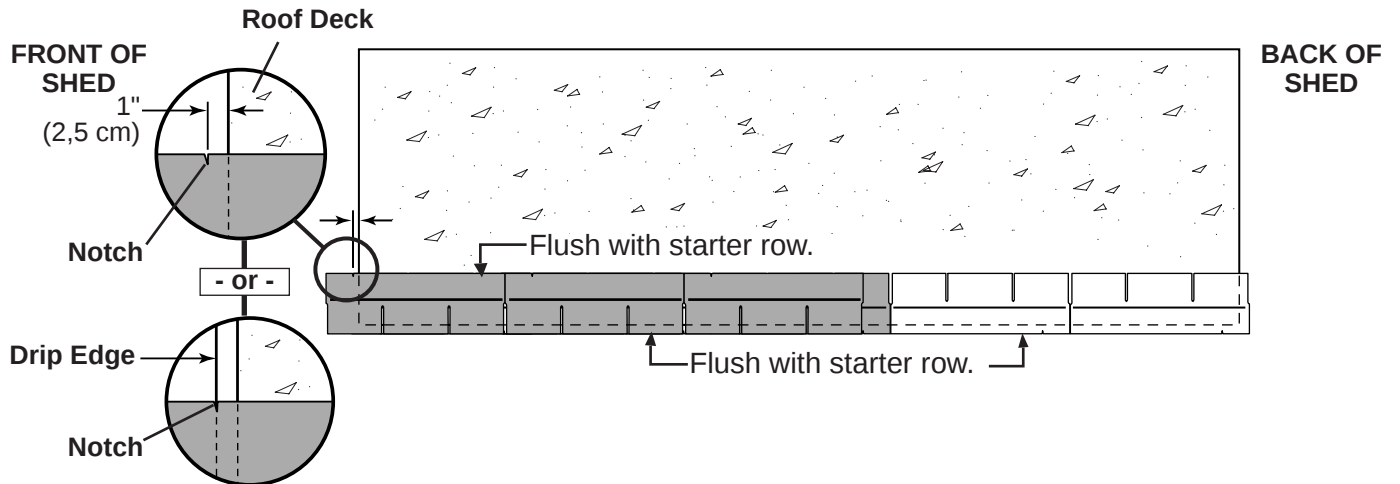

- 3 Install second row of shingles flush at top of first row's rain slots. Ensure 1" overhang or flush to drip edge at front, stagger each row.

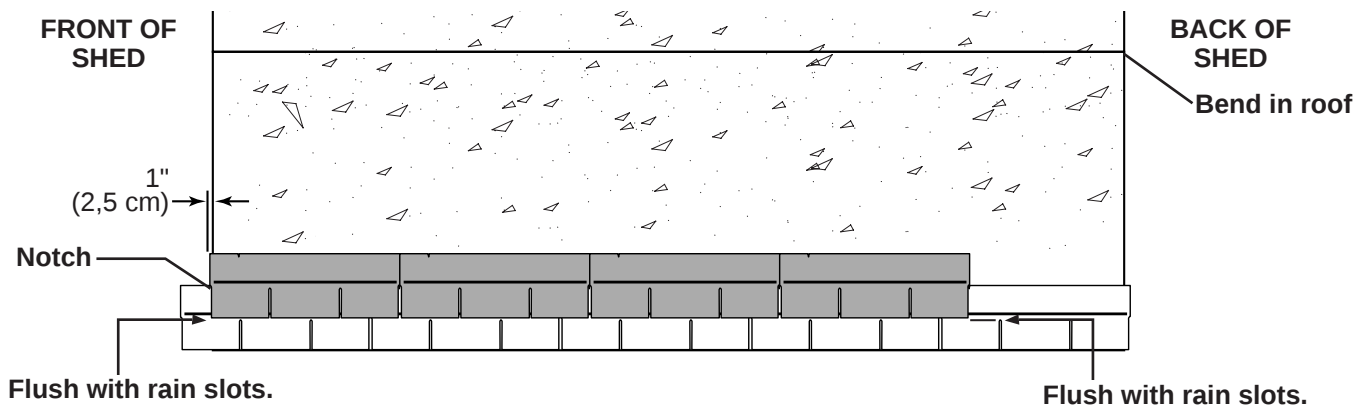



- 4 Continue installing rows of shingles by staggering at front.

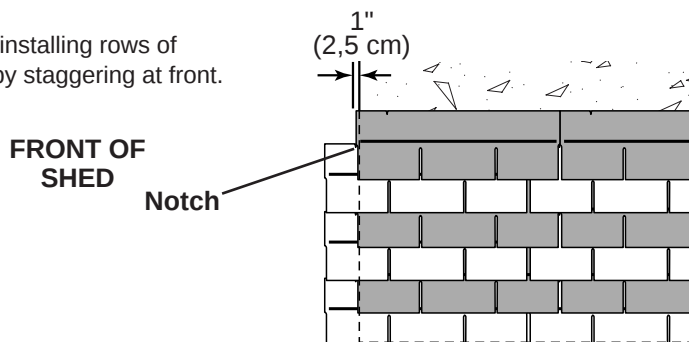

SHINGLES

continued...

- 5 Continue installing rows of shingles to the peak. At the peak make sure there is a maximum of 5" or less to the rain slot, as shown below. If shingles overlap at ridge cut to peak with a utility knife.

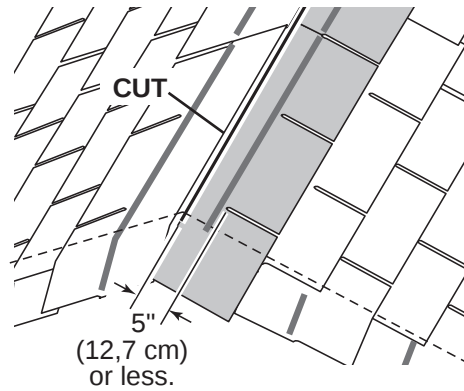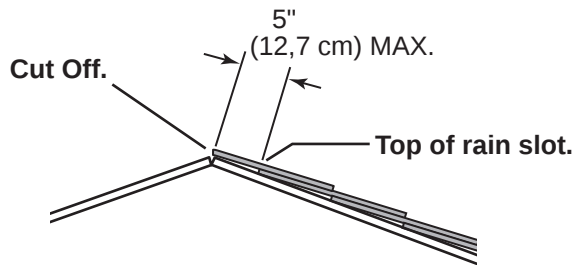


- ! • If more than 5" to rain slot you must install another row of shingles.

- 6 Repeat steps 1 - 7 to shingle the opposite side of your roof. Trim shingles at ridge.


- 7 Once both sides are shingled you need to trim ends. Strike a chalk line 1" from edge.

- 8 Using your shingle hooked blade carefully cut shingles along chalk line.

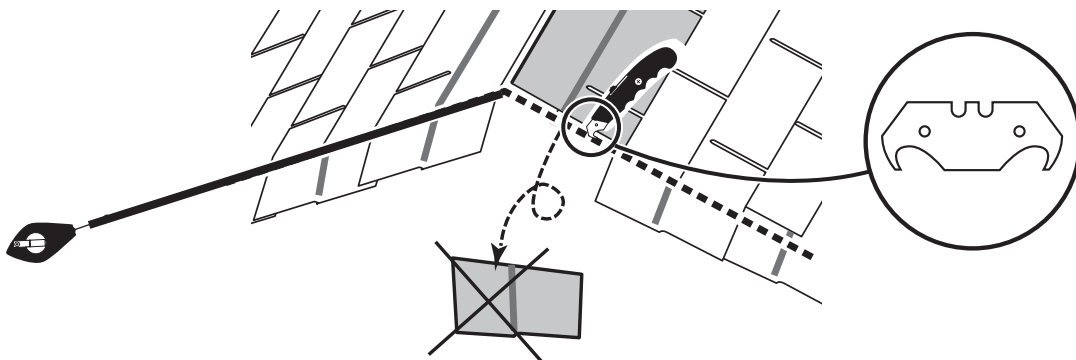

You have finished shingling your roof. Proceed to capping the ridge.


SHINGLES - RIDGE CAP

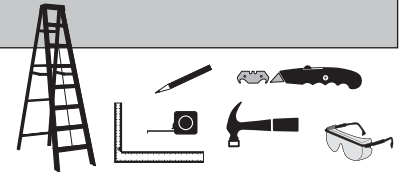


- You will finish off the top of the roof with a ridge cap made from shingles.

✓ BEGIN


- 1 Cut shingles in THREE pieces. Hint: Use cut-off pieces first.

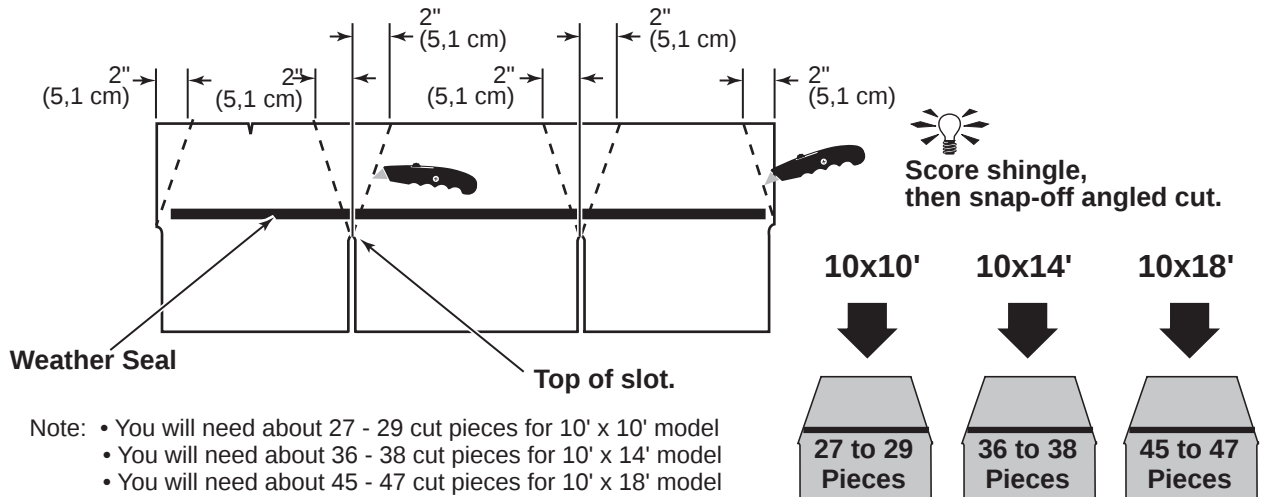

- 2 Install first ridge cap flush to shingles at front, as shown.

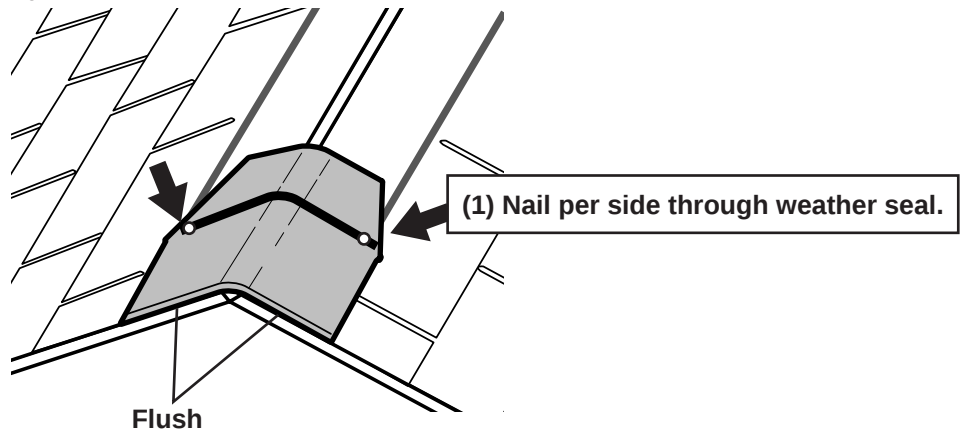


- 3 Install second ridge cap 5" back, as shown.

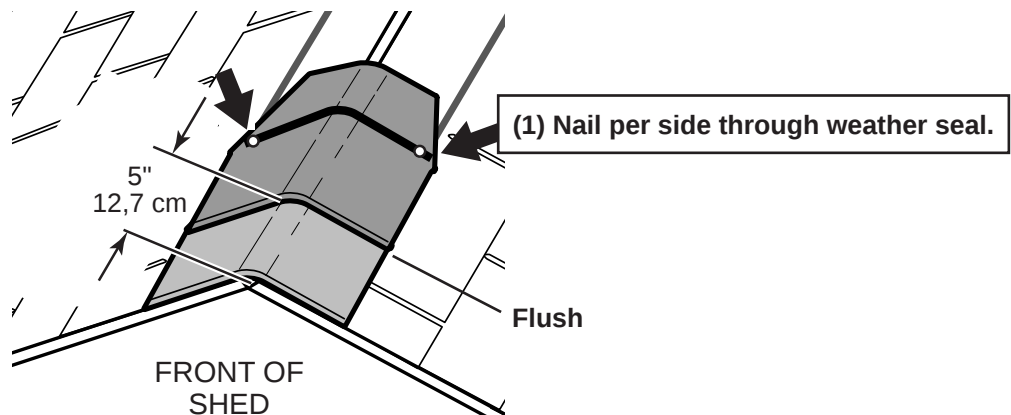


SHINGLES - RIDGE CAP

continued...


- 4 Continue installing ridge cap to back of roof.

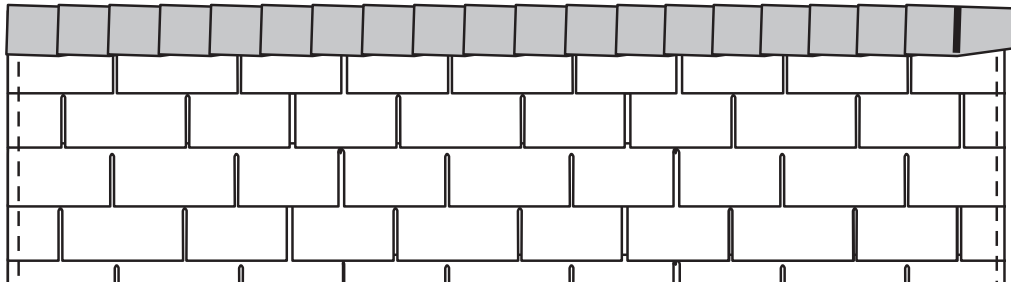


- 5 Make sure there is 4" between the shingle-color and edge of shingles.

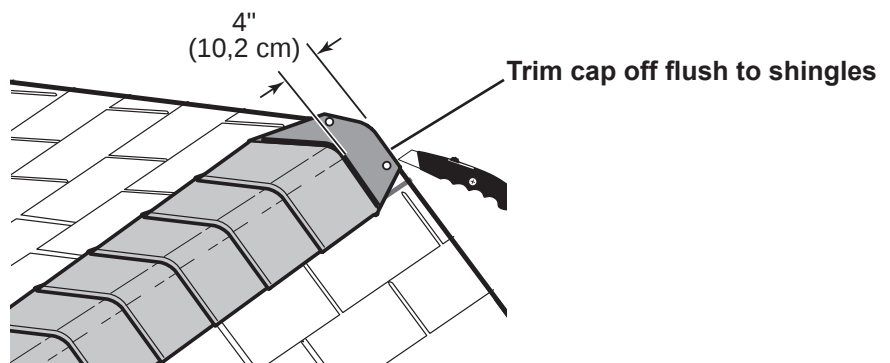

- 6 When you have 4" minimum of shingle color cut one piece to cap your roof.

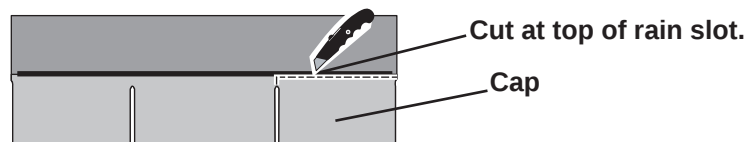

- 7 Install flush to shingles.

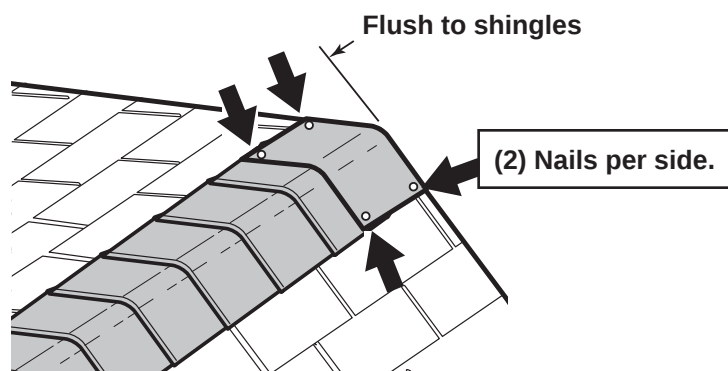

You have finished your ridge cap.

16410-NGA 10' x10' Order Form

CATEGORY	PART DESCRIPTION	PART SIZE	PART ITEM #	BUILDING QTY.	PART ID
2 x 4	Back Wall Top & Btm "A" / Dblr "A" / Collar Tie	LUM SPF 2X4X96 #2&BTR	12306	6	TP
	Doubler "B"	LUM SPF 2X4X92-5/8 #2&BTR	12305	2	TJ
	Side Wall Plate "B"	2 X 4 X 44 1/2" PLATE	O 44080000000	4	STL
	Side Wall Plate "A"	2 X 4 X 68-1/2"	O 68080000000	4	YFA
	Doubler "C"	2 X 4 X 20 3/8" DOUBLER	O 20060000000	2	JBD
	Back Wall T & B Plate "B" / Doubler	2 X 4 X 24" DOUBLER / PLATE	O 24000000000	4	RL
	Front Wall Plate "A"	LUM SPF 2X4X84 #2&BTR	12307	2	TO
	Front Wall Plate "B"	2 X 4 X 36"	O 36000000000	2	SL
	Wall Studs	2 X 4 X 78 1/2"	O 78080000000	20	AI
	Jack Studs	2 X 4 X 68" STUD	O 68000000000	2	UM
	Over Door Crippler	2 X 4 X 7"	O 07000000000	5	AL
	Header	2 X 4 X 67"	O 67000000000	2	AM
	Front / Rear Gable Connector	2 X 4 X 39" 17" O/E CONNECTOR	O 39001700000	4	QL
1 X 3 PINE	Gauge Block	1 X 3 X 5" PINE FILLER	U 05000000000	1	GAA
7/16 OSB	Upper Roof Panel "A"	OSB 7/16" x 4' x 8'	11110	2	---
	Upper Roof Panel "B"	7/16" OSB 23 7/8" X 48" ROOF &	C 48002314000	2	---
	Lower Roof Panel "A"	7/16" OSB 23 7/8" X 96" ROOF	C 96002314000	2	---
	Lower Roof Panel "B"	7/16" OSB 23 7/8" X 23 7/8" RO	C 23142314000	2	---
	Door Header Filler	7/16" OSB 3 1/4" X 66 3/4" HEADER	C 66120304000	1	---
	Soffit Roof Panel "A"	7/16" OSB 11 7/8" X 96"	C 96001114000	2	---
	Soffit Roof Panel "B"	7/16" OSB 11 7/8" X 23 7/8"	C 23141114000	2	---
GUSSETS	Gusset	EZ 8" OSB 6" X24" GUSSET 17"	J 24000600170	10	---
NO GROOVE SIDING	Center Gable Panel	3/8" NG 23 7/8" X 47 1/8"	K 47022314000	2	---
	Front / Rear Gable Panel - Right	3/8" X 43-3/8" X 48" RIGHT GABLE	K 48004306344	2	---
	Front / Rear Gable Panel - Left	3/8" X 43-3/8" X 48" LEFT GABLE	K 48004306444	2	---
	Corner Trim	3/8" NG 1 3/4" X 83-1/4"	K 83040112000	8	---
	Rearwall Panel "A" / Side Panel	SIDING NGSE 3/8X4X7"	11507	6	---
	Rear Panel "B"	NG 23 7/8" X 84" WALL PANEL	K 84002314000	3	---
	Frontwall Panel "A"	NG 11-7/8" X 84" WALL PANEL	K 84001114000	2	---
	Frontwall Panel Right	NG 48" x 84" RIGHT FRONTWALL	K 84004800101	1	---
	Frontwall Panel Left	NG 48" x 84" LEFT FRONTWALL	K 84004800201	1	---
19/32 X 3 SMART TRIM	Vertical / Over Door Trim	19/32 TST 2 1/2" X 72" TRIM	UT72000208000	1	ZJ
	Long Cross Buck - Right	19/32 TST 2 1/2" X 39-7/8" 36.5" L/S RGT X-BUCK	UT39143737100	2	MDR
	Long Cross Buck - Left	19/32 TST 2 1/2" X 39-7/8" 36.5" L/S LFT X-BUCK	UT39143737200	2	MDL
	Hay Door Cross Buck - Long	19/32 TST 2 1/2" X 25-3/4" L/L 32.5" B/E	UT25123333000	1	LKA
	Hay Door Cross Buck - Short	19/32 TST 2 1/2" X 12 7/8" L/L 25.5/32.5" CROSSBUCK	UT12143326000	2	JGA
	Horizontal Door Rail	19/32 TST 2 1/2" X 26 5/8"	UT26100208000	2	AH
	Horizontal & Vertical Window Trim	19/32 TST 2 1/2" X 21 3/4"	UT21120208000	4	KX
19/32 X 4 SMART TRIM	Lower Gable Trim Right	2 X 4 X 36" 24"/24" RIGHT	UT36002424100	2	ZJR
	Lower Gable Trim Left	2 X 4 X 36" 24"/24" LEFT	UT36002424200	2	ZJL
	Upper Gable Trim Right	19/32 TST 3 1/2" X 48 5/16"RGT	UT48051724100	2	ZQR
	Upper Gable Trim Left	19/32 TST 3 1/2" X 48 5/16"LFT	UT48051724200	2	ZQL
PURCHASED COMPONENTS	Door Stiffener	LSL 1-1/4 X 2-1/4 X 69 PET	12715	2	OO
	Truss Assembly	TRUSS Sub-Assy Gambrel 10' Wide	30085	12	---
	Chrome Single Point Locking Handle	DOOR HANDLE LOCKING SINGLE PT.	15210	1	---
PACKAGING	Instructions		16410-NGA	1	---
Right Door Assembly	30222-RNG				
	Door Panel	NG 31 1/4" X 71 3/8" DOOR	K 7106310400C	1	---
	Right Hinge Assembly	HINGE RIGHT (RED) 19/32x3 THIN TRIM	30121-TT	1	---
	Vertical Door Stiles	19/32 TST 2 1/2" X 71 5/8"	UT71100208000	2	GY
	Horizontal Door Rails	19/32 TST 2 1/2" X 26 5/8"	UT26100208000	2	AH
Left Door Assembly	30222-LNG				
	Door Panel	NG 31 1/4" X 71 3/8" DOOR	K 7106310400C	1	---
	Left Hinge Assembly	HINGE LEFT (GREEN) 19/32x3 THIN TRIM	30131-TT	1	---
	Vertical Door Stiles	19/32 TST 2 1/2" X 71 5/8"	UT71100208000	2	GY
	Horizontal Door Rails	19/32 TST 2 1/2" X 26 5/8"	UT26100208000	2	AH

LIMITED CONDITIONAL WARRANTY*

Backyard Storage Solutions, LLC warrants the following:

1. Every product is warranted from defects in workmanship and manufacturing for 1 year.
2. All accessories, hardware and metal components are warranted for 2 years.
3. All Oriented Strand Board (OSB) is warranted for 2 years
4. Siding and Trim is warranted for 10 years.
5. Solar Shed windows are warranted for 1 year.
6. Cedar lumber is warranted for 15 years.
7. Preserved Pine is warranted for 10 years.
8. Redwood is warranted for 10 years.

Backyard Storage Solutions, LLC will repair, replace or pay for the affected part. In no event shall Backyard Storage Solutions, LLC pay the cost of labor or installation or any other costs related thereto. All warranties are from date of purchase. If a cash refund is paid on an affected part, it will be prorated from the date of purchase.

CONDITIONS

The warranty is effective only when:

1. The unit has been erected in accordance with the assembly instructions.
2. The unit has been properly shingled and painted or stained and reasonably and regularly maintained thereafter.
3. The failure occurs when the unit is owned by the original purchaser.
4. Backyard Storage Solutions, LLC has received the warranty registration card within thirty (30) days of purchase and notification of the failure in writing within the warranty period specified above.
5. Backyard Storage Solutions, LLC has had reasonable opportunity during the sixty (60) days following receipt of notification to inspect and verify the failure prior to commencement of any repair work.

REQUIREMENTS

Storage Buildings

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit; shingle the roof and paint or solid-colored stain the siding using quality, 100% acrylic latex exterior product with a minimum of two (2) coats within thirty (30) days of assembly; caulk above all doors and all horizontal and vertical trim boards; paint and seal all exposed edges, sides and faces of siding/trim and OSB siding to include all exterior walls and all sides and all edges of doors.

Gazebos & Pergolas

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit. This includes treating all of the exposed cedar and pine surfaces on your gazebo or pergola structure with an exterior grade wood preservative, an exterior oil-based semi-transparent stain, an acrylic latex exterior paint or an acrylic latex solid color exterior stain within 30 days of assembly and as needed thereafter to maintain your warranty.

Keep vegetation trimmed away from building and make sure siding panels and trim do not come in contact with masonry or cement. The minimum ground clearance for siding must be one half inch (½ inch) from concrete slab or two and one half inches (2 ½") from the ground when building is erected or constructed on a treated wood floor kit. Water from sprinklers must be kept off unit. In no event will Backyard Storage Solutions, LLC be responsible for any indirect, incidental, consequential or special damages nor for failure(s) that are caused by events, acts or omissions beyond our control including, but not limited to, misuse or improper assembly, improper maintenance (which eventually leads to rot or decay) and acts of God. Backyard Storage Solutions, LLC will not be held responsible for any labor costs incurred to construct your unit.

This warranty gives you certain specific rights that vary from state to state.

CLAIM PROCEDURE

To make a claim under this warranty, you can either call 1-888-827-9056 or email: customerservice@backyardproducts.com.

Please have ready the information below when you call or include the information in your email:

1. The model and size of the product.
2. A list of the part(s) for which the claim is made.
3. Proof of purchase of the Backyard Storage Solutions, LLC item, as shown on the original invoice or receipt.
4. Run code: found on exterior product label or assembly instructions enclosed in the product package.

All other inquiries can be mailed to:

Backyard Storage Solutions, LLC
Attn: Customer Service
1000 Ternes
Monroe, MI 48162

***WARRANTY TERMS MAY VARY OUTSIDE THE U.S.A.
IMPORTANT: This is your warranty certificate.**

10Y MV LDR: 3/20/2019